

# 

# 4/5 Port Solenoid Valve



# Series SYJ3000/5000/7000



### Improved pilot valve


Pilot valve cover is stronger using stainless steel. Mounting thread is also reinforced from size M1.7 to M2.

Flow Characteristics

Series	Flow characteristics								
Series	C [(dm³/s·bar)]	b	Cv	Q[l/mibn(ANR)]					
SYJ3000	0.46	0.36	0.12	122					
SYJ5000	0.83	0.32	0.21	214					
SYJ7000	2.9	0.35	0.74	762					

## Rubber Seal 4/5 Port Solenoid Valve Series SYJ3000/5000/7000

### Variations

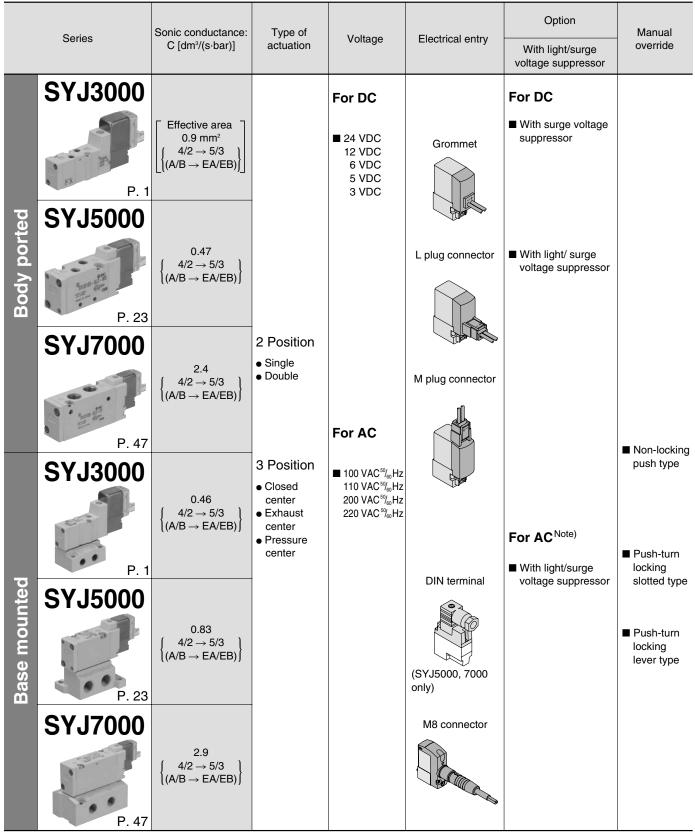


 $\mathcal{T}$  Note) All AC voltage models have built-in surge voltage suppressor.

Front matter 1



### Series SYJ3000/5000/7000

### **Manifold Variations**

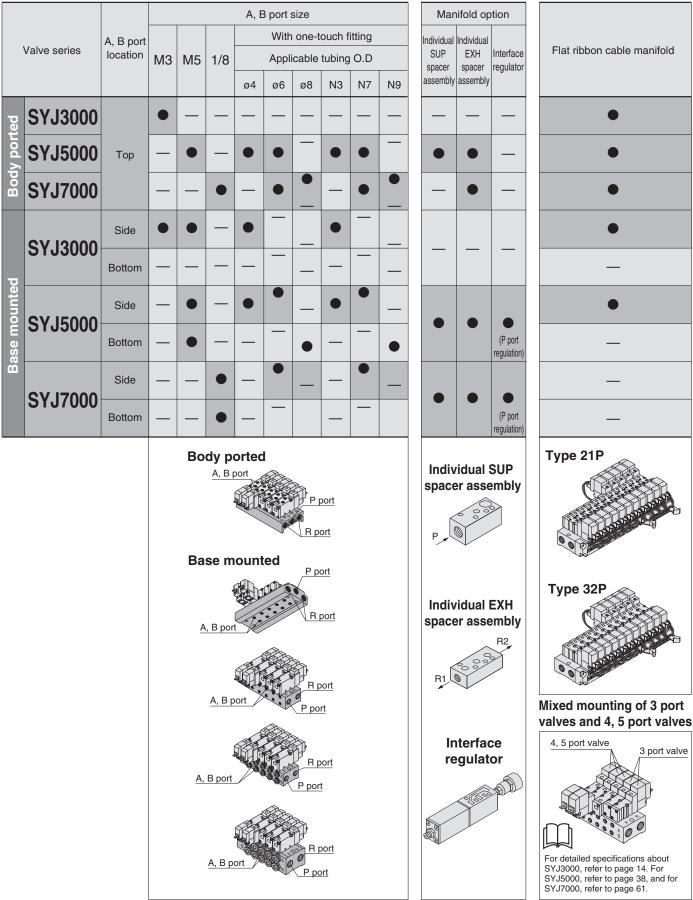


# Rubber Seal ( E LK 4/5 Port Solenoid Valve Series SYJ3000



Body ported



Base mounted

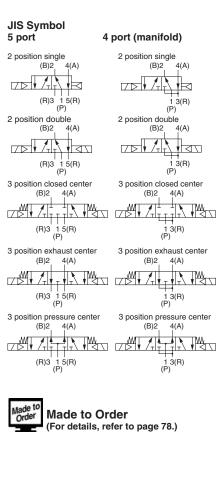

#### Specifications

For details about certified products conforming to international standards, visit us at <u>www.smcworld.com</u>.

Fluid		Air				
	2 position single	0.15 to 0.7				
Operating pressure range (MPa)	2 position double	0.1 to 0.7				
	3 position	0.2 to 0.7				
Ambient and fluid tempera	ture (°C)	-10 to 50 (No freezing. Refer to back page 3.)				
Response time (ms) Note 1)	2 position single, double	15 or less				
(at 0.5 MPa)	3 position	30 or less				
Max. operating	2 position single, double	10				
frequency (Hz)	3 position	3				
Manual override (Manual o	peration)	Non-locking push type, Push-turn locking slotted type, Push-turn locking lever type				
Pilot exhaust method		Individual exhaust for the pilot valve, Common exhaust for the pilot and main valve				
Lubrication		Not required				
Mounting orientation		Unrestricted				
Shock/Vibration resistance	e (m/s <sup>2</sup> ) Note 2)	150/30				
Enclosure		Dust proof (* M8 connector conforms to IP65.)				

voltage suppressor) Note 2) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energised and de-energised states every once for each

Vibration resistance:


condition. (Value in the initial state) e: No malfunction occurred in one sweep test between 45 and 2000 Hz. Test was performed to axis and right angle directions of the main valve when pilot signal is ON and OFF. (Value in the initial state)

#### **Solenoid Specifications**


Electrical entry			Gromet (G), (H), L plug connector (L), M plug connector (M), M8 connector (W)		
Coil rated voltage (V)		DC	24, 12, 6, 5, 3		
Allowable voltage fluctua	tion	10% of rated voltage *			
Power consumption (W)	DC	Standard	0.35 (With light: 0.4)		
Power consumption (w)	DC	With power saving circuit	0.1 (With light only)		
Surge voltage suppresso	r		Diode (Non-polarity type: Valistor)		
Indicator light		LED			
* S, Z and T type (with power saving circuit) should be used within the following allowable voltage fluctuation range due to a voltage drop caused by the internal circuit. S and Z type: 24 VDC: -7% to +10%, 12 VDC: -4% to +10% T type: 24 VDC: -8% to +10%, 12 VDC: -6% to +10%					

### **Bracket Mounting**

① Insert the lower hook of the mounting bracket into the groove on the bottom of the valve as shown.

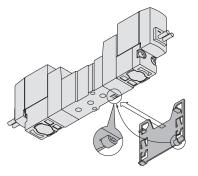

② Press the valve and mounting bracket together until the upper hook of the bracket snaps into place in the groove on top of the valve.

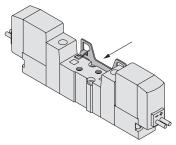

### Flow Characteristics/Weight

				Port	size		Weight (g) '	Note 3, 4)	Effective			Flow	chara	acteristic	S Note 2	)	
Valve r	nodel	Тур	Type of actuation		1, 5, 3 4, 2		L/M plug	M8	area	1-	→4/2 (I	⊃→A/B	5)	4/2→	·5/3 (A	/B→E	A/EB)
				(P, EA, EB) (A, B		Grommet	connector	connector	(mm <sup>2</sup> )	C [dm³/(s·bar)]	b	Cv	Q[//min(ANR)]*	C [dm³/(s·bar)]	b	Cv	Q[d/min(ANR)]*
	SYJ314□	0	Single			62 (36)	63 (37)	67 (41)		0.46	0.36	0.12	122	0.46	0.35	0 10	121
5 port	SYJ324□	2 position	Double			79 (53)	81 (55)	89 (63)		0.40	0.30	0.12	122	0.40	0.35	0.12	121
Base mounted	SYJ334□		Closed center	M5	M5				—	0.47	0.33	0.12	122	0.47	0.31	0.12	120
(with sub-plate)	SYJ344□	3 position	Exhaust center			82 (56)	84 (58)	92 (66)	—	0.36	0.39	0.10	97	0.59 [0.40]	0.43 [0.33]	0.16 [0.11]	164[104]
	SYJ354□		Pressure center					_	0.58 [0.32]	0.42 [0.33]	0.16 [0.080]	160[83]	0.46	0.32	0.11	118	
	SYJ312□	2 position	Single			36	37	41									
	SYJ322□	2 position	Double			53	55	63									
5 port	SYJ332□		Closed center	M3	MЗ				0.9								
Body ported	SYJ342□	3 position	Exhaust center			56	58	66									
	SYJ352□		Pressure center														
Note 1)	SYJ313□	0	Single			36	37	41		1							
4 Port	SYJ323	2 position	Double			53	55	63	1 —								
Base mounted	SYJ333L		Closed center	1/8	M5				—	1							
(For manifold	SYJ343□	3 position	Exhaust center			56	58	66	_	1							
base only)	SYJ353□		Pressure center						—	1							

Note 1) Dedicated for manifold base. For details, refer to page 11.

Note 2) [ ] denotes the normal position. Exhaust center: 4/2  $\rightarrow$  5/3, Pressure center: 1  $\rightarrow$  4/2

Note 3) (): Without sub-plate.

\* These values have been calculated according to ISO6358 and represent the flow rate measured in standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.

### **Cylinder Speed Chart**

#### **Body Ported**

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.

			-	-					
				E	Bore size				
	Average	Series C	J2		Series CM2				
	U U	Pressure	0.5 MPa		Pressure	0.5 MPa			
Series	speed	Load rate	: 50%		Load rate	e: 50%			
	Stroke 60	) mm		Stroke 30	)0 mm				
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	
	800								
	700				Perpendicular, upward actu			ctuation H	
	600					•	•		
	500				— ПО НО	rizontal act	tuation	-	
SYJ3120-M3	400								
•••••	300								
	200								
	100								
	0								

#### **Base Mounted**

				E	Bore size				
Series	Average speed (mm/s)	Series Co Pressure Load rate Stroke 60	0.5 MPa : 50%		Series C Pressure Load rate Stroke 30	0.5 MPa e: 50%			
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	
SYJ3140-M5	800 700 600 500 400 300 200 100 0					rpendiculai rizontal act	r, upward a tuation		

Cylinder is in extending. Speed controller is meter-out, which is directly connected with cylinder and its needle is fully opened.


Average speed of cylinder is obtained by dividing the full stroke time by the stroke. Load factor: ((Load weight x 9.8) /Theoretical force) x 100%

#### Conditions

Bo	ody ported	Series CJ2	Series CM2		
	Tubing bore x Length	ø4 x 1 m			
SYJ3120-M3	Speed controller	AS1301F-04			
	Silencer	AN120-M5			


Bas	e mounted	Series CJ2	Series CM2	
	Tubing bore x Length	ø6 x 1 m		
SYJ3140-M5	Speed controller	AS2001F-06 AS2301F		
	Silencer	AN120-M5		



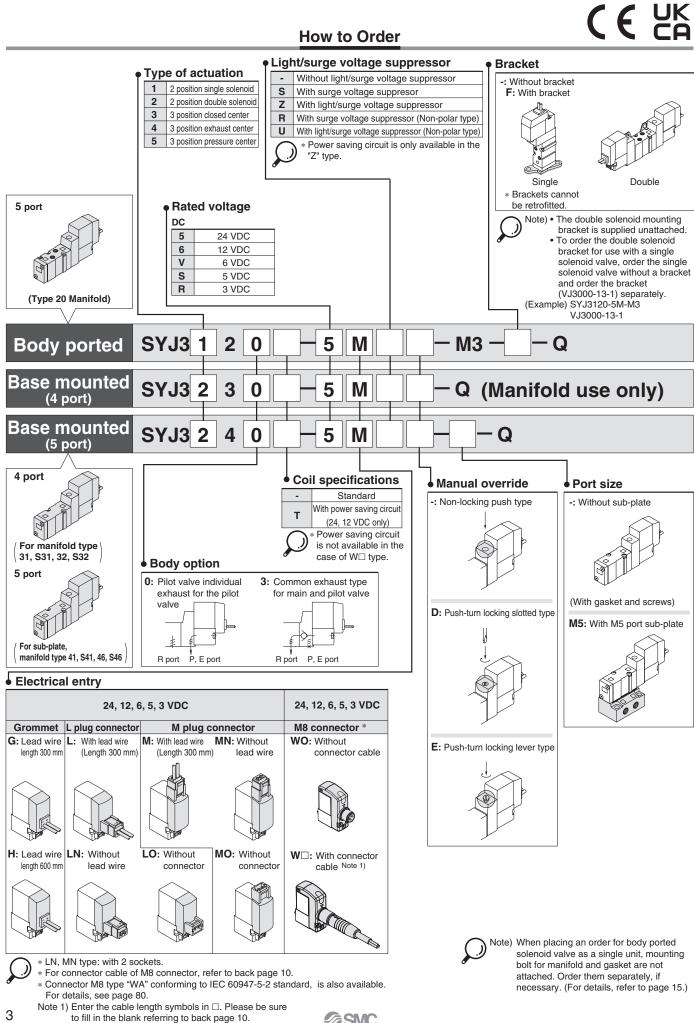

SMC


### Construction

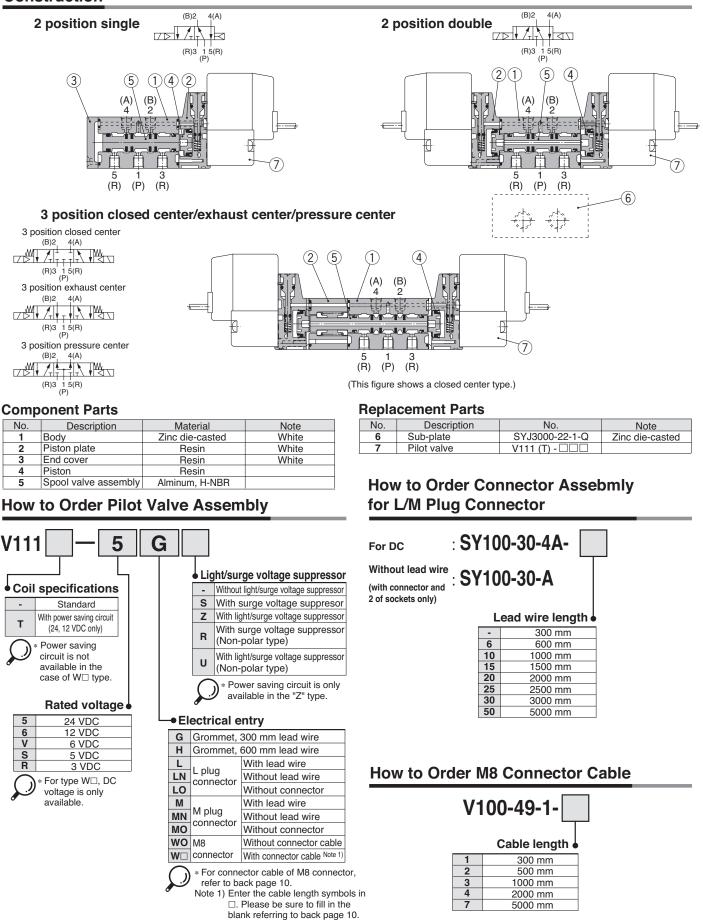

### **2 Position Single**

### Grommet (G), (H): SYJ3120-□<sup>G</sup><sub>H</sub>□□-M3-Q


#### With bracket: SYJ3120-□<sup>G</sup>H□□-M3-F-Q

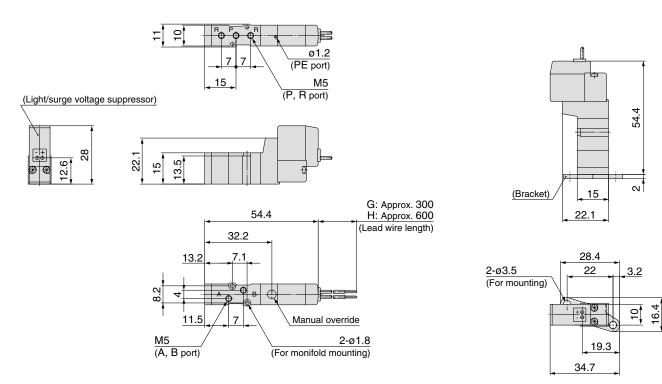



L plug connector (L): SYJ3120-□L□□-M3 (-F)-Q

#### M plug connector (M): SYJ3120-□M□□-M3 (-F)-Q

M8 connector (WO): SYJ3120-□WO□□-M3 (-F)-Q

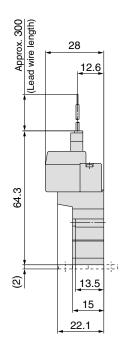


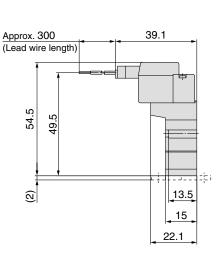

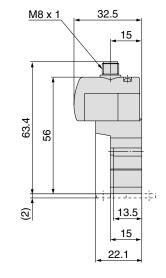


### **2** Position Double


### Grommet (G), (H): SYJ3220-□<sup>G</sup><sub>H</sub>□□-M3 (-F)-Q

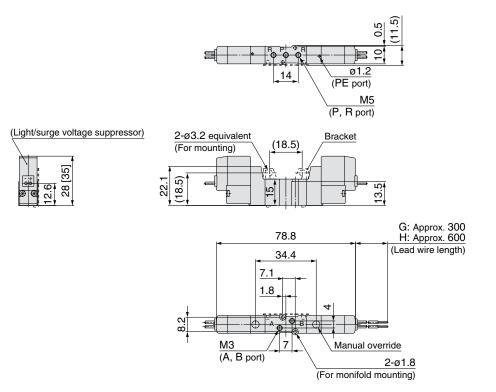


#### L plug connector (L): SYJ3220-□L□□-M3 (-F)-Q

M plug connector (M): SYJ3220-□M□□-M3 (-F)-Q M8 connector (WO): SYJ3220-□WO□□-M3 (-F)-Q

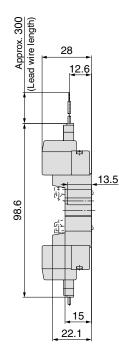


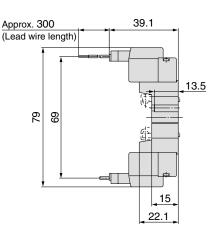


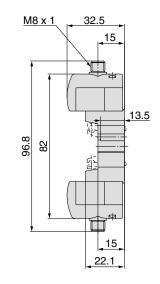

### **3 Position Closed Center/Exhaust Center/Pressure Center**

### Grommet (G), (H): SYJ3<sup>3</sup>/<sub>5</sub>20-□<sup>G</sup><sub>H</sub>□□-M3 (-F)-Q

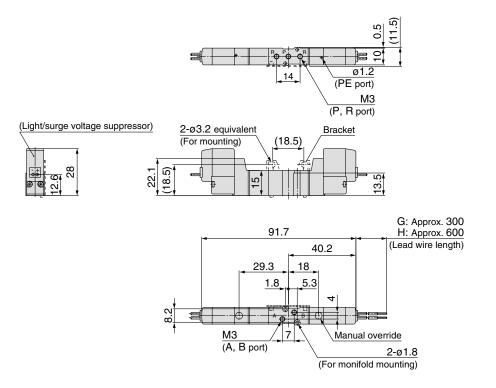

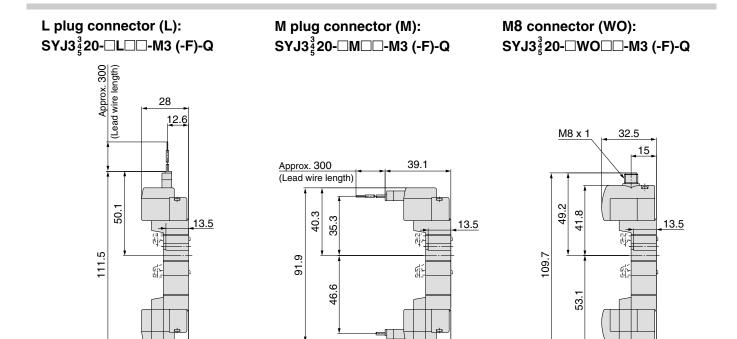

Refer to back page 11 for dimentions with connector cable.

ΤT

\_15

22.1



15

22.1


I

15


22.1


### **2 Position Single**

### Grommet (G), (H): SYJ3140-□<sup>G</sup><sub>H</sub>□□-M5-Q

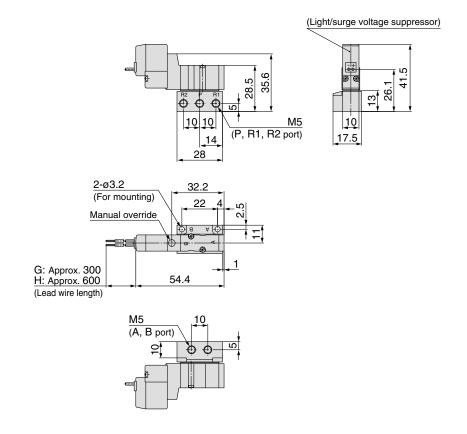


L plug connector (L): M plug connector (M): M8 connector (WO): SYJ3140-□L□□-M5-Q SYJ3140-□M□□-M5-Q SYJ3140-□WO□□-M5-Q

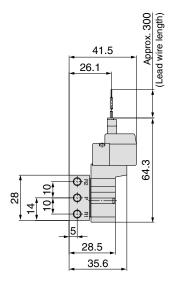


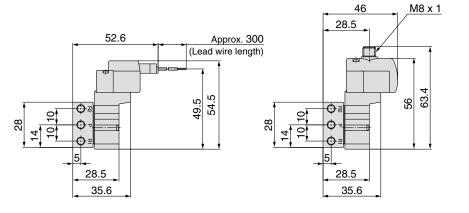



### **2** Position Double

### Grommet (G), (H): SYJ3240-□<sup>G</sup><sub>H</sub>□□-M5-Q

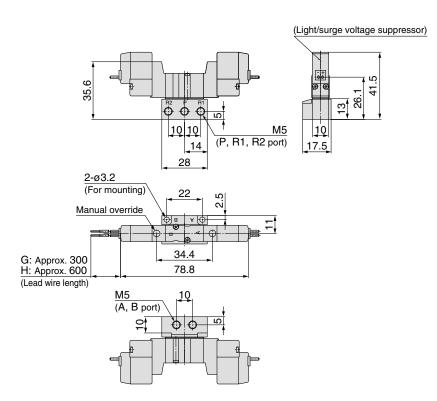

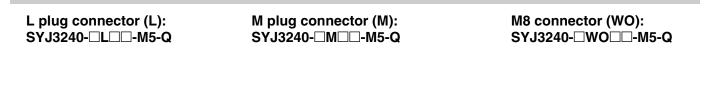


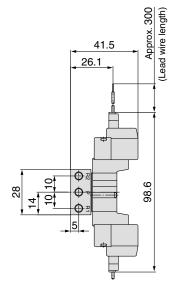


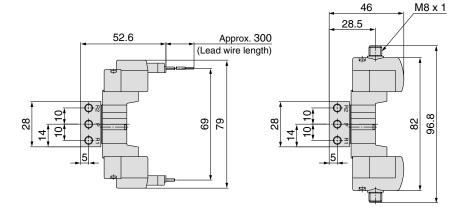

### **3 Position Closed Center/Exhaust Center/Pressure Center**

### Grommet (G), (H): SYJ3 $\frac{3}{4}$ 40- $\Box_{H}^{G}\Box\Box$ -M5-Q

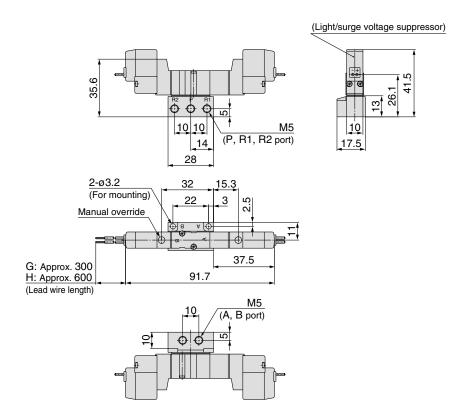

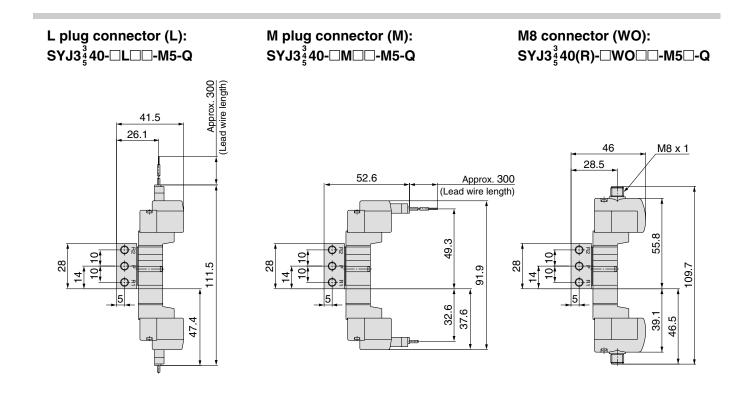

### Series SYJ3000 Manifold Specifications

### Manifold Standard



### **Manifold Specifications**

Model	Model			Type 32, S32	Type 41, S41	Type 46, S46	
Manifold type		Sing	le base/B mo	ount			
P (SUP), R (EXH)	Common SUP/Common EXH Common SUP						
Valve stations	2 to 20 stations						
A, B port	Location	Valve		Ba	se		
Porting specifications	Direction	Тор					
Port size	P, R port	M5		1/8		P: 1/8 R: M5	
	A, B port	N	//3	M5, C4 (One-touch fitting for ø4)			

### **Flow Characteristics**

					Flow characteristics								
			Port	size	$1 \rightarrow 4/2 (P \rightarrow A/B)$						(A/B-	→R)	Effective
Manifold		1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm³/(s·bar)]	b	Cv	Q[ <i>t</i> /min (ANR)]*	C [dm³/(s·bar)]	b	Cv	Q[ <i>t</i> /min (ANR)]*	area (mm²)	
Body ported for internal pilot	Type SS5YJ3-20	SYJ3⊡2⊡	M5	М3	_	-	-	-	-	-	-	-	0.9
	Type SS5YJ3- <sup>31</sup> S31	SYJ3⊡3⊡	M5	M3	-	-	-	-	_	-	-	-	0.9
	Type SS5YJ3-32-M5			M5	0.25	0.19	0.060	60	0.32	0.25	0.077	79	_
	Type SS5YJ3-32-C4	SYJ3⊡3⊡	1/0	C4	0.25	0.18	0.059	59	0.30	0.27	0.075	75	_
	Type SS5YJ3-S32-M5		1/8	M5	0.25	0.26	0.060	62	0.29	0.15	0.062	68	-
	Type SS5YJ3-S32-C4			C4	0.24	0.21	0.057	58	0.27	0.18	0.062	64	_
Base mounted	Type SS5YJ3-41-M5			M5	0.32	0.25	0.081	79	0.33	0.19	0.079	79	-
for internal pilot	Type SS5YJ3-41-C4		1/0	C4	0.32	0.28	0.079	80	0.35	0.24	0.084	86	-
	Type SS5YJ3-S41-M5	SYJ3□4□	1/8	M5	0.33	0.29	0.082	83	0.34	0.17	0.081	80	-
	Type SS5YJ3-S41-C4			C4	0.32	0.27	0.079	80	0.34	0.24	0.084	83	-
	Type SS5YJ3-46-M5			M5	0.20	0.25	0.048	49	0.10	0.12	0.024	23	-
	Type SS5YJ3-46-C4	SV.13 4	1/8	C4	0.21	0.27	0.050	52	0.21	0.13	0.047	48	_
	Type SS5YJ3-S46-M5		M5	M5	0.20	0.25	0.048	49	0.19	0.16	0.024	45	-
	Type SS5YJ3-S46-C4			C4	0.22	0.34	0.057	57	0.10	0.090	0.024	23	-

Note) Value at manifold base mounted, 2 position single operating

#### How to Order Manifold (Example)

Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no. Example:

Example.	
• SS5YJ3-20-03-Q1 set (Manifold base) •	SS5YJ3-S41-03-C4-Q 1 set (Manifold base)
* SYJ3120-5G-M3-Q 2 sets (Valve)	* SYJ3140-5LZ-Q 2 sets (Valve)
* SYJ3000-21-1A-Q 1 set (Blanking plate assembly)	* SYJ3000-21-2A-Q1 set (Balnking plate assembly)

→ The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

### Flat Ribbon Cable Manifold

• Multiple valve wiring is simplified through the use of the flat cable connector.

#### Clean appearance

In the case of a flat ribbon cable type, each valve is wired on the print board of manifold base to allow the external wiring to be piped all together with 26 pins MIL connector.



Type 21F

How to Order Valve

Flat Ribbon	Cable	Manifold	<b>Specifications</b>
-------------	-------	----------	-----------------------

Model		Type 21P	Type 32P
Manifold type		Single bas	e/B mount
P (SUP), R (EXH)		Common SUP,	Common EXH
Valve stations		4 to 12	stations
A, B port	Location	Valve	Base
Porting specifications	Direction	Тор	Side
Port size	P, R port	1/	8
I OIT SIZE	A, B port	M3	M5, C4 (One-touch fitting for Ø4)
Applicable flat ribbo connector	on cable	Socket: 26 pins MIL (MIL-C-	
Internal wiring		In common between +COM ar	nd -COM (Z type: +COM only)
Rated voltage		24, 12	VDC

oltage specification for the wiring unit section conforms to JIS C 0704, Grade 1 or its equivalent.

### **Flow Characteristics**

	Port	size	1→	4/2 (	Flov P→A		acteristics 4/2→5/3	3 (A/E	S→R)	Effective
Manifold	1(P), 5/3(R) Port		C [dm³/(s·bar)]	b	Cv	Q[l/min (ANR)]*	C [dm³/(s⋅bar)]	b	Q[l/min (ANR)]*	area (mm²)
Body ported for internal pilot Type \$\$55YJ3-21P SYJ3□23	1/8	M3	-	-	_	_	_	_	_	0.9
Base mounted Type SS5YJ3-32P-M5 for internal pilot Type SS5YJ3-32P-C4 SYJ3□33	1/8	M5	0.25	0.19	0.060	60	0.32	0.25	79	-
for internal pilot Type SS5YJ3-32P-C4	1/0	C4	0.25	0.18	0.059	59	0.3	0.27	75	-

Note) Value at manifold base mounted, 2 position single operating

\* These values have been calculated according to ISO6358 and represent the flow rate measured in

standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.


#### How to Order Manifold


- SS5YJ3-32P-07-C4-Q·····1 pc. (Manifold base) \* SYJ3000-21-4A-Q·····1 pc. (Blanking plate assembly)
- \* SYJ3133-5LOU-Q ...... 3 pcs. (Valve)
- \* SYJ3233-5LOU-Q ...... 3 pcs. (Valve)
- \* SY3000-37-28A-Q ..... 3 pcs. (Connector assembly)
- \* SY3000-37-29A-Q ..... 3 pcs. (Connector assembly)


The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

### How to Order Connector Assembly

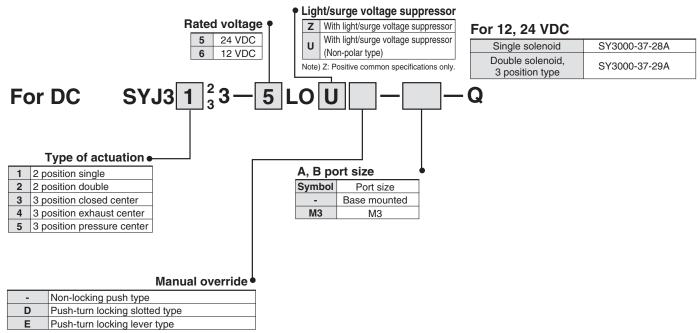

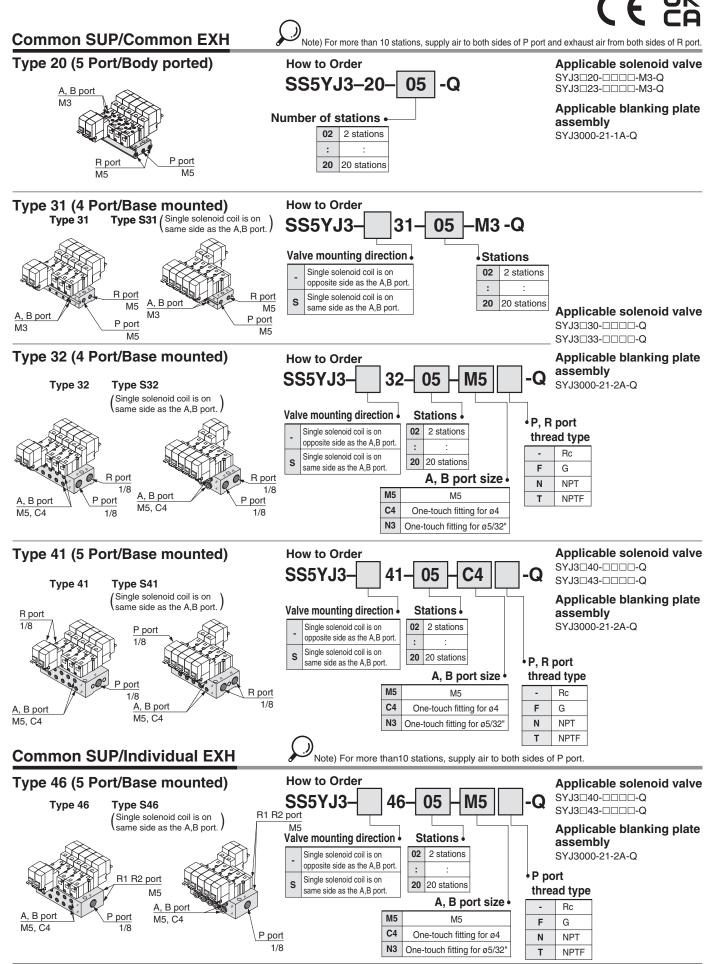

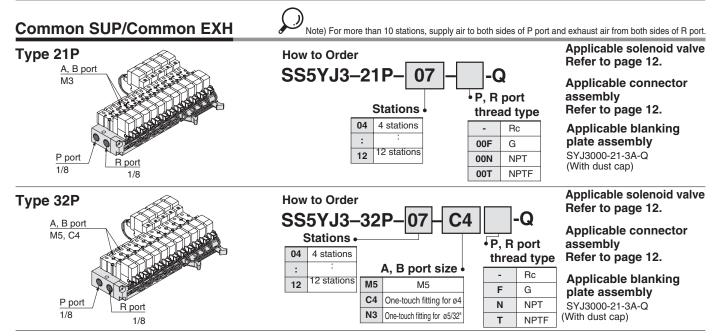

### Mixed Installation of the SYJ300 and the SYJ3000 Valves on the Same Manifold

Series SYJ300 valves can be mounted on the manifolds for Series SYJ3000.

Flat Ribbon Cable Manifold

#### ① SS5YJ3-20, SS5YJ3-21P

The 3 port valve can be used by simply sealing off the unused "R" port with rubber plug SYJ3000-33-1.

#### Applicable solenoid valves:

Series SYJ312, SYJ312M, SYJ322, SYJ322M

#### ② SS5YJ3-31, -S31, SS5YJ3-32, -S32, SS5YJ3-46, -S46, SS5YJ3-32P

The 3 port valve can be used without modification. The A port of the valve will flow out of the B port of the manifold.


Applicable solenoid valves:

Series SYJ314, SYJ314M, SYJ324, SYJ324M


#### 3 SS5YJ3-41, -S41

The 3 port valve can be used on the 4 port manifold by simply sealing off the unused "R" port with rubber plug SYJ3000-33-1. The A port of the valve will flow out of the B port of the manifold. Applicable solenoid valves:

Series SYJ314, SYJ314M, SYJ324, SYJ324M

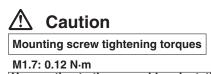


Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.

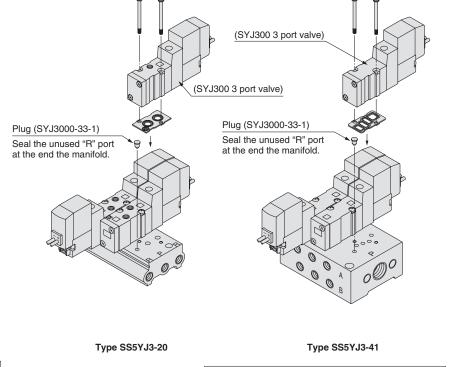



A port of the 3 port valve flows out of the manifold B port.

### Combinations of Solenoid Valve, Manifold Gasket and Manifold Base

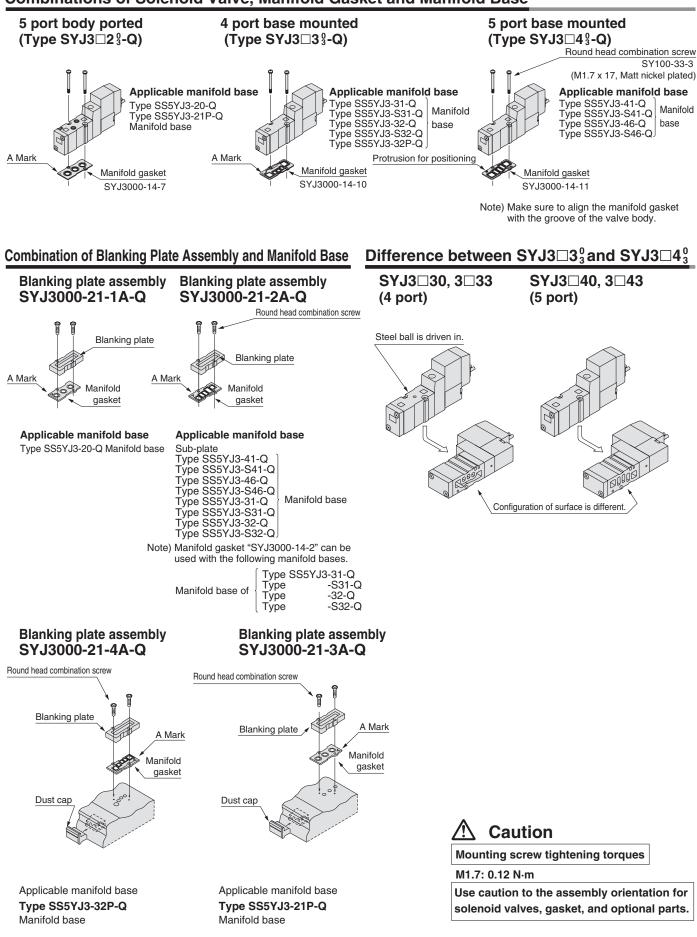

### Type 20 Manifold: Top Ported/SS5YJ3-20-Stations -Q

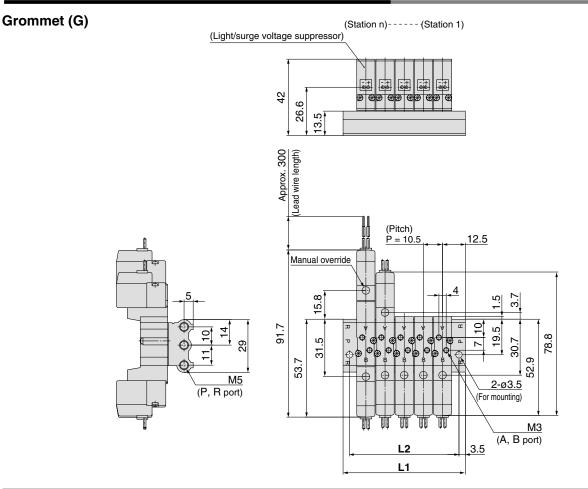


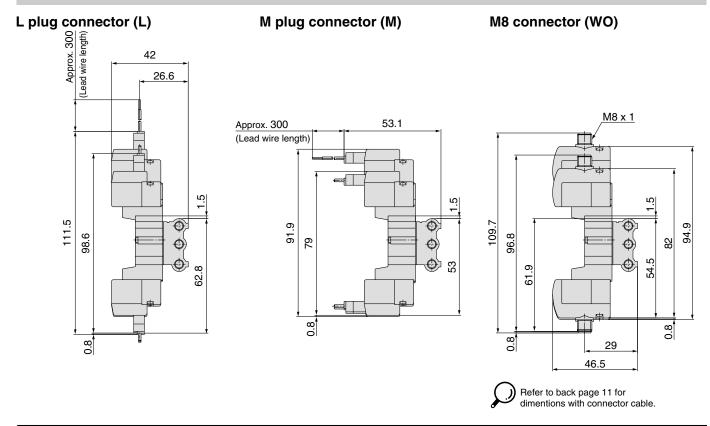


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193	203.5	214	224.5
L2	28.5	39	49.5	60	70.5	81	91.5	102	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5




### Type 31 Manifold: Side Ported/SS5YJ3-31- Stations -M3-Q

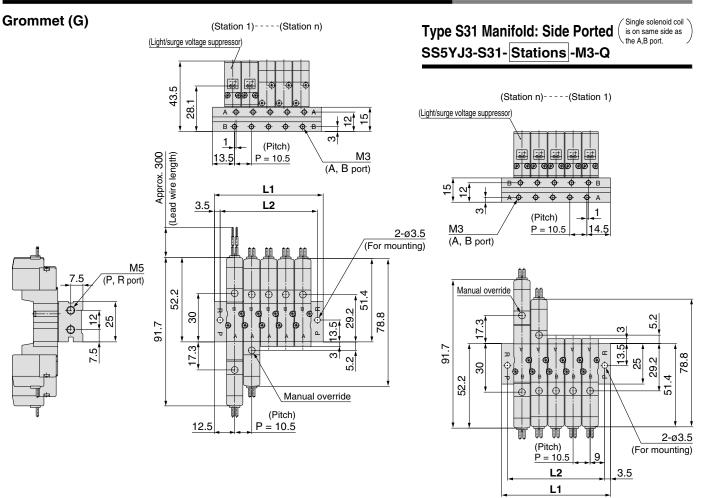


L plug connector (L)

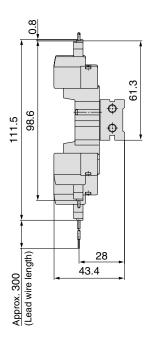


#### M plug connector (M)

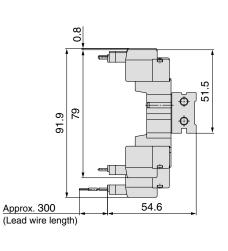

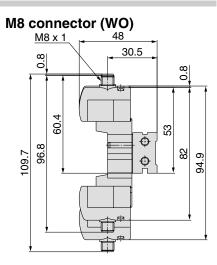

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193	203.5	214	224.5
L2	28.5	39	49.5	60	70.5	81	91.5	102	112.5	123	133.5	144	154.5	165	175.5	186	196.5	207	217.5

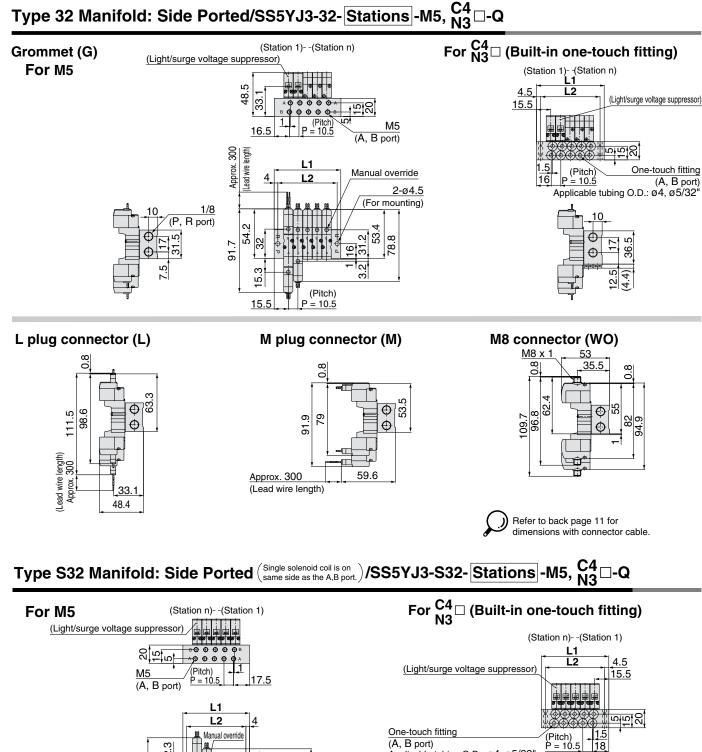

(A, B port) Applicable tubing O.D.: ø4, ø5/32'

_10 ⊕-	17 + (	36.5
<del>ziszi</del> e	12.5	(4.4)

18

### SS5YJ3-32, S32- Stations -M5-Q

2-ø4.5

(For mounting)

ЧŅ

(Pitch) P = 10.5

91.7

57.2

	-																		
Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	41.5	52	62.5	73	83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5
L2	33.5	44	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212	222.5
		_				-	-				-				-				

78.8


3

15.5


#### SS5YJ3-32, S32- Stations -C4-Q

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	42.5	53	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5
L2	33.5	44	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212	222.5
																			·

### Type 41 Manifold: Side Ported/SS5YJ3-41-Stations -M5, C4 D-Q

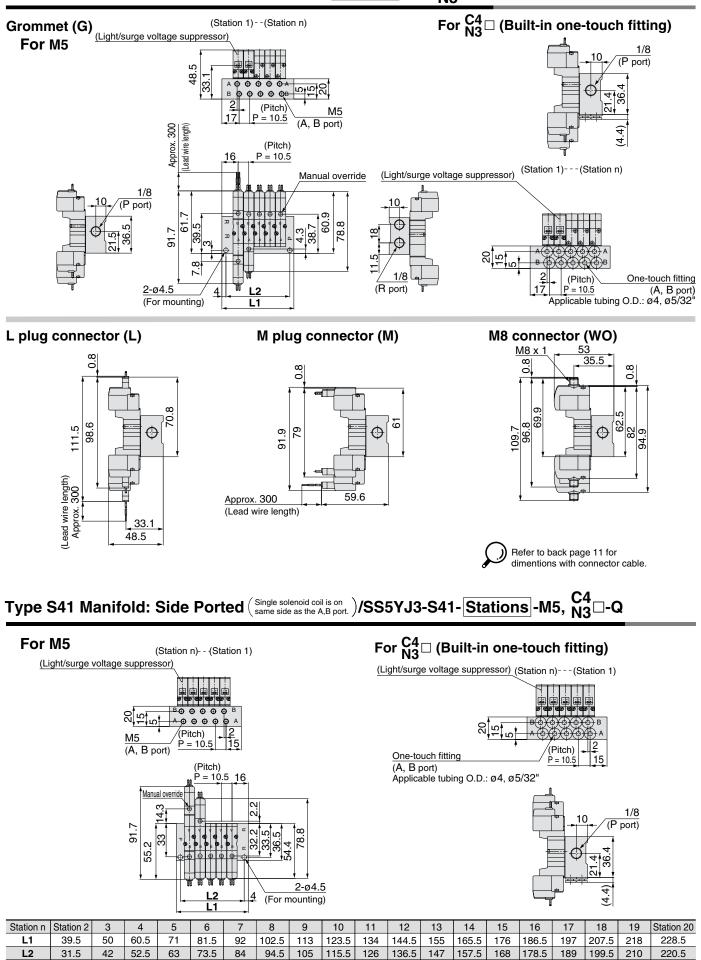





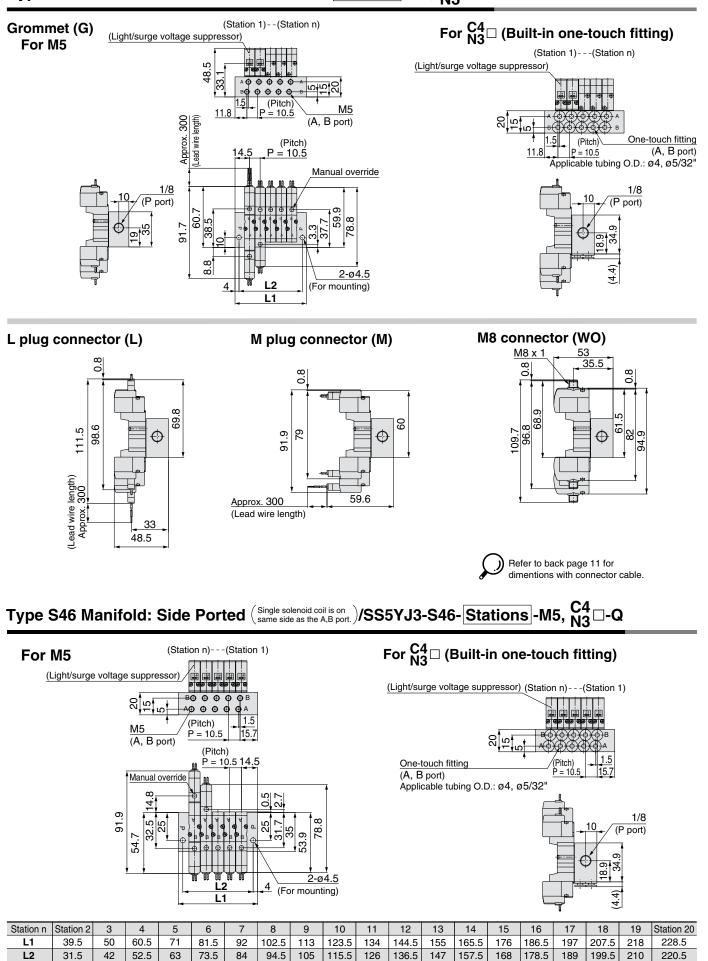

### Type 46 Manifold: Side Ported/SS5YJ3-46-Stations-M5, C4 - Q

### Flat Ribbon Cable Manifold

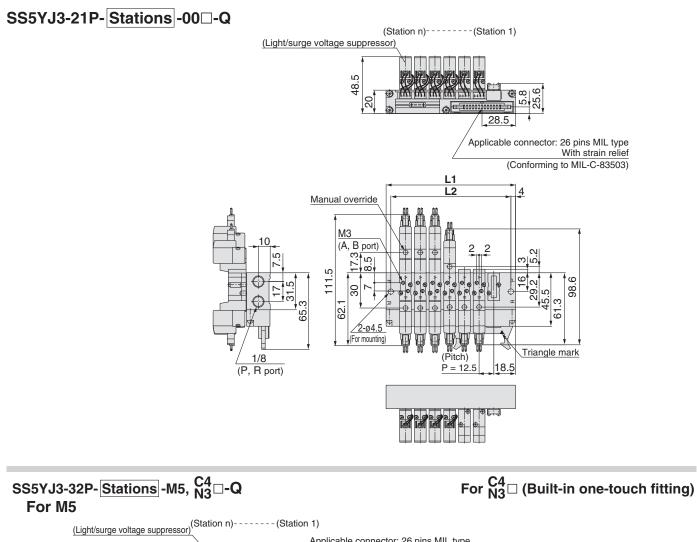

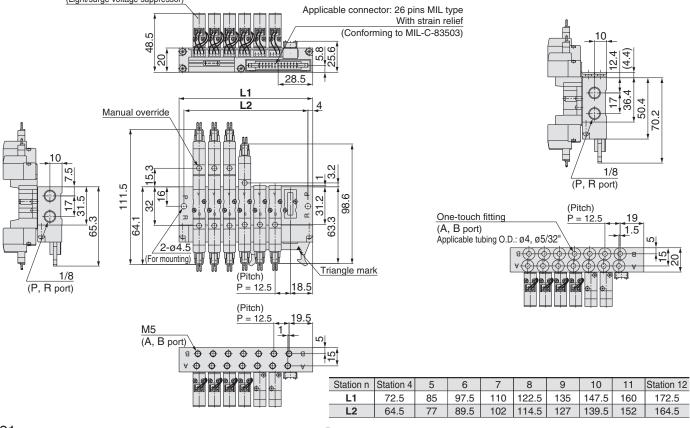


**SMC** 

### **⊘**SMC

### **Rubber Seal 5 Port Solenoid Valve** Series SYJ5000

#### Specifications


For details about certified products conforming to international standards, visit us at www.smcworld.com

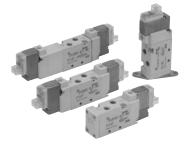

Body ported



```
Base mounted
```

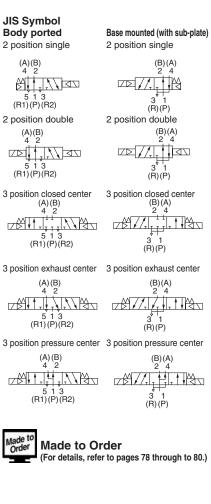

Fluid		Air
Operating processes range	2 position single	0.15 to 0.7
Operating pressure range (MPa)	2 position double	0.1 to 0.7
	3 position	0.15 to 0.7
Ambient and fluid tempera	ture (C)	-10 to 50 (No freezing. Refer to back page 3.)
Response time (ms) Note 1)	2 position single, double	25 or less
(at 0.5 MPa)	3 position	40 or less
Max. operating frequency	2 position single, double	5
(Hz)	3 position	3
Manual override (Manual o	peration)	Non-locking push type, Push-turn locking slotted type, Push-turn locking lever type
Pilot exhaust method		Individual exhaust for the pilot valve, Common exhaust for the pilot and main valve
Lubrication		Not required
Mounting orientation		Unrestricted
Shock/Vibration resistance	(m/s <sup>2</sup> ) Note 2)	150/30
Enclosure		Dust proof (* DIN terminal, M8 connector conforms to IP65.)

Based on IEC60529

Based on IEC60529
 Note 1) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20C, at rated voltage, without surge voltage suppressor)
 Note 2) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energised and de-energised states every once for each condition. (Value in the initial state)
 Vibration resistance: No malfunction occurred in one sweep test between 45 and 2000 Hz. Test was performed to axis and right angle directions of the main valve when pilot signal is ON and OFF. (Value in the initial state)

### Solenoid Specifications

			Grommet (G), (H), L plug	connector (L)
			M plug connector: (M), D	IN terminal (D)
Electrical entry			M8 connector (W)	
			G, H, L, M, W	D
Coil rated voltage (V)	DC		24, 12, 6, 5, 3	24, 12
Con rated voltage (v)	AC 5	0/60 Hz	100, 110	, 200, 220
Allowable voltage fluctuation	n		10% of rate	ed voltage *
Bower consumption (W)	DC	Standard	0.35 {With light: 0.4 (DIN	terminal with light: 0.45)}
Power consumption (W)	DC	With power saving circuit	0.1 (With	light only)
		100 V	-	0.78 (With light: 0.87)
		110 V	_	0.86 (With light: 0.97)
Apparent power VA *	AC	[115 V]		[0.94 (With light: 1.07)]
Apparent power VA	AC	200 V	-	1.15 (With light: 1.30)
		220 V		1.27 (With light: 1.46)
		[230 V]	-	[1.39 (With light: 1.60)]
Surge voltage suppressor			Diode (DIN terminal, Varia	stor when non-polar types)
Indicator light			LED (Neon light when	AC with DIN terminal)

In common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.
 For 115 VDC and 230 VDC, the allowable voltage is -15% to +5% of rated voltage.
 S. Z and T true (with nower sevice) about the sevice of the sev

S, Z and T type (with power saving circuit) should be used within the following allowable voltage fluctuation range due to a voltage drop caused by the internal circuit. S and Z type: 24 VDC: -7% to +10%, 12 VDC: -4% to +10% T type: 24 VDC: -8% to +10%, 12 VDC: -6% to +10%

Built-in Speed Controller

#### SYJ5

- Built-in exhaust flow controls enable simple cylinder speed adjustments.
- When mounted on the manifold, the common exhaust discharges the pilot and main valve exhaust through a common EXH port to enable simple exhausting.

(B)(A) **JIS Symbol**  $|7\rangle$ 



#### How to order valve with built-in speed controller

SYJ5 5 -]-Q Type of Port size actuation Manual override Body Option Rated voltage Light/surge voltage suppressor Lead wire

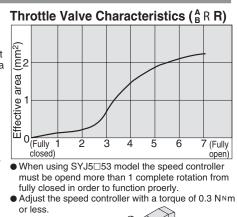


Plate fixing screw

SMC

### Flow Characteristics/Weight

					_						Noto	1)				Note 2	2)
					size					acteristic						ht (g) <sup>Note 2,</sup>	
\	/alve model	Туре	of actuation	1, 5, 3	4, 2		→4/2(					/B→E	, ,	Grommet	L/M plug	DIN	M8
				(P, EA, EB)	(A, B)	C [dm³/(s·bar)]	b	Cv	Q[d/min(ANR)]*	C [dm³/(s·bar)]	b	Cv	Q[d/min(ANR)]*	Cionnie	connector	terminal	connector
		2 position	Single			0.47	0.41	0.13	129	0.47	0.41	0.13	129	46	47	68	51
		2 position	Double			0.47	0.41	0.13		0.47	0.41	0.13	123	64	66	108	74
	SYJ5□20-□-M5		Closed center	M5	M5 x 0.8	0.49	0.44	0.13	137	0.44	0.40	0.12	120				
		3 position	Exhaust center			0.46	0.37	0.12	123	0.47 [0.39]	0.43 [0.35]	0.13 [0.10]	131 [102]	75	77	119	85
			Pressure center			0.49 [0.39]	0.51 [0.38]	0.14 [0.10]	145 [105]	0.45	0.42	0.12	124				
ğ		2 position	Single			0.69	0.39	0.18	186	0.44	0.39	0.12	119	53	54	75	58
ported		2 position	Double		C4	0.05	0.39	0.10	100	0.44	0.39	0.12	119	71	73	115	81
ă	SYJ5□20-□-C4		Closed center	M5	(One-touch	0.69	0.40	0.19	188	0.43	0.40	0.12	117				
Body		3 position	Exhaust center		fitting for ø4)	0.56	0.40	0.15	152	0.41 [0.41]	0.37 [0.37]	0.10 [0.11]	109 [109]	82	84	126	72
ı س			Pressure center			0.57 [0.41]	0.4 [0.37]	0.15 [0.10]	155 [109]	0.41	0.37	0.10	109				
		2 position	Single			0.70	0.36	0.19	185	0.47	0.40	0.12	128	53	54	75	58
		2 posicion	Double		C6	0.70	0.00	0.13	105	0.47	0.40	0.12	120	71	73	115	81
	SYJ5□20-□-C6		Closed center	M5	(One-touch	0.72	0.37	0.19	192	0.44	0.34	0.12	115				
		3 position	Exhaust center		fitting for ø6)	0.67	0.54	0.19	204	0.41 [0.41]	0.38 [0.38]	0.11 [0.11]	110 [110]	82	84	126	92
			Pressure center			0.82 [0.44]	0.41 [0.39]	0.23 [0.12]	225 [119]	0.41	0.36	0.11	108				
ed		2 position	Single			0.79	0.21	0.19	190	0.83	0.32	0.21	214	80 (49)	81 (47)	102 (68)	51
- Iu		r hosinoli	Double			0.75	-						217	98 (64)	100 (66)	142 (108)	74
mounted	SYJ5⊡40-⊡-01		Closed center	1/8	1/8	0.80	0.28	0.18	201	0.86	0.34	0.20	224				
se		3 position	Exhaust center			0.71	0.26	0.18	176				270 [168]	109 (75)	111 (77)	153 (119)	85
Ba			Pressure center			0.99 [0.47]	0.29 [0.38]	0.24 [0.12]	250 [126]	0.72	0.38	0.18	193				

Note 1) []: denotes the normal position. Exhaust center:  $4/2 \rightarrow 5/3$ , Pressure center:  $1 \rightarrow 4/2$ Note 2) ( ): Without sub-plate. Note 3) For DC voltages. For AC voltages add 3 g to the weight of the single solenoid and 6 g to the weight of the double solenoid and 3 position types. .) \* These values have been calculated according to ISO6358 and represent the flow rate measured in standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.

### Cylinder Speed Chart

Dedy Devited

Use as a guide for selection. Please confirm the actual conditions with SMC

Body Port	ea			Sizin	g Program.			
					Bore size			
		Series C	J2		Series C	M2		
<b>.</b> .	Average speed	Pressure (	0.5 MPa		Pressure	0.5 MPa		
Series	(mm/s)	Load rate:			Load rate:	: 50%		
	(	Stroke 60	mm		Stroke 30	0 mm		
		ø6	ø10	ø16	ø20	ø25	ø32	ø40
	800							1 1 1
	700					<u>                                     </u>	Perpendicular,	upward actuation
	600					<u>├</u> ───┤Г	Horizontal actu	ation
	500					╞──┌┐╚		
SYJ5120-M5								
	300							
	200							
	100 0							
	0							

#### **Base Mounted**


							Bore	size					
		Series C	J2		Series	CM2			Series M	B/CA2			
	Average speed	Pressure (	0.5 MPa		Pressure	0.5 MPa			Pressure	0.5 MPa			
Series		Load rate:			Load rate	e: 50%			Load rate	e: 50%			
	(	Stroke 60	mm		Stroke 3	00 mm			Stroke 500	) mm			
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	ø40	ø50	ø63	ø80	ø100
	800												
	700										erpendicula	ar, upward	actuation⊢
	600					-					•	•	H
	500					+ $ -$					orizontal ad	luation	
SYJ5140-01	400												
	300									_			
	200												
	100												
	0												

Cylinder is in extending. Speed controller is meter-out, which is directly connected with cylinder and its needle is fully opened.
 Average speed of cylinder is obtained by dividing the full stroke time by the stroke.
 Load factor: ( (Load weight x 9.8) /Theoretical force) x 100%

#### Conditions

	Body ported	Series CJ2	Series CM2	Series MB/CA2
	Tubing bore x Length	ø4 x 1 m	ø6 x 1 m	ø8 x 1 m
SYJ5120-M5	Speed controller	AS1301F-04	AS3301F-06	AS3301F-08
	Silencer	AN120-M5	AN11	10-01


Base mounted		Series CJ2	Series CM2	Series MB/CA2
	Tubing bore x Length	ø4 x 1 m	ø6 x	1 m
SYJ5140-01	Speed controller	AS2301F-04	AS300	1F-06
	Silencer	AN101-01	AN10	01-01

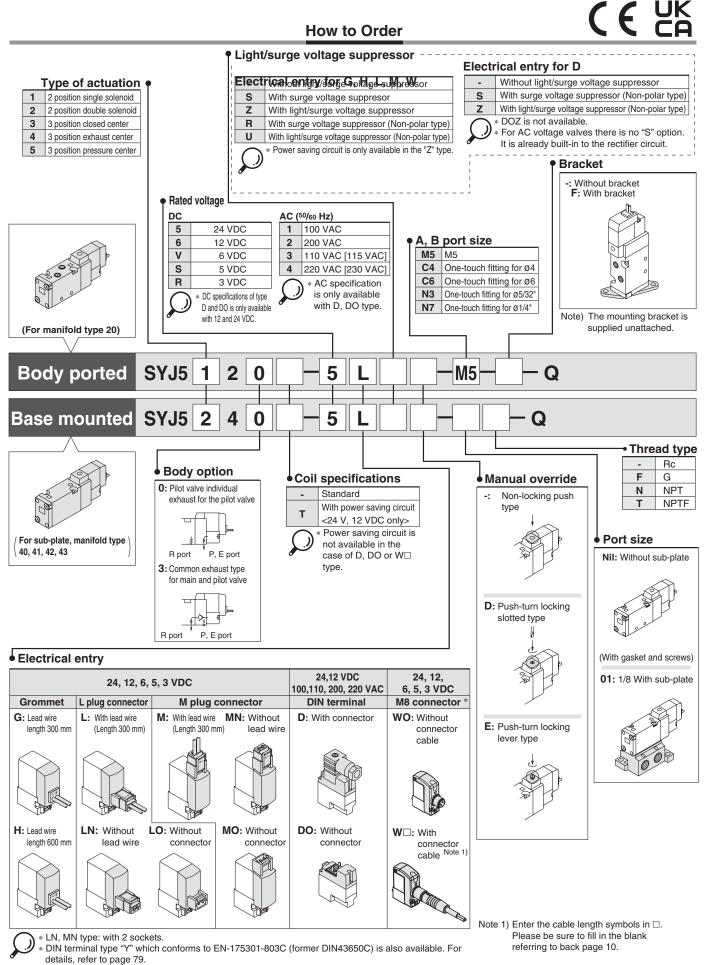


- \* For connector cable of M8 connector, refer to back page 10.
- \* Connector M8 type "WA" conforming to IEC 60947-5-2 standard, is also available. For details, see page 80.



### Construction

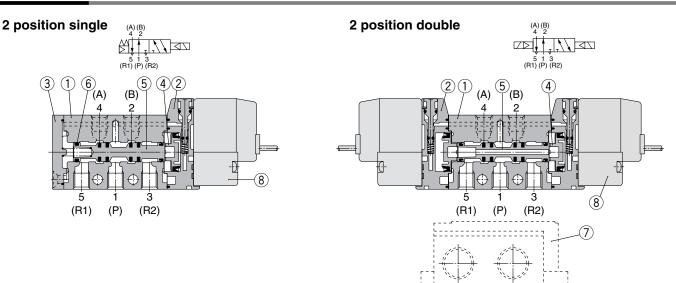

#### 3 position closed center/exhaust center/pressure center

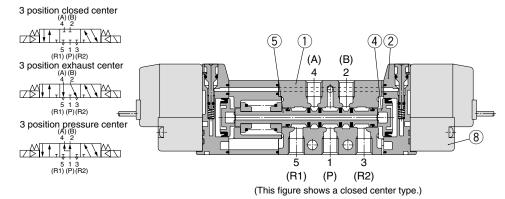


#### **Component Parts**

No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Piston plate	Resin	White
3	End cover	Resin	White
4	Piston	Resin	_
5	Spool valve assembly	Aluminum, H-NBR	_
6	Spool spring	Stainless steel	—


#### **Replacement Parts**

No.	Description	No.	Note
7	Sub-plate	SYJ5000-22-1-Q	Aluminum die-casted
8	Pilot valve	V111(T)-□□□	
_	Bracket assembly	SYJ5000-13-3A	

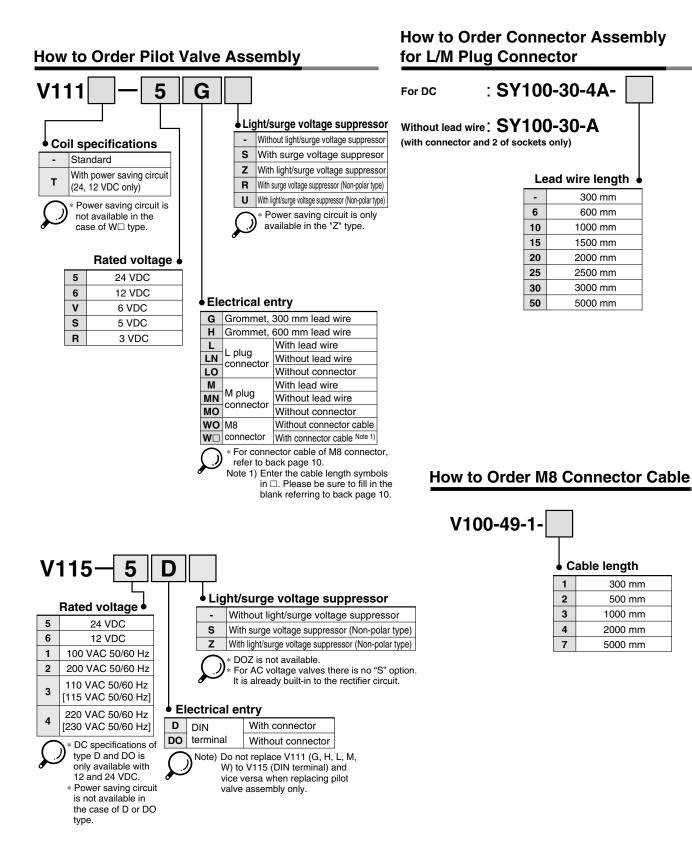


SMC \$

### **2** Position Single

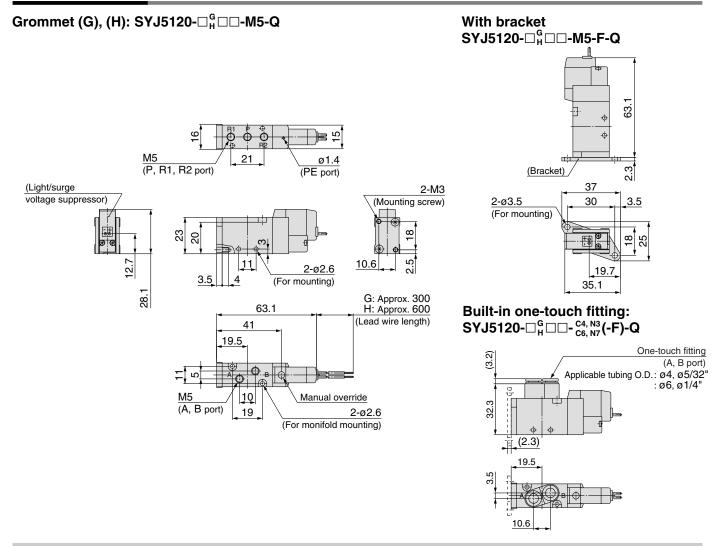

L plug connector (L): M plug connector (M): DIN terminal (D): M8 connector (WO): SYJ5120-□L□□-M5(-F)-Q SYJ5120-□D□□-M5(-F)-Q SYJ5120-□WO□-M5(-F)-Q

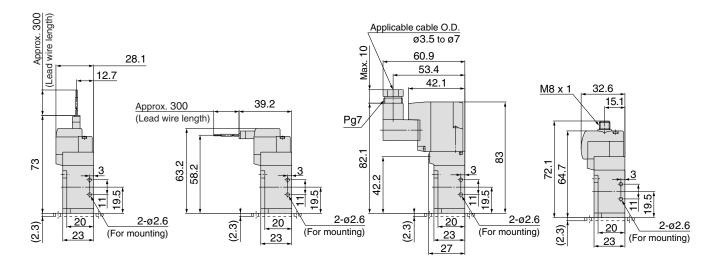





### **2** Position Double

Grommet (G), (H): SYJ5220-□<sup>G</sup><sub>H</sub>□□-M5-Q

### Built-in one-touch fitting: SYJ5220- $\Box_{H}^{G}\Box\Box$ -C4, N3-Q




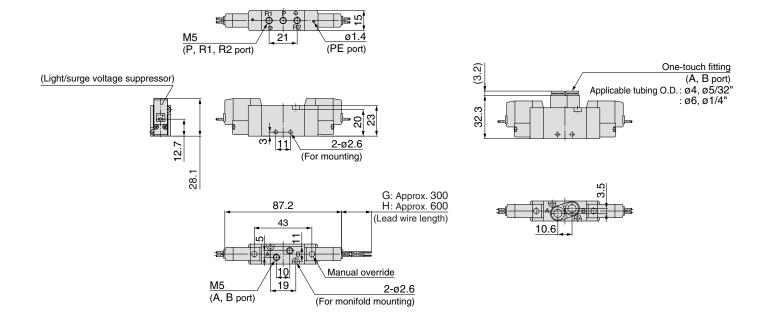

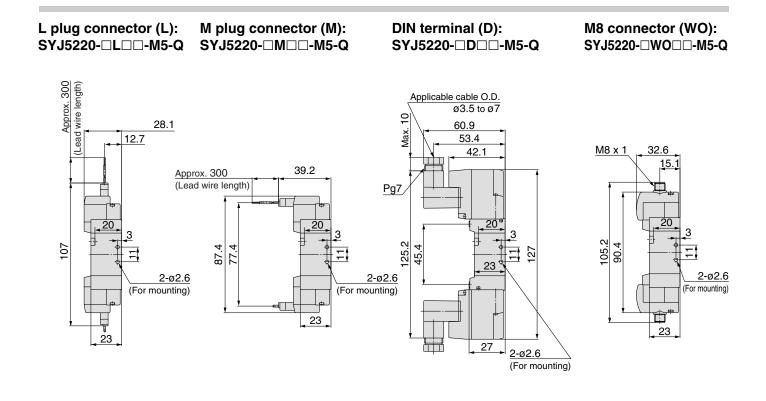

### **3 Position Closed Center/Exhaust Center/Pressure Center**

#### Grommet (G), (H): SYJ5 $\frac{3}{5}$ 20- $\Box_{H}^{G}$ Built-in one-touch fitting: SYJ5 $\frac{3}{5}$ 20- $\Box_{H}^{G}\Box\Box$ - $\frac{C4, N3}{C6, N7}$ -Q <u>}</u>≡ ₽ ø1.4 M5 21 (PE port) (P, R1, R2 port) (3.2) One-touch fitting (A, B port) Applicable tubing O.D. : 04, 05/32" . 06, 01/4" (Light/surge voltage suppressor) ო 32. g ĉ 12.7 2-ø2.6 11 (For mounting) 44.2 [46.4] S 28 ė G: Approx. 300 103.2 8 °₽₽₽ H: Approx. 600 Ф 44.2 (Lead wire length) 10.6 22.1 36.9 ß T BH ٩Ø 10 19 M5 Manual override (A, B port) 2-ø2.6 (For monifold mounting)

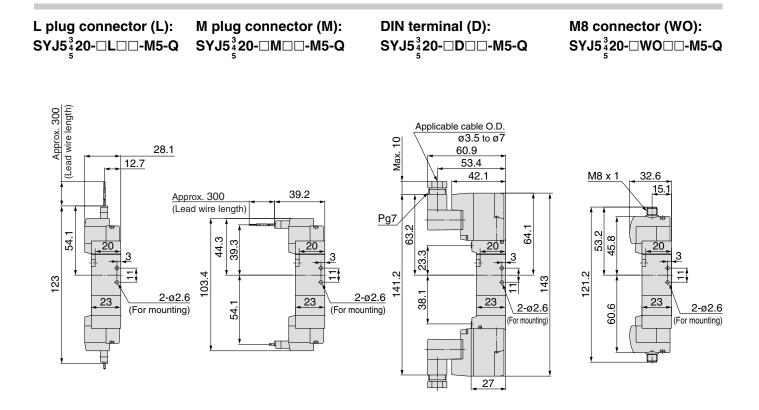





### 2 Position Single


### Grommet (G), (H): SYJ5140-□<sup>G</sup><sub>H</sub>□□-01□-Q


### Built-in speed controller: SYJ5150- $\Box_{H}^{G}\Box\Box$ -01 $\Box$ -Q

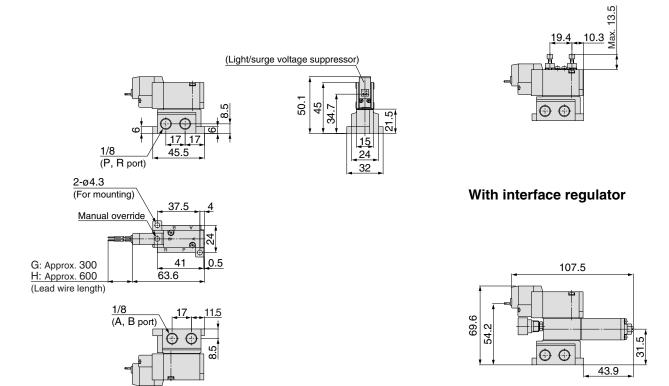

#### L plug connector (L): SYJ5140- $\Box$ L $\Box$ -01 $\Box$ -Q M plug connector (M): SYJ5140- $\Box$ L $\Box$ -01 $\Box$ -Q DIN terminal (D): SYJ5140- $\Box$ D $\Box$ -01 $\Box$ -Q M8 connector (WO): SYJ5140- $\Box$ O $\Box$ -01 $\Box$ -Q Applicable cable O.D. $\sigma 3.5 \text{ to } \sigma 7$ $\sigma 7$ $f = \frac{82.9}{75.4}$

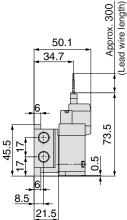

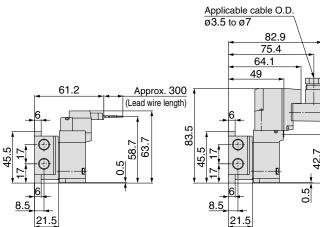

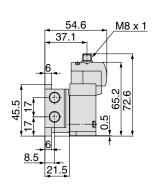


Max.

ശ

82


Pg7

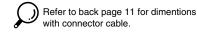



### **2** Position Double

### Grommet (G), (H): SYJ5240-□<sup>G</sup><sub>H</sub>□□-01□-Q

### Built-in speed controller: SYJ5250- $\Box_{H}^{G}$ --01--Q

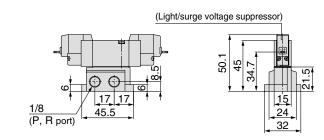


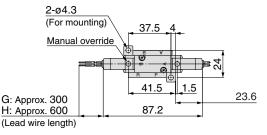

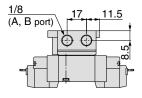

13.5 Max. 19.4 10.3 © ©

With interface regulator

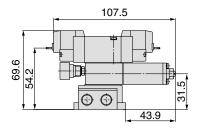



L plug connector (L):


M plug connector (M): SYJ5240-□L□□-01□-Q SYJ5240-□M□□-01□-Q

#### DIN terminal (D): SYJ5240-DD-01D-Q

M8 connector (WO): SYJ5240- WO - 01 - Q

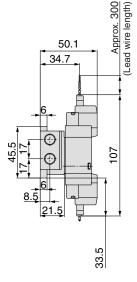

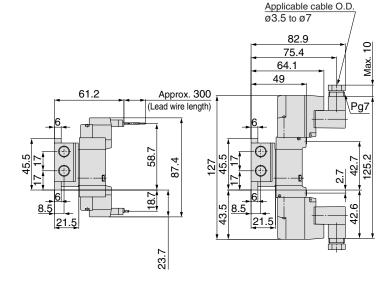


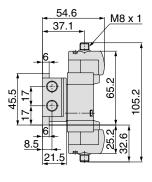


### **3 Position Closed Center/Exhaust Center/Pressure Center**

Grommet (G), (H): SYJ5<sup>3</sup>/<sub>5</sub>40-□<sup>G</sup><sub>H</sub>□□-01□-Q


#### Built-in speed controller: SYJ5 $\frac{3}{4}$ 50- $\Box_{H}^{G}$ $\Box$ -01 $\Box$ -Q

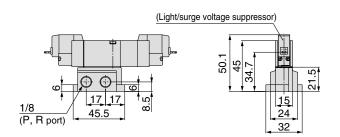


2

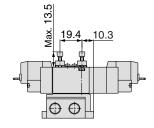


With interface regulator

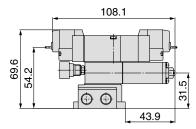

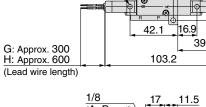


2-ø4.3 (For mounting)

Manual override

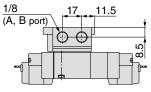

37.5

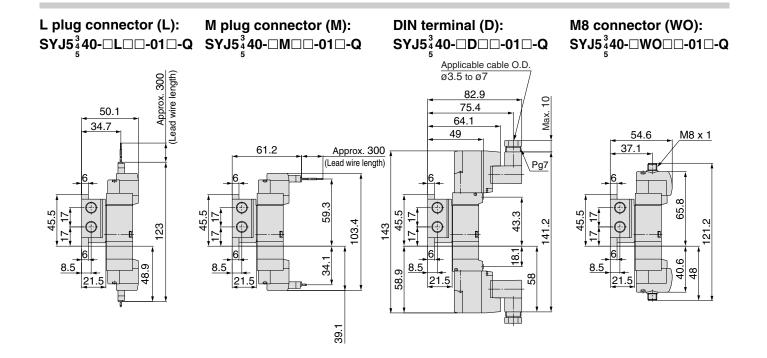



# Series SYJ5000 Manifold Specifications

#### **Manifold Standard**



## **Manifold Specifications**

Mode	I	Type 20	Type 40	Type 41	Type 42	Type 43					
Manifold type			Sing	le base/B mo	ount						
P (SUP), R (EXH)			Common	SUP, Comm	non EXH						
Valve stations			2 to 20 stations								
A, B port	Location	Valve	Base		Base						
Porting specifications	Direction	Тор	Bottom		Side						
	P, R port		1/8		1/4	1/8					
Port size	A, B port	M5, C4 (One-touch fitting for o4) C6 (One-touch fitting for o6)			1/8, C6 (One-touch fitting for ø6)	C4 (One-touch fitting for ø4)					

### **Flow Characteristics**

			Dor	size			Fl	ow char	acteris	tics		
	Manifold		Pon	Size	1	→4/2	(P→A	/B)	4/	2→5/	3 (A/E	3→R)
	Marinolo		1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm³/(s·bar)]	b	Cv	Q[I/min(ANR)]*	C [dm³/(s·bar)]	b	Cv	Q[l/min(ANR)]*
Body ported			1/8	M5	0.46	0.39	0.12	124		0.32	0.19	193
Body ported for internal pilot	Type SS5YJ5-20	SYJ5020	1/8	C4	0.62	0.33	0.16	161	0.83	0.27	0.20 207	207
			1/8	C6	0.79	0.36	0.21	209	0.91	0.36	0.24	241
	Type SS5YJ5-40		1/8	M5	0.55	0.35	0.15	144	0.64	0.26	0.16	159
Base mounted	Type SS5YJ5-41		1/8	M5	0.59	0.35	0.16	155	0.68	0.23	0.17	166
	Type SS5YJ5-42-01	SYJ5040	1/4	1/8	0.74	0.22	0.18	179	0.82	0.31	0.21	210
for internal pilot	Type SS5YJ5-42-C6		1/4	C6	0.71	0.24	0.17	174	0.8	0.29	0.20	202
	Type SS5YJ5-43		1/8	C4	0.55	0.29	0.14	139	0.74	0.32	0.19	191



Note) Value at manifold base mounted, 2 position single operating

\* These values have been calculated according to ISO6358 and represent the flow rate measured in

standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.

#### How to Order Manifold (Example)

Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no.

Example. 333133-20-03-Q 1 pc.	(Marinold Dase)
* SYJ5120-5G-M5-Q 2 pcs	. (Valve)
* SYJ5000-21-4A-Q 1 pc.	(Blanking plate assembly)
SS5YJ5-43-03-C4-Q 1 pc.	(Manifold base)
* SYJ5140-5LZ-Q 1 pc.	(Valve)
* SYJ5240-5LZ-Q 1 pc.	(Valve)
<u>*</u> SYJ5000-21-4A-Q 1 pc.	(Blanking plate assembly)
➤ The asterisk denotes the symbol f	or assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.



## Flat Ribbon Cable Manifold

#### Multiple valve wiring is simplified through the use of the flat cable connector.

#### Clean appearance

In the case of a flat ribbon cable type, each valve is wired on the print board of manifold base to allow the external wiring to be piped all together with 26 pins MIL connector.



## Flat Ribbon Cable Manifold Specifications

Model		Type 20	Type 41P	Type 43P					
Manifold type			Single base/B mount						
P (SUP), R (EXH)		Co	mmon SUP, Common E	ХН					
Valve stations			3 to 12 stations						
A, B port	Location	Valve Base							
Porting specifications	Direction	Тор	Side						
	P, R port	1/8	1,	/8					
Port size	A, B port	M5, C4 (One-touch fitting for ø4) C6 (One-touch fitting for ø6)	M5	C4 (One-touch fitting for ø4)					
Applicable flat ribb connector	on cable	Socket: 26 pins MIL type with strain relief (MIL-C-83503)							
Internal wiring		In common between +COM and -COM (Z type: +COM only).							
Rated voltage			24, 12 VDC						

Note) The withstand voltage specification for the wiring unit section conforms to JIS C 0704, Grade 1 or its equivalent.

## Flow Characteristics

			Dort	size			F	low char	acteris	tics		
	Manifold		For	size	1	→4/2	? (P→	A/B)	4/	2→5/	′3 (A/	B→R)
	Manifold		1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm³/(s·bar)]	b	Cv	Q[I/min(ANR)]*	C [dm³/(s·bar)]	b	Cv	Q[I/min(ANR)]*
Body ported			1/8	M5	0.46	0.39	0.12	124	0.75	0.32	0.19	193
for internal pilot		SYJ5□23	1/8	C4	0.62	0.33	0.16	161	0.83	0.27	0.20	207
			1/8	C6	0.79	0.36	00 00	0.91	0.36	0.24	241	
Base mounted	Type SS5YJ5-41P	SYJ5□43	1/8	M5	0.59	0.35	0.16	155	0.68	0.23	0.17	166
for internal pilot	Type SS5YJ5-43P	5105045	1/8	C4	0.55	0.29	0.14	139	0.74	0.32	0.19	191
Note)	/alua at manifo	ld baco mo	untod 2	nocition	cinalo o	norati	na					

Note) Value at manifold base mounted, 2 position single operating \* These values have been calculated according to ISO6358 and represent the flow rate measured in standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.


#### How to Order Manifold (Example)

, ,	ifying the valves and blanking plate assembly to be mounted on the manifold along Id base model no.
Example:	SS5V 15-11D-07-C1-0 1 pc (Manifold base)

Example.	<b>SSSTJS-4TP-07-C4-Q</b> Tpc. (Manifold base)
	* SYJ5143-5LOU-Q
	* SYJ5243-5LOU-Q
	* SYJ5000-21-8A-Q 1 pc. (Blanking plate assembly)
	* SY3000-37-28A-Q
	SY3000-37-29A-Q
	The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

#### How to Order Valve

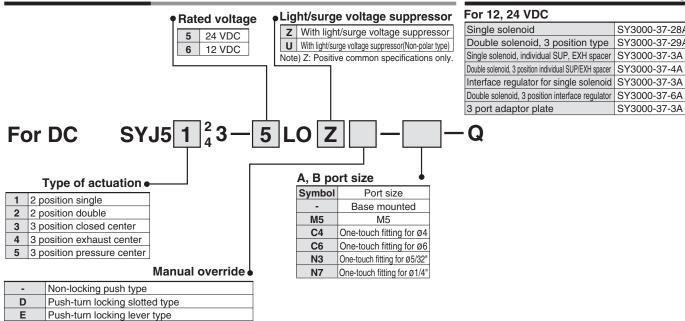

#### How to Order Connector Assembly

SY3000-37-28A


SY3000-37-29A


SY3000-37-4A SY3000-37-3A

SY3000-37-3A

**SMC** 

35

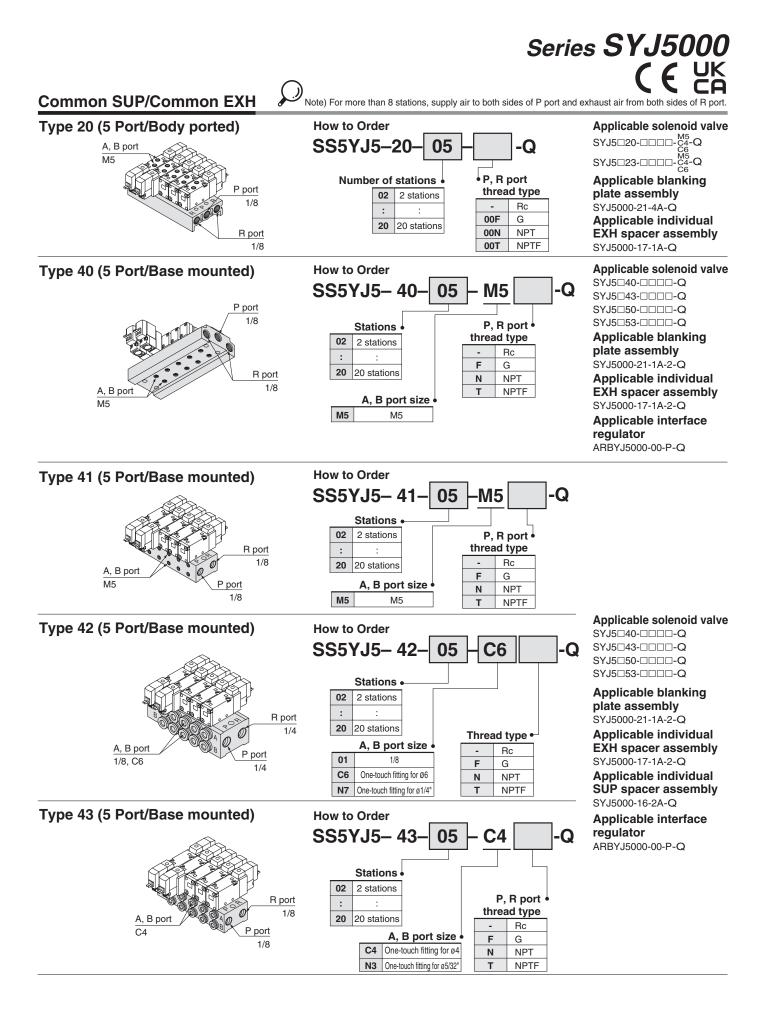

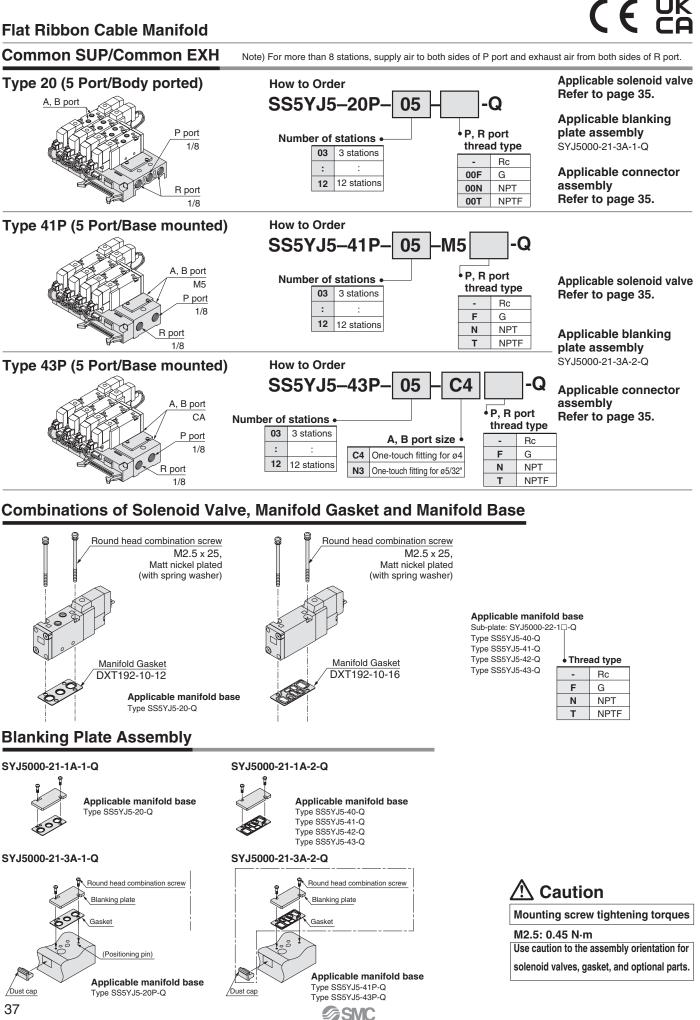

Interface Regulator (P port regulation) Spacer type regulating valve on manifold block

can regulate the pressure to the valve

ARBYJ5000-00-P-Q


individually

## Mix Installation of the SYJ500 and the SYJ5000 Valves on the Same Manifold

- Use of an adapter plate makes it possible to mount Series SYJ500 on the manifold bases of series SYJ5000.
- When mounting the SYJ500 valve on the SYJ5000 manifold, the SYJ500 solenoid must be posi-
- tioned on the same side of the manifold as a single solenoid SYJ500. (Refer to the figure below.) • For base mounted style, the A port of the 3 port valve flows out the B port of manifold base.

## Adapter Plate Assembly


Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.

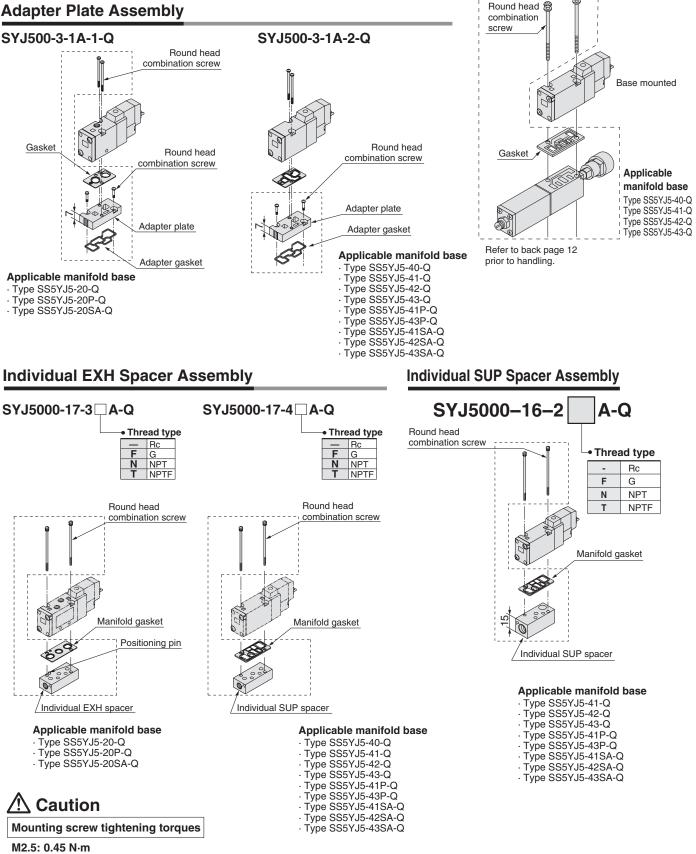

SMC

## Type 20: Top Ported/SS5YJ5-20- Stations -00 -Q

#### Grommet (G)

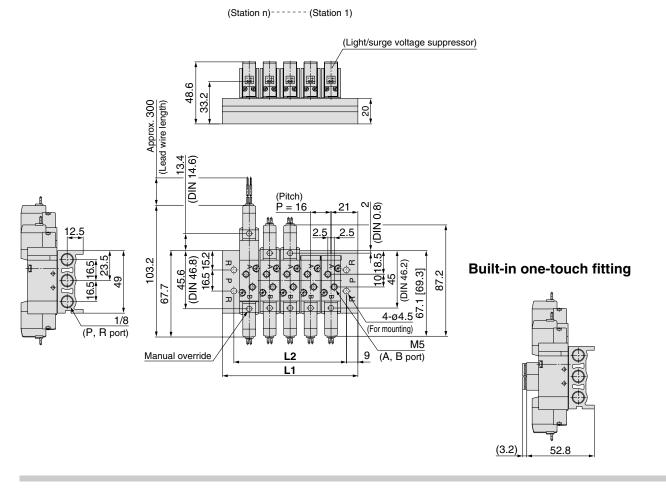

L plug connector (L)

M plug connector (M)


#### **DIN terminal (D)**


M8 connector (WO)


106.4

90.4

0.0

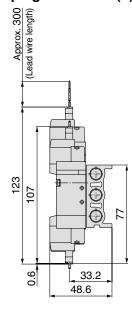

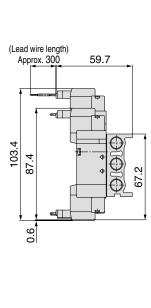


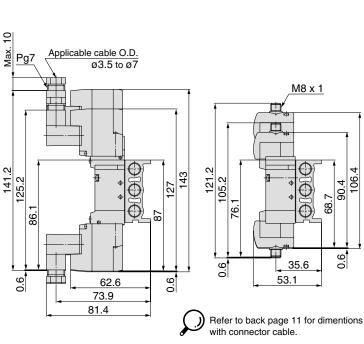

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	58	74	90	106	122	138	154	170	186	202	218	234	250	266	282	298	314	330	346
L2	40	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296	312	328

## Type 40: Bottom Ported/SS5YJ5-40-Stations -M5□-Q

## Grommet (G)

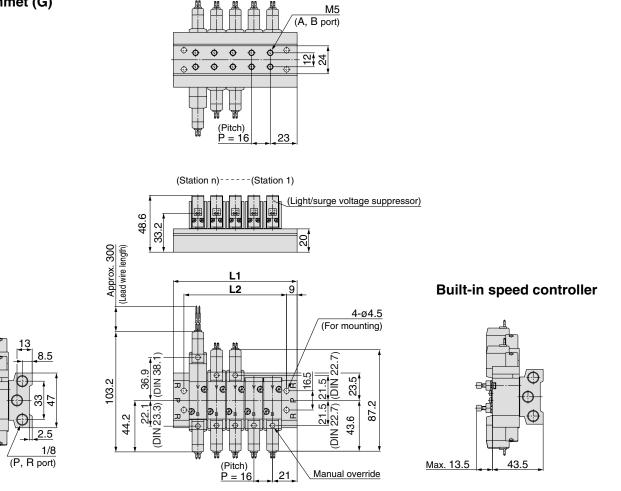



L plug connector (L)


M plug connector (M)


**DIN terminal (D)** 

M8 connector (WO)

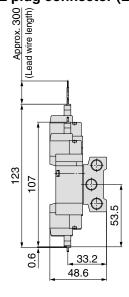

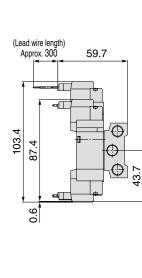

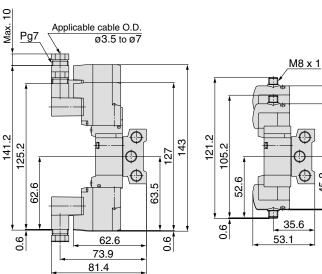

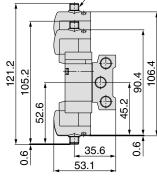


Refer to back page 11 for dimentions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	58	74	90	106	122	138	154	170	186	202	218	234	250	266	282	298	314	330	346
L2	40	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296	312	328

## Type 41: Side Ported/SS5YJ5-41- Stations -M5□-Q

## Grommet (G)

(Station 1)-----(Station n)

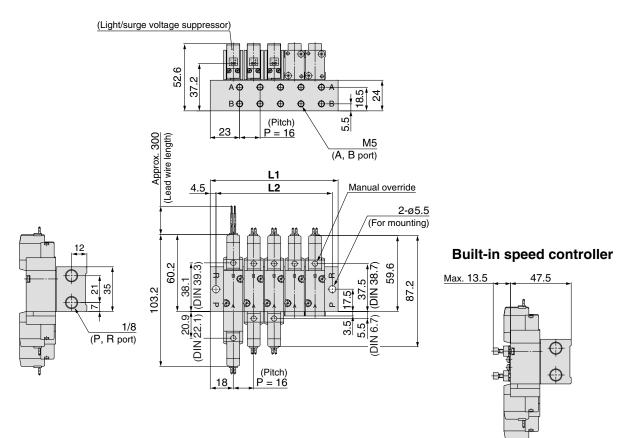

59.

3.5

Ð


¢


L plug connector (L)


M plug connector (M)

DIN terminal (D)

#### M8 connector (WO)

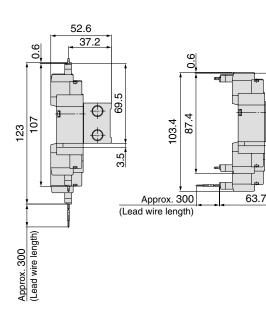

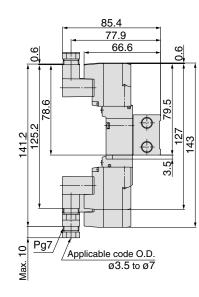

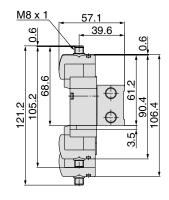

Refer to back page 11 for dimentions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	52	68	84	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340
L2	43	59	75	91	107	123	139	155	171	187	203	219	235	251	267	283	299	315	331


## Type 42: Side Ported/SS5YJ5-42-Stations -01, C6

## Grommet (G)

For 01□

## For ${}^{C6}_{N7}\square$ (Built-in one-touch fitting)

#### **Built-in speed controller**

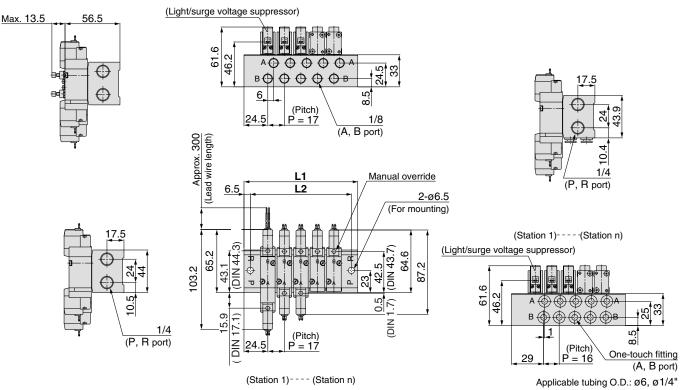


 $\mathscr{Y}_*$  Other dimensions are the same as the grommet type.


#### L plug connector (L)


M plug connector (M)


DIN terminal (D)

M8 connector (WO)

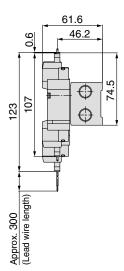

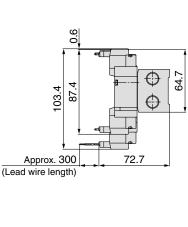

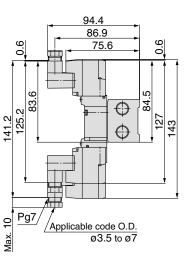

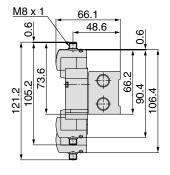


Refer to back page 11 for dimentions with connector cable.

A, B port size	Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
For 1/8	L1	66	83	100	117	134	151	168	185	202	219	236	253	270	287	304	321	338	355	372
1011/0	L2	53	70	87	104	121	138	155	172	189	206	223	240	257	274	291	308	325	342	359
For	L1	65	81	97	113	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353
C6/N7	L2	52	68	84	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340

## Type 43: Side Ported/SS5YJ3-43- Stations -<sup>C4</sup><sub>N3</sub> - Q

## Grommet (G)

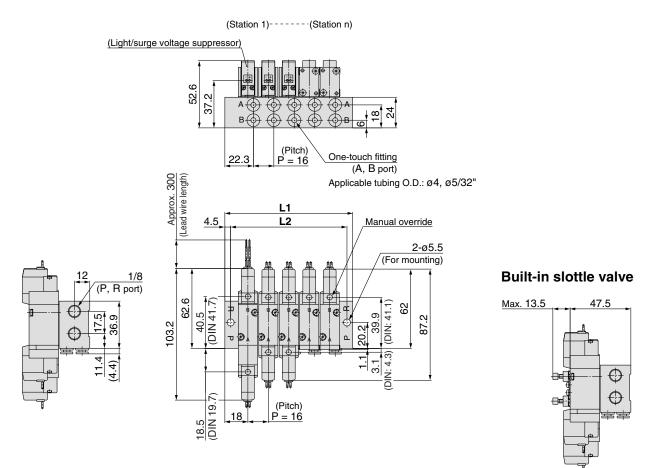

L plug connector (L) M plug connector (M) DIN terminal (D) M8 connector (WO) 85.4 77.9 52.6 M8 x 1 0.0 0.6 57.1 66.6 37.2 0.6 39.6 0.6 0.6 0.6 Ē 82 81.1 62.2  $\oplus$  $\oplus$  $\bigcirc$  $\oplus$ 8 125.2 7 87.4 <u>123</u> 107 127 141.2 :1.2 105.2 106.4 103.4 8 143  $\oplus$  $\oplus$  $\bigcirc$  $\oplus$ 121 ± 毒毒 효율 Ê  $\hat{\Box}$ 63.7 Approx. 300 (Lead wire length) Approx. 300 (Lead wire length) Max. 10 Pg7 Applicable code O.D. ø3.5 to ø7 Refer to back page 11 for dimentions with connector cable. Station n 19 Station 20 324 340 L1


Station 2	3	4	5	6	1	8	9	10	11	12	13	14	15	16		18
52	68	84	100	116	132	148	164	180	196	212	228	244	260	276	292	308
43	59	75	91	107	123	139	155	171	187	203	219	235	251	267	283	299


315

331

L2

#### Flat Ribbon Cable Manifold

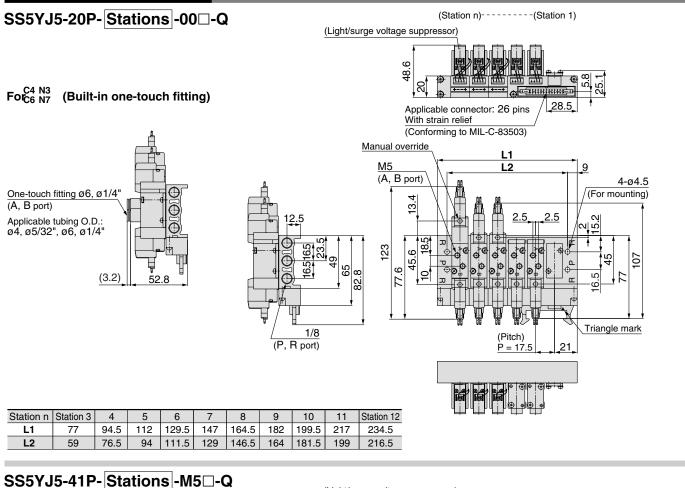

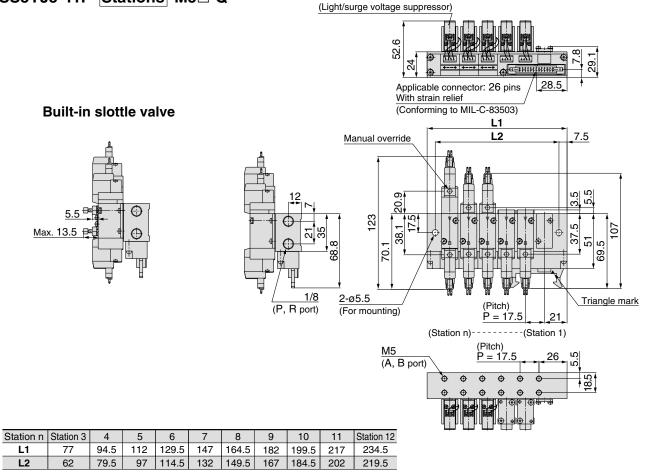

SMC

## **Flat Ribbon Cable Manifold**

94.5

79.5

62

L2

112

97


129.5

114.5

147

132

149.5

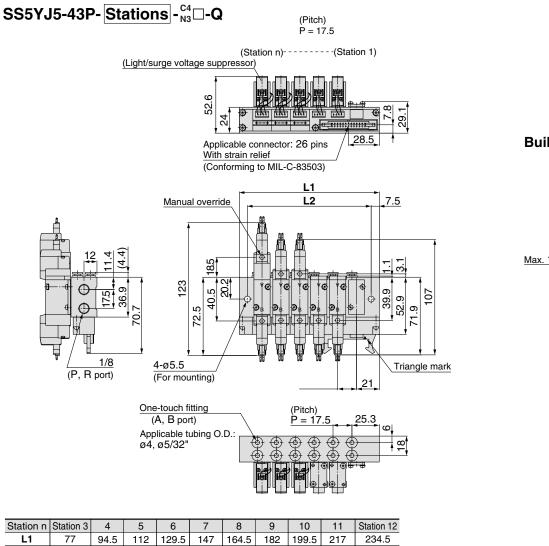

182

167

199.5


184.5

217

202

219.5

#### **Built-in speed controller**

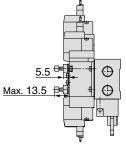

## **Rubber Seal 5 Port Solenoid Valve** Series SYJ7000 For details about certified products conforming to

# Specifications



Body ported



Base mounted

**Base mounted** 

3 1 5 (R2)(P)(R1)

3 position closed center

(B) (A)

3 1 5 (R2)(P)(R1)

3 position exhaust center

(B) (A) 2 4

(R2) (P)(R1)

2 position single solenoid (B) (A)

3 1 5 (R2)(P)(R1)

2 position double solenoid (B)(A)

JIS Symbol Body ported 2 position single (A)(B)

5 1 3 (R1)(P)(R2)

2 position double (A)(B) 5 1 3 (R1)(P)(R2)

3 position closed center (A)(B) 4 2

5 1 3 (R1)(P)(R2)

3 position exhaust center (A)(B) 4 2

5 1 3 (R1)(P)(R2)

3 position pressure center 3 position pressure center  $(A)(B)_{42}$ (R1)(P)(R2)

(B)(A) 2 4 (R2)(P)(R1)

> Made to Order (For details, refer to pages 78 through to 80.)

Fluid		Air		
	2 position single	0.15 to 0.7		
Operating pressure range	2 position double	0.1 to 0.7		
(MPa)	3 position	0.15 to 0.7		
Ambient and fluid temperat	ure (C)	-10 to 50 (No freezing. Refer to back page 3.)		
Response time (ms) Note 1)	2 position single, double	30 or less		
(at 0.5 MPa)	3 position	60 or less		
Max. operating frequency	2 position single, double	5		
(Hz)	3 position	3		
Manual override (Manual op	peration)	Non-locking push type, Push-turn locking slotted type, Push-turn locking lever type		
Pilot exhaust method		Individual exhaust for the pilot valve, Common exhaust for the pilot and main valve		
Lubrication		Not required		
Mounting orientation		Unrestricted		
Shock/Vibration resistance	(m/s <sup>2</sup> ) Note 2)	150/30		

Based on IEC60529

Enclosure

Note 1) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20C, at rated voltage, without surge suppressor) No malfunction occurred when it is tested in the axial direction and at the right

Note 2) Impact resistance:

angles to the main valve and armature in both energised and de-energised states every once for each condition. (Value in the initial state) Vibration resistance: No malfunction occurred in one sweep test between 45 and 2000 Hz. Test was performed to axis and right angle directions of the main valve and armature when pilot signal is ON and OFF. (Value in the initial state)

Dust proof (\* DIN terminal, M8 connector conforms to IP65.)

international standards, visit us at <u>www.smcworld.com.</u>

## **Solenoid Specifications**

			Grommet (G), (H)				
			L plug connector (L)				
Electrical entry			M plug connector (M)				
Liectrical entry			DIN terminal (D)				
			M8 connector (W)				
			G, H, L, M, W	D			
Coil rated voltage (V)	DC		24, 12, 6, 5, 3	24, 12			
con fatea voltage (v)	AC	50/60 Hz	100, 110, 200, 220				
Allowable voltage fluctuation	on		10% of rated voltage *				
Power consumption (W)	DC	Standard	0.35 {With light: 0.4 (DIN terminal with light: 0.45)}				
Power consumption (w)	DC	With power saving circuit	0.1 (With light only)				
		100 V	-	0.78 (With light: 0.87)			
		110 V	-	0.86 (With light: 0.97)			
Apparent power VA*	AC	[115 V]	-	[0.94 (With light: 1.07)]			
Apparent power VA	AC	200 V	-	1.15 (With light: 1.30)			
		220 V	-	1.27 (With light: 1.46)			
		[230 V]	-	[1.39 (With light: 1.60)]			
Surge voltage suppressor			Diode (DIN terminal, Varistor when non-polar types)				
Indicator light			LED (Neon light when AC with DIN terminal)				

\* In common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.
\* For 115 VAC and 230 VAC, the allowable voltage is -15% to +5% of rated voltage.

\* S, Z and T type (with power saving circuit) should be used within the following allowable voltage fluctuation range due to a voltage drop caused by the internal circuit. S and Z type: 24 VDC: -7% to +10%, 12 VDC: -4% to +10% T type: 24 VDC: -8% to +10%, 12 VDC: -6% to +10%

## Flow Characteristics/Weight

				Port	size			Flow	/ charao	teristics	Note 1)				Weig	ht (g) <sup>Note 2,</sup>	3)
١	/alve model	Туре	of actuation	1,5,3	4,2	1–	→4/2(	P→A/E	3)	4/2→5	5/3 (A	/B→E	A/EB)	Grommet	L/M plug	DIN	M8
				(P,EA,EB)	(A,B)	C [dm³/(s·bar)]	b	Cv	Q[d/min(ANR)]*	C [dm³/(s·bar)]	b	Cv	Q[d/min(ANR)]*	Grommet	connector	terminal	connector
		2 position	Single			2.2	0.36	0.58	582	2.4	0.34	0.63	626	85	86	107	90
		Double			2.2				2.4			020	98	100	142	108	
	SYJ7□20-□-01		Closed center	1/8	1/8	1.8	0.37	0.45	479	2.0		0.49	525				
		3 position	Exhaust center	_		1.2	0.50	0.34	353	3.0 [1.3]	· · ·	0.73 [0.39]	788 [389]	108	110	152	118
			Pressure center			3.0 [0.83]	0.37 [0.50]	0.78 [0.25]	799 [244]	1.8	0.37	0.45	479				
ð		2 position	Single			1.6	0.33	0.4	415	2.2	0.32	0.53	567	96	97	98	101
Ť		z position	Double		C6				_					109	111	153	119
Body ported	SYJ7□20-□-C6		Closed center	1/8	(One-touch	1.4	0.27	0.35	349	1.9		0.49	493				129
ģ		3 position	Exhaust center		fitting for ø6)	1.1	0.37	0.27	293	2.5 [1.3]			644 [395]	119	121	163	
ň			Pressure center			1.8 [0.78]	0.36 [0.40]	0.45 [0.22]	476 [212]	1.6	0.30	0.39	407				
	2	2 position	Single			2.0	0.39	39 0.52 540	2.3 0.34	0.34	34 0.61	600	96	97	98	101	
		- poonion	Double		C8					-				109	111	153	119
	SYJ7□20-□-C8		Closed center	1/8	(One-touch fitting for ø8)	1.7	0.35	0.42	447	2.0		0.49	505		121 163		
		3 position	Exhaust center			1.2	0.38	0.33	322				683 [379]	119		129	
			Pressure center			1.9 [0.86]	0.57 [0.46]	0.59 [0.25]	594 [245]	1.7	0.39	0.42	459			L	
		2 position	Single	_		2.3	0.45	0.57	649	2.8	0.37	0.71	746	165 (85)	166 (86)	187 (107)	170 (90)
			Double							-		-		178 (98)	180 (100)	222 (142)	188 (108)
eq	SYJ7□40-□-01		Closed center	1/8	1/8	1.9	0.36	0.48	503	2.1	0.46		598				
mounted		3 position	Exhaust center	_		1.2	0.48	0.35	347	3.4 [1.3]			899 [406]	188 (108)	190 (110)	232 (152)	198 (118)
ğ			Pressure center			3.3 [0.85]	0.43 [0.54]	0.78 [0.25]	918 [259]	2.1	0.45	0.56	593				
e		2 position	Single	_		2.3	0.41	0.61	630	2.9	0.35	0.74	762	165 (85)	166 (86)	187 (107)	170 (90)
Base		-	Double	_			-			-		-		178 (98)	180 (100)	222 (142)	188 (108)
ш	SYJ7□40-□-02	3 position	Closed center	1/4	1/4	1.9	0.46	0.50	541	2.2		0.60	616	188 (108)			198 (118)
			Exhaust center	-		1.3	0.45	0.35	367				923 [434]		190 (110)	232 (152)	
			Pressure center s the normal po	<u> </u>		3.6 [0.83]			877 [255]	2.1		0.58	602				

**Body Ported** 

Note 2) (): Without sub-plate. Note 3) For DC voltages. For AC voltages add 3 g to the weight of the single solenoid and 6 g to the weight of the double solenoid and 3 position types. \* These values have been calculated according to ISO6358 and represent the flow rate measured in standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.

#### Cylinder Speed Chart

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.

							Bore	e size					
Series	Average speed	Pressure 0.5 MPa Load rate: 50%			Pressure 0.5 MPa Load rate: 50%			Series MB/CA2 Pressure 0.5 MPa Load rate: 50% Stroke 500 mm					
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	ø40	ø50	ø63	ø80	ø100
SYJ7120-01	800 700 600 500 400 300 200 100 0											cular, upward	d actuation

#### **Base Mounted**


							Bore	size					
		Series C	J2		Series N	IB/CM2			Series N	IB/CA2			
	Average speed	Pressure (	).5 MPa		Pressure	0.5 MPa			Pressure	0.5 MPa			
Series		Load rate:			Load rate	: 50%			Load rate	e: 50%			
	(	Stroke 60	mm		Stroke 30	0 mm			Stroke 50	0 mm			
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	ø40	ø50	ø63	ø80	ø100
	800												
	700 600											cular, upward	
	500						——————————————————————————————————————		┝──┤ ┝─		Horizonta	actuation	H
SYJ7140-02													
	300 200												
	100					$\left  - \right  $							
	0												

\* Cylinder is in extending. Speed controller is meter-out, which is directly connected with cylinder and its needle is fully opened.
 \* Average speed of cylinder is obtained by dividing the full stroke time by the stroke.
 \* Load factor: ( (Load weight x 9.8) /Theoretical force) x 100%

#### Conditions

	•			
	Body ported	Series CJ2	Series CM2	Series MB/CA2
	Tubing bore x Length	ø6 x	1 m	ø12 x 1 m
SYJ7120-01	Speed controller	AS2301F-06	AS3301F-06	AS4001F-12
	Silencer	AN110-01	AN20	00-02

E	lase mounted	Series CJ2	Series CM2	Series MB/CA2		
	Tubing bore x Length	ø6 x 1 m				
SYJ7140-02	Speed controller	AS1301F-06	AS3001F-06			
	Silencer	AN110-01	AN200-02	AN3301F-06		

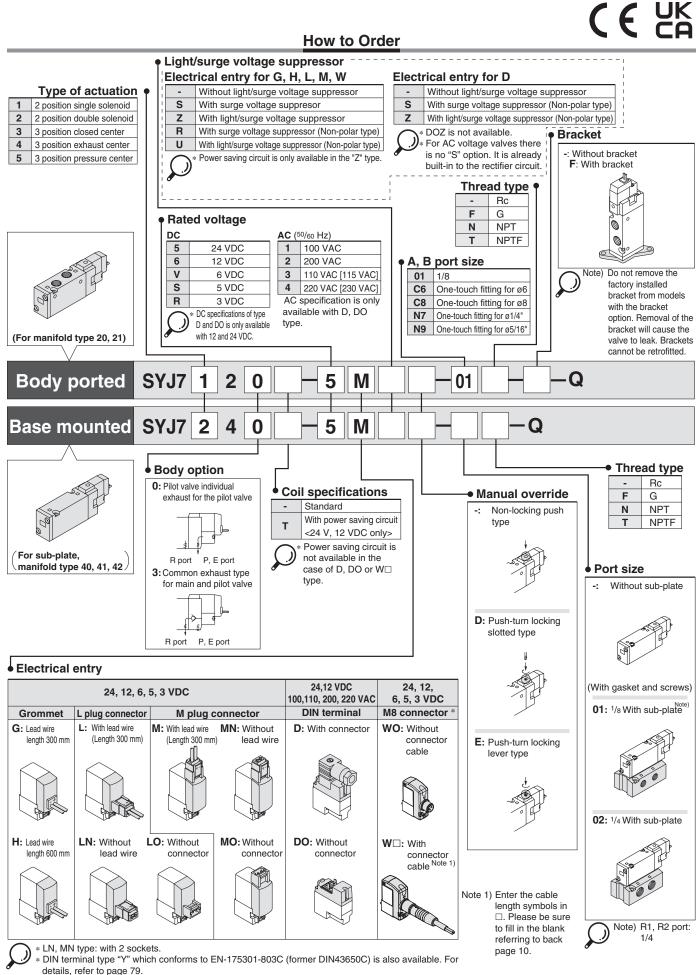


For connector cable of M8 connector, refer to back page 10.

\* Connector M8 type "WA" conforming to IEC 60947-5-2 standard, is also available.

For details, see page 80.

**SMC** 

#### Construction

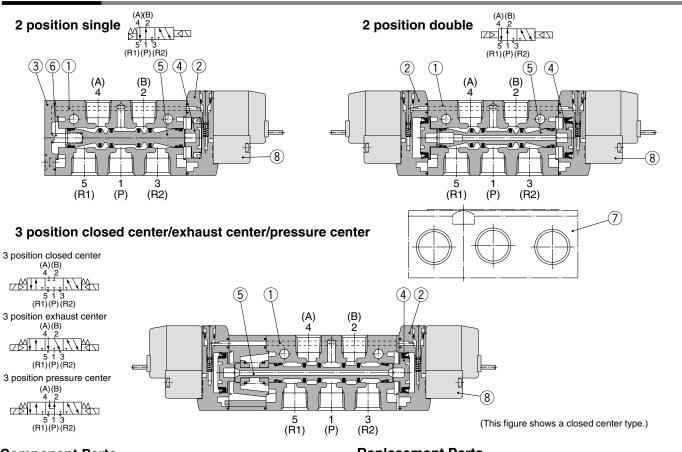


#### **Component Parts**

Γ	No.	Description	Material	Note
	1	Body	Aluminum die-casted	White
Γ	2	Piston plate	Resin	White
	3	End cover	Aluminum die-casted	White
	4	Piston	Resin	—
	5	Spool valve assembly	Aluminum, H-NBR	—
	6	Spool spring	Stainless steel	—

#### **Replacement Parts**

No.	Description	No.	Note		
7	7 Sub-plate	SYJ7000-22-1-Q	0-22-1-Q 1/8 Alu		
1	Oub-plate	SYJ7000-22-2-Q	1/4	die-casted	
8	Pilot valve	V111(T)-□□□		-	

## How to Order Pilot Valve Assembly

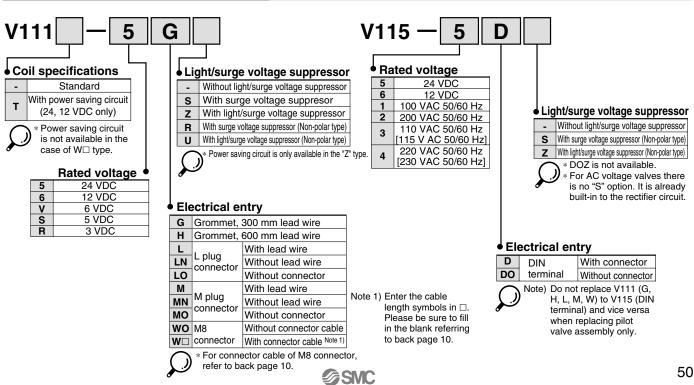

## How to Order Connector Assembly for L/M Plug Connector


For DC : SY100-30-4A-

Without lead wire: SY100-30-A (with connector and 2 of sockets only)

Lead wire length

	· · · · · · · · · · · · · · · · · · ·
-	300 mm
6	600 mm
10	1000 mm
15	1500 mm
20	2000 mm
25	2500 mm
30	3000 mm
50	5000 mm


## How to Order M8 Connector Cable

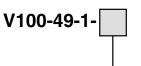

• Cable length

1	300 mm
2	500 mm
3	1000 mm
4	2000 mm
7	5000 mm

## **2 Position Single**

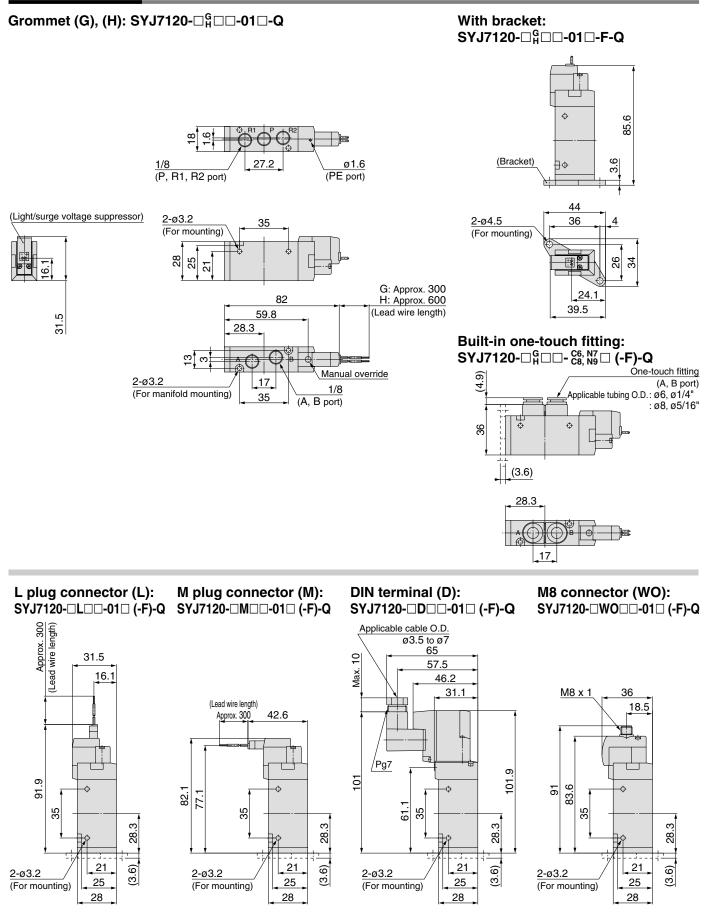



Refer to back page 11 for dimentions with connector cable.

## **2** Position Double

## Grommet (G), (H): SYJ7220-□<sup>G</sup><sub>H</sub>□□-01□-Q

#### Built-in one-touch fitting: SYJ7220- $\Box_{H}^{G}\Box\Box$ - $C_{C8,N9}^{C6,N7}\Box$ -Q

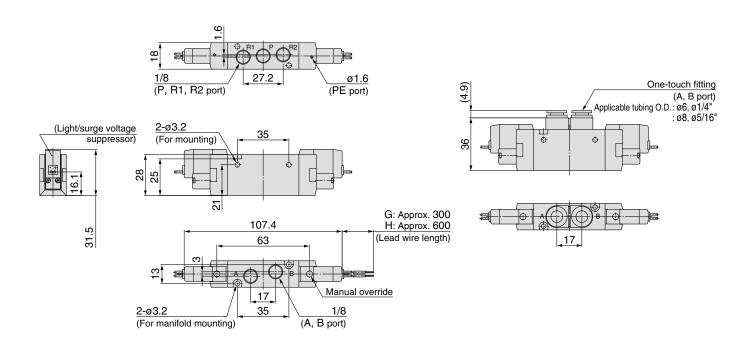


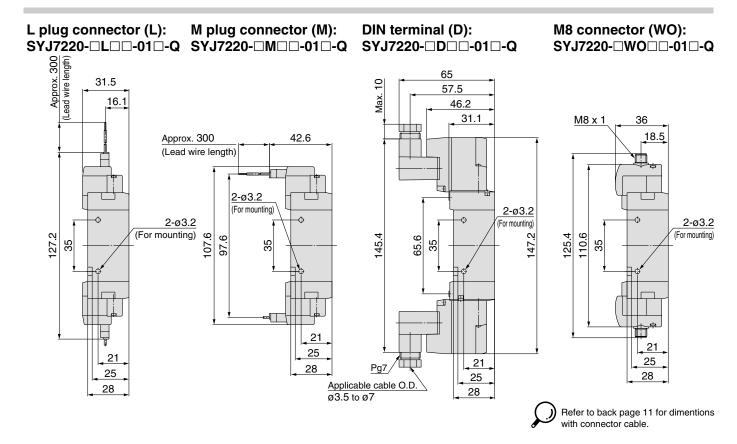


#### **3 Position Closed Center/Exhaust Center/Pressure Center**

## Grommet (G), (H): SYJ7<sup>3</sup>₅20-□<sup>G</sup><sub>H</sub>□□-01□-Q


#### Built-in one-touch fitting: SYJ7<sup>3</sup>/<sub>4</sub>20-□<sup>G</sup><sub>H</sub>□□-<sup>C6, N7</sup><sub>G</sub>□-Q

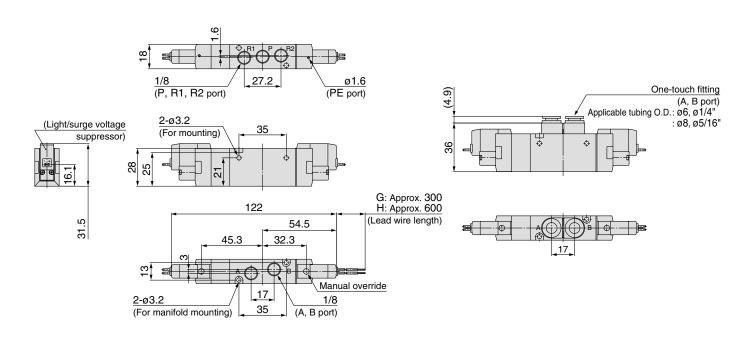

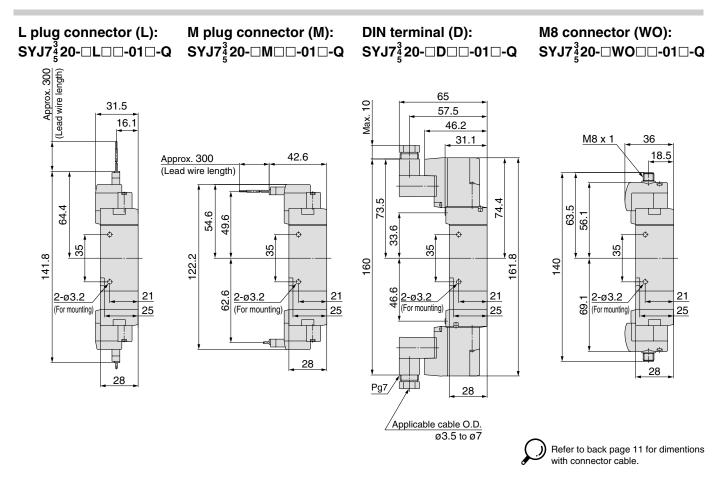


## **2 Position Single**


## Grommet (G), (H): SYJ7140-01 G

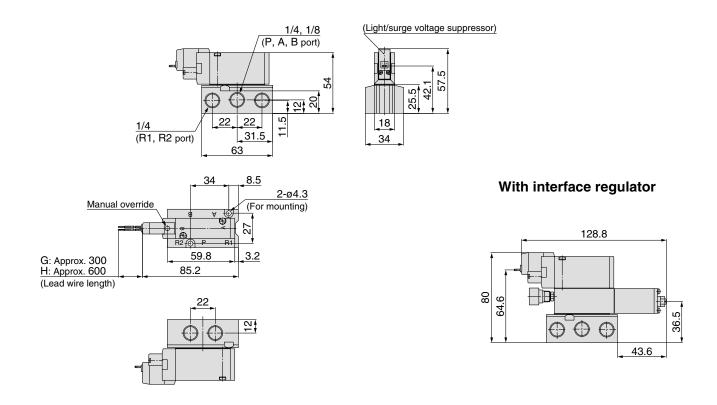



L plug connector (L): SYJ7140-□L□□-010-Q

M plug connector (M): SYJ7140-DMDD-01D-Q DIN terminal (D): SYJ7140-DDD-01-02-Q M8 connector (WO): SYJ7140-□WO□□-<sup>01</sup><sub>02</sub>□-Q

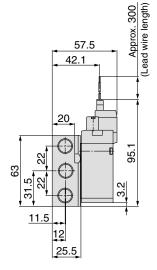

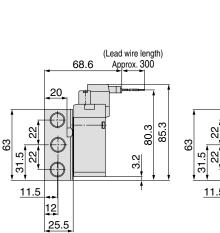

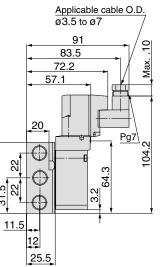

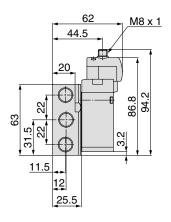



Refer to back page 11 for dimentions with connector cable.



## **2** Position Double


## Grommet (G), (H): SYJ7240-□<sup>G</sup><sub>H</sub>□□-<sup>01</sup><sub>02</sub>□-Q

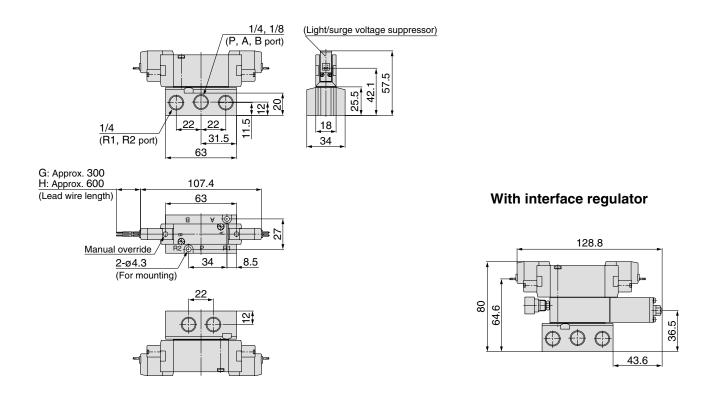

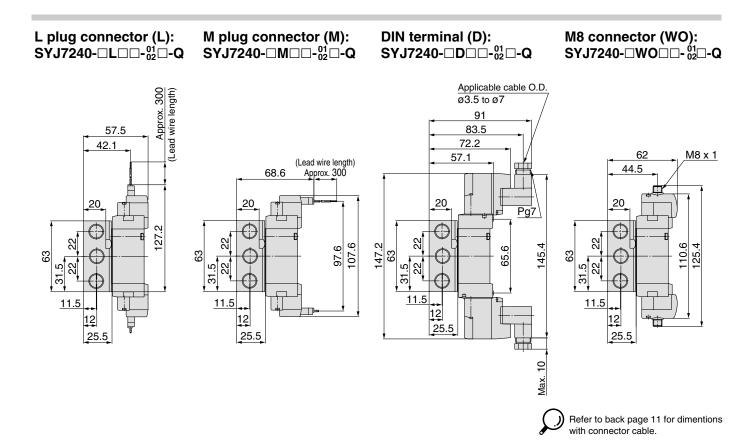

## **3 Position Closed Center/Exhaust Center/Pressure Center**

Grommet (G), (H): SYJ7<sup>3</sup>/<sub>5</sub>40-□<sup>G</sup><sub>H</sub>□□-<sup>01</sup><sub>02</sub>□-Q

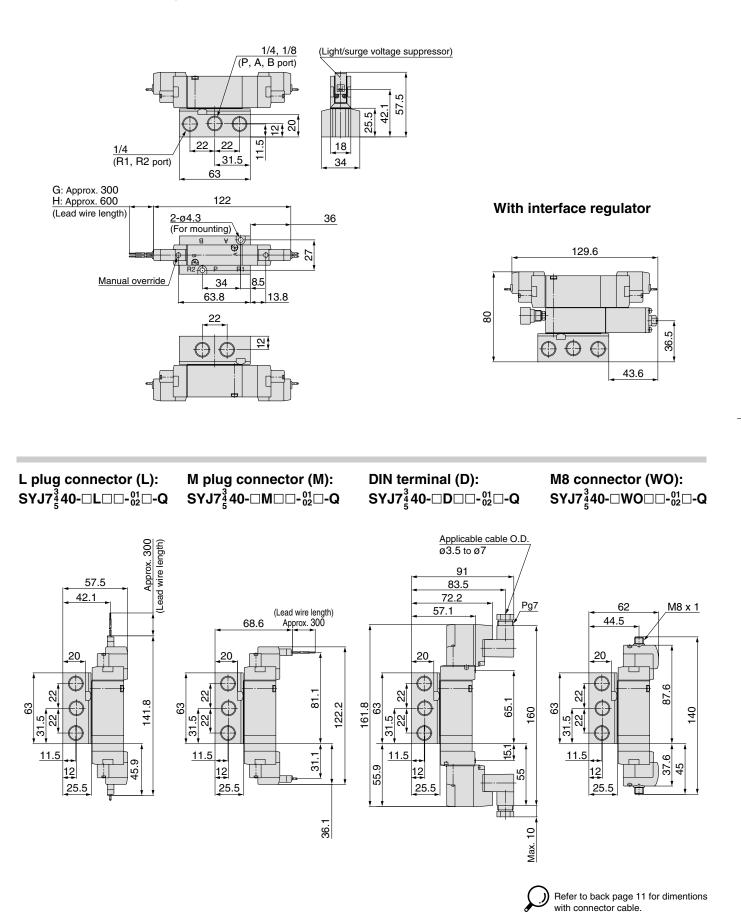

# Series SYJ7000 Manifold Specifications

## Manifold Standard



## **Manifold Specifications**

Model		Type 20	Type 21	Type 40	Type 20	Type 42
Manifold type			Sing	le base/B mo	bunt	
P (SUP), R (EXH)			Common	SUP, Comm	non EXH	
Valve stations	2 to 15 stations	2 to 20 stations				
A, B port	Location	Valve		Base	Base	
Porting specifications	Direction	Т	ор	Bottom Side		de
	P, R port	1/8		1/	/4	
Port size	A, B port	1/ C6 (One-touch C8 (One-touch	8 n fitting for ø6) n fitting for ø8)	1,	/8	C6 (One-touch fitting for ø6) C8 (One-touch fitting for ø8)

#### **Flow Characteristics**

			Davit		Flow characteristics $1 \rightarrow 4/2 (P \rightarrow A/B)$ $4/2 \rightarrow 5/3 (A/B \rightarrow R)$								
	Manifold		Port	size	1	→4/2	(P→	A/B)	4/2	2→5/3	3 (A/B	→R)	
	Manifold		1(P), 5/3(R) Port	2(B), 4(A) Port	C [dm³/(s·bar)]	b	Cv	Q[#min(ANR)]*	C [dm³/(s·bar)]	b	Cv	Q[d/min(ANR)]*	
			1/8	1/8	2.2	0.35	0.57	578			0.55	571	
Body ported for internal pilot	Type SS5YJ7-20		1/8	C6	1.4	0.32	0.37	361	2.0	0.25	0.49	493	
		01/17-0-	1/8	C8	1.7	0.38	0.45	456	2.1	0.25	0.51	518	
	Type SS5YJ7-21	SYJ7020	1/4	1/8	2.1	0.36	0.55	555	2.3	0.26	0.54	571	
			1/4	C6	1.4 0.32 0.36 361 2	2.1	0.24	0.50	515				
			1/4	C8	1.8	0.37	0.50	479	2.1	0.20	0.50	503	
	Type SS5YJ7-40		1/4	1/8	2.1	0.28	0.51	527	2.5	0.23	0.59	609	
Base mounted	Type SS5YJ7-41	j SYJ7⊡4⊡	1/4	1/8	2.0	0.30	0.50	509	2.2	0.30	0.55	559	
	Type SS5YJ7-42-C6		1/4	C6	1.5	0.32	0.38	386	2.2	0.23	0.52	536	
	Type SS5YJ7-42-C8		1/4	C8	1.9	0.24	0.46	466	2.2	0.26	0.53	546	

\* These values have been calculated according to ISO6358 and represent the flow rate measured in

standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.

#### How to Order Manifold (Example)

Instruct by specifying the valves and blanking plate assembly to be mounted on the manifold along with the manifold base model no. Example: •SS5YJ7-20-03-Q ················· 1 pc. (Manifold base)

*	SYJ7120-5G-01-Q 2 pcs	. (Valve)
*	SYJ7000-21-1A-Q 1 pc.	(Blanking plate assembly)
•	•SS5YJ7-41-03-01-Q 1 pc.	(Manifold base)
*	SYJ7140-5LZ-Q 1 pc.	(Valve)
*	SYJ7240-5LZ-Q 1 pc.	(Valve)
*	SYJ7000-21-1A-Q 1 pc.	(Blanking plate assembly)
l	→The asterisk denotes the symbol	for assembly. Prefix it to the part nos. of the solenoid valve, etc.

\* Use manifold specification sheet.

## Flat Ribbon Cable Manifold

#### • Multiple valve wiring is simplified through the use of the flat cable connector.

#### • Clean appearance

In the case of a flat ribbon cable type, each valve is wired on the print board of manifold base to allow the external wiring to be piped all together with 26 pins MIL connector.



#### Flat Ribbon Cable Manifold Specifications

Model		Type 21P						
Manifold type		Single base/B mount						
P (SUP), R (EX	H)	Common SUP, Common EXH						
Valve stations		3 to 12 stations						
A, B port locatio	on	Valve						
Port size	P, R port	1/4						
Port size	A, B port	1/8, C6, C8						
Applicable flat r cable connector		Socket: 26 pins MIL type with strain relief (MIL-C-83503)						
Internal wiring		In common between +COM and -COM (Z type: +COM only).						
Rated voltage		24, 12 VDC						

Note 1) The value is for manifold base and individually operated 2 position type. Note 2) The withstand voltage specification for the wiring unit section is JIS C 0704, Grade 1 or its equivalent. ( ))

## Flow Characteristics

\* Use manifold specification sheet.


				Port	size				low char				
				1 011	3120	1	→4/2	! (P→	·A/B)	4/2	2→5/	3 (A/E	3→R)
		Manifold		1(P), 5/3(R)	2(B), 4(A)	C	b	Cv	Q[//min(ANR)]*	C	b	Cv	Q[//min(ANR)]*
				Port Port		[dm³/(s·bar)]	-	-	-f	[dm%(s·bar)]	-	-	- <b>1</b> - ( 74
	Deskonseted	Type SS5YJ7-21P-01		1/4	1/8	2.1	0.36	0.55	555	2.3	0.26	0.54	571
		Body ported Type SS5YJ7-21P-C6 SYJ7 23		1/4	C6	1.4	0.32	0.36	361	2.1	0.24	0.50	515
t	for internal pilot Type SS5YJ7-21P-C8		1/4	C8	1.8	0.37	0.50	479	2.1	0.20	0.50	503	
1	Note) V	alue at manifo	ld base mou	unted, 2 p	position s	single o	oeratir	ng					

\* These values have been calculated according to ISO6358 and represent the flow rate measured in


standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.

#### How to Order Manifold (Example)

Instruct by specifying the valves, blanking plate assembly and connector assembly to be mounted on the manifold along with the manifold base model no.

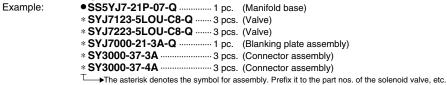

#### How to Order Valve

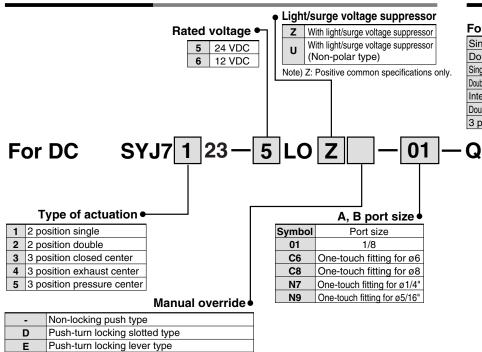

#### How to Order Connector Assembly


#### For 12, 24 VDC

Single solenoid	SY3000-37-3A
Double solenoid, 3 position type	SY3000-37-4A
Single solenoid, individual SUP, EXH spacer	SY3000-37-3A
Double solenoid, 3 position individual SUP/EXH spacer	SY3000-37-6A
Interface regulator for single solenoid	SY3000-37-3A
Double solenoid, 3 position interface regulator	SY3000-37-6A
3 port adaptor plate	SY3000-37-3A

Ε

## Series SYJ7000 ( C UK CA

## Manifold Standard /Common SUP/Common EXH

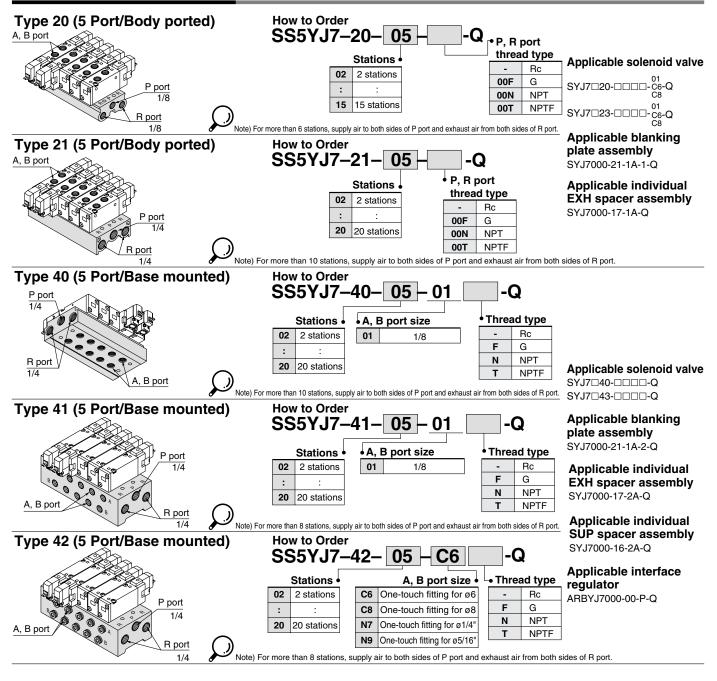

# Flat Ribbon Cable Manifold /Common SUP/Common EXH

Type 21P (5 Port/Body ported)


P port

R port

1/4

1/4

A, B por

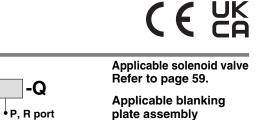

SYJ7000-21-3A-Q

Applicable connector assembly Refer to page 59.

Note) For more than 10 stations, supply air to both sides of P port and exhaust air from both sides of R port.

thread type

00F

00N

00T

Rc

G

NPT

NPTF



How to Order

SS5YJ7-21P- 05


Stations

3 stations

12 stations

03

12

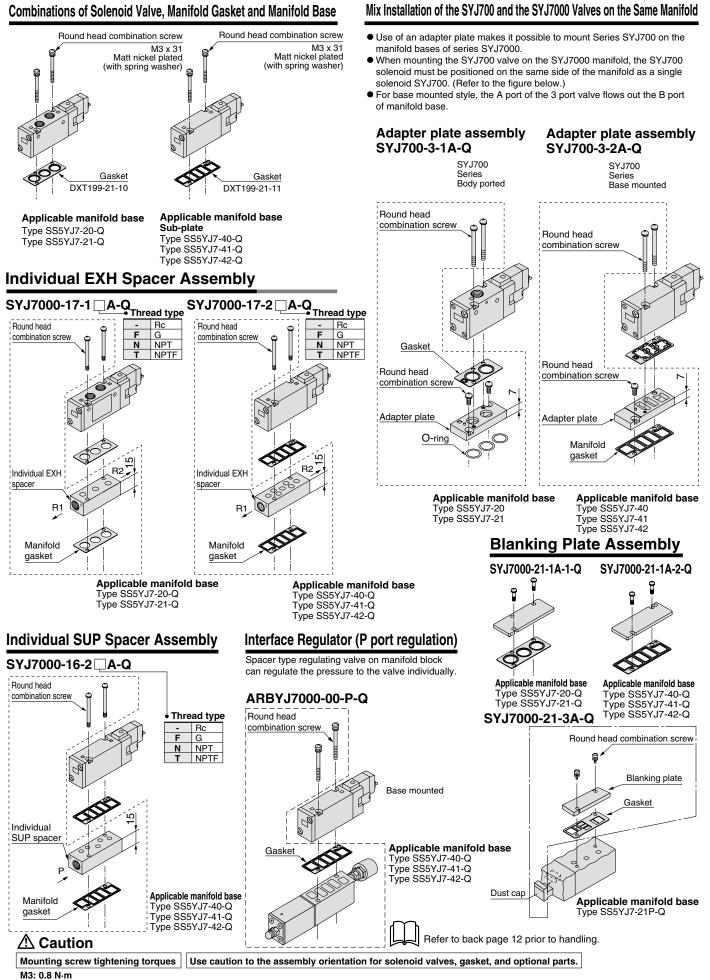


**SMC** 

61

## Type 20: Top Proted/SS5YJ7-20-Stations -00□-Q

#### Grommet (G)



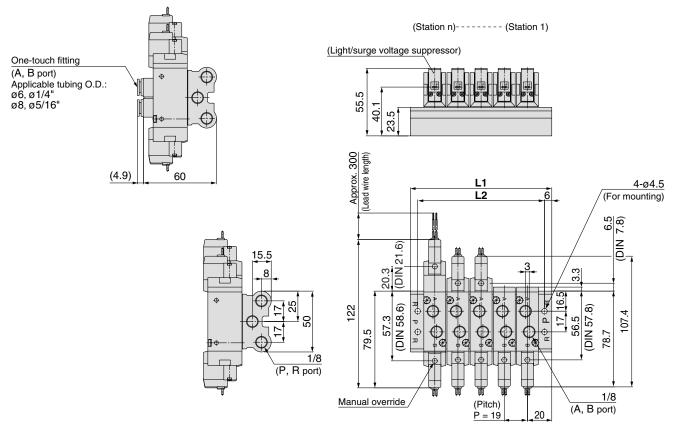



L plug connector (L)


M plug connector (M)


**DIN terminal (D)** 

M8 connector (WO)

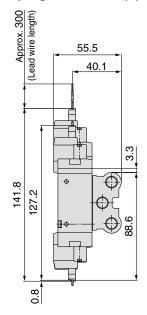

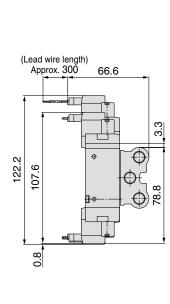

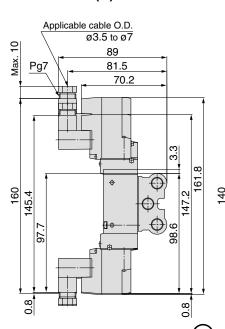

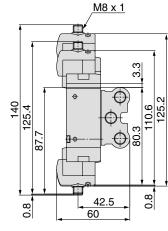


Refer to back page 11 for dimentions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	Station 15
L1	59	78	97	116	135	154	173	192	211	230	249	268	287	306
L2	47	66	85	104	123	142	161	180	199	218	237	256	275	294

## Type 21: Top Ported/SS5YJ7-21- Stations (-00□)-Q

## Grommet (G)

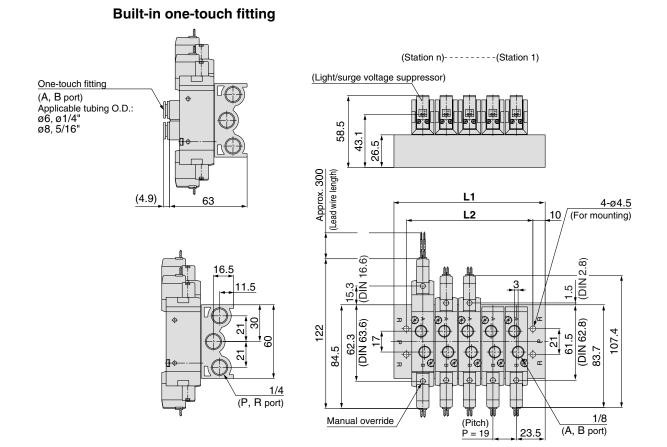


#### L plug connector (L) M plug connector (M) **DIN terminal (D)** M8 connector (WO) (Lead wire length) Applicable cable O.D. ø3.5 to ø7 위 92 84.5 Иах. 43.1 Pg7 73.2 (Lead wire length) Approx. 300 M8 x 1 69.6 -6 141.8 161.8 ¢ 122.2 ¢ 125.2 127.2 107.6 160 140 145.4 125.4 10.6 $\bigcirc$ 47.2 83.8 ო 93.6 03.6 85. r) . 65 20 0.8 0.8 45.5 0.8 0.8 63 ┢╋╋╋ 0.8 0.8 Refer to back page 11 for dimentions J with connector cable.


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	66	85	104	123	142	161	180	199	218	237	256	275	294	313	332	351	370	389	408
L2	46	65	84	103	122	141	160	179	198	217	236	255	274	293	312	331	350	369	388


## Type 40: Bottom Ported/SS5YJ7-40-Stations -01 -Q



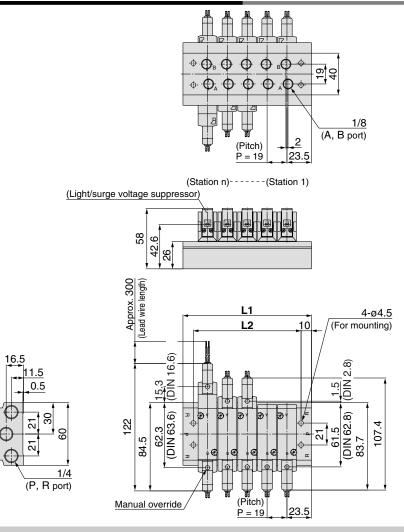



#### M8 connector (WO)

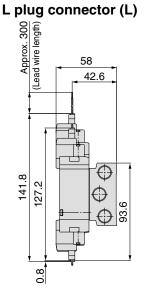

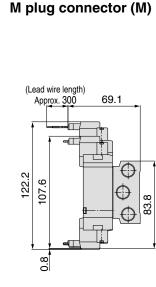

## DIN terminal (D)

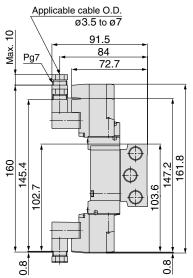

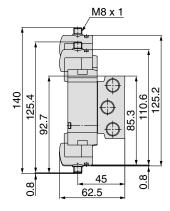


Refer to back page 11 for dimentions with connector cable.

Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	66	85	104	123	142	161	180	199	218	237	256	275	294	313	332	351	370	389	408
L2	46	65	84	103	122	141	160	179	198	217	236	255	274	293	312	331	350	369	388



## Type 41: Side Ported/SS5YJ7-41-Stations -01□-Q

#### Grommet (G)

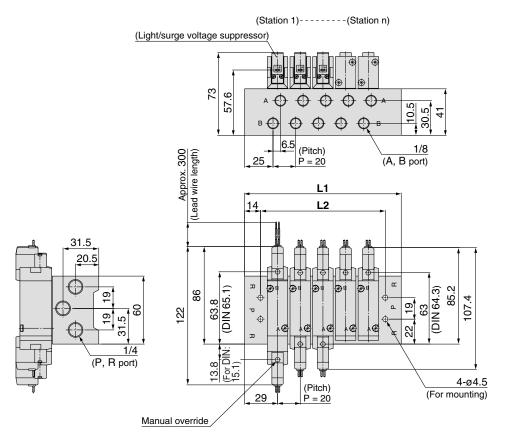

**DIN terminal (D)** L plug connector (L) M plug connector (M) M8 connector (WO) 106.5 99 73 87.7 0.8 <u>M8 x 1</u> 77.5 0.8 57.6 0.8 60 ω 0.8 0.8 104.2 140 125.4 94.2 105.1  $\odot$  $\bigcirc$  $\bigcirc$  $\odot$ 85.3 œ 95. <u>147.2</u> 161.8 86.8 110.6 127.2 ڡ 160 145.4 141.8 122.2  $\bigcirc$ 107.  $\oplus$  $\bigcirc$  $\bigcirc$ ດ 25.  $\bigcirc$  $\odot$  $\odot$  $\odot$ T Approx. 300 84.1 (Lead wire length) (Lead wire length) Pg7⁄ Applicable cable O.D. Max. 10 Approx. 300 ø3.5 to ø7 Refer to back page 11 for dimentions with connector cable. Station n Station 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 Station 20 98 118 178 198 218 238 258 318 338 418 L1 78 138 158 278 298 358 378 398 438

230

250

270

290

310

330

350

370

390

410

210

L2

50

70

90

110

130


150

170

190

## Type 42: Side Ported/SS5YJ7-42- Stations - C6,N7 - C

#### Grommet (G)

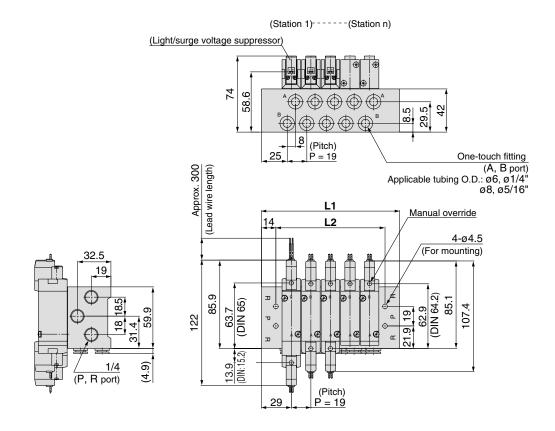



L plug connector (L)


M plug connector (M)

**DIN terminal (D)** 

#### M8 connector (WO)

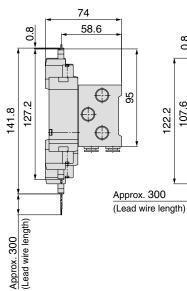

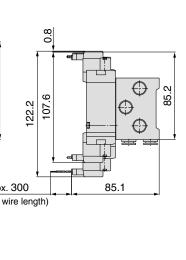

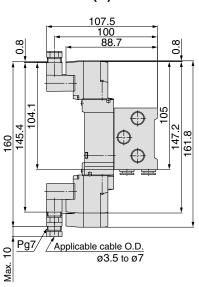


Refer to back page 11 for dimentions with connector cable.


Station n	Station 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	Station 20
L1	77	96	115	134	153	172	191	210	229	248	267	286	305	324	343	362	381	400	419
L2	49	68	87	106	125	144	163	182	201	220	239	258	277	296	315	334	353	372	391

## Flat Ribbon Cable Manifold

## SS5YJ7-21P-Stations (-00□)-Q

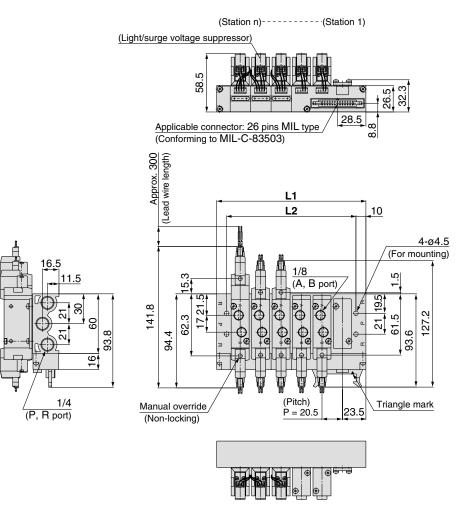


#### For built-in one-touch fitting

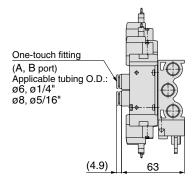

Station n	Station 3	4	5	6	7	8	9	10	11	Station 12
L1	88	108.5	129	149.5	170	190.5	211	231.5	252	272.5
L2	68	88.5	109	129.5	150	170.5	191	211.5	232	252.5

# 4/5 Port Air Operated Valve Series SYJA3000

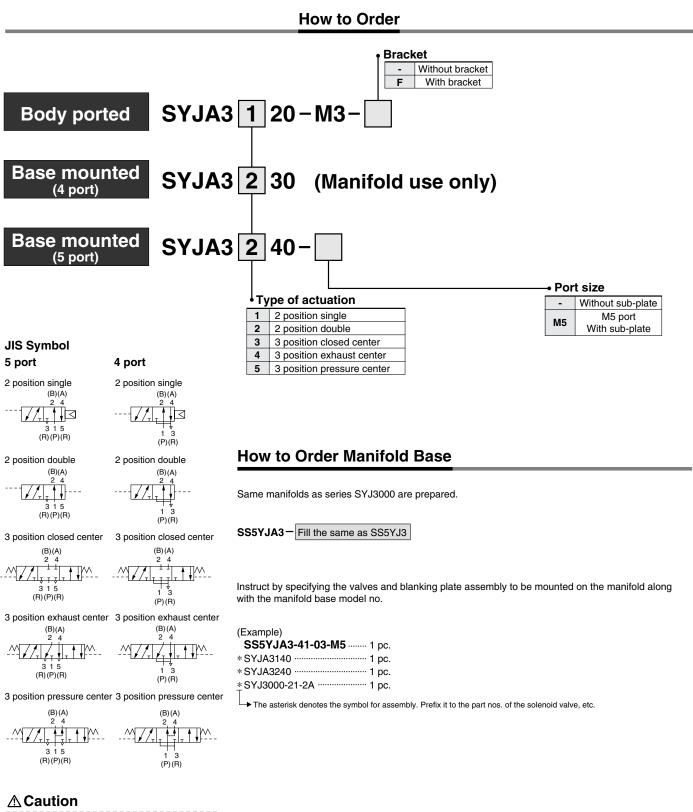

Refer to back page 1 through to 5 for Safety Instructions and Common Precautions.

## **Specifications**



Base mounted



Body ported

Fluid		Air
Operating pressure	2 position single	0.15 to 0.7
range	2 position double	-100 kPa to 0.7
(MPa)	3 position	-100 kPa to 0.7
Note 1)	2 position single	Operating pressure to 0.7
Pilot pressure range (MPa)	2 position double	0.1 to 0.7
(MPa)	3 position	0.2 to 0.7
Ambient and fluid temp	perature (°C)	-10 to 50 (No freezing. Refer to back page 3.)
Lubrication		Not required
Mounting orientation		Unrestricted
Impact/Vibration resist	ance (m/s <sup>2</sup> ) Note 2)	300/50

 Note 1) In case of single type, be certain that pressure within operating pressure range be supplied to supply port, because return pressure is introduced from supply port {1(P)} for activation.

 Note 2) Impact resistance:
 No malfunction resulted from the impact test using a drop impact tester.

 Vibration resistance: No malfunction resulted from the axis and right angle directions of the main valve, when pilot signal is ON and OFF. (Value in the initial state) Vibration resistance: No malfunction occurred in one sweep test between 45 and 2000 Hz. Test was performed to axis and right angle directions of the main valve

#### Pilot Pressure Range (Single pilot)

#### 0.6 Pilot pressure MPa Pilot pressure 0.5 range 0.4 0.3 0.2 0.1 0.2 0.3 0.4 0.5 0.6 Operating pressure range MPa

#### With Bracket

Air operated valve

SYJA3 20-M3-F

The mounting bracket for the 2 position double solenoid and 3 position is supplied unattached.

\* Refer to the memo for changed contents.


## Flow Characteristics/Weight

						Nu. 0)				Flo	w chara	cteristi	CS Note	2)	
		_			Pilot	Note 3) Weight (g)	Effective	1	→ 4/2	! (P → A					EA/EB)
	Valve model	Type of	actuation	Port size	port size	Grommet	area mm²	C [dm <sup>3</sup> / (s·bar)]	b	Cv		C [dm <sup>3</sup> / (s•bar)]	b	Cv	Q[I/min(ANR)]*
-			Single			48 (22)									
5 port Base mounted (with sub-plate)		2 position	Double			51 (25)		0.46	0.36	0.12	122	0.46	0.35	0.12	121
e) (e			Closed												100
e m			center					0.47	0.33	0.12	122	0.47	0.31	0.12	120
3aso Ib-p	SYJA3⊡40-M5		Exhaust	M5	M3		-	0.00	0.00	0.40		0.59	0.43	0.16	164
I SL		3 position	center			54 (28)		0.36	0.39	0.10	97	[0.40]	[0.33]	[0.11]	104
with			Pressure					0.58	0.42	0.16	160	0.40	0.00	0.14	[104]
<u>ت</u> م			center					[0.32]	[0.33]	[0.080]	[83]	0.46	0.32	0.11	118
	2 positio		Single			22									
	orted	2 position	Double		M3	25	_								
ted		A3□20-M3 3 position	Closed			28									
por			center				0.9								
δ	STJAJUZU-IVIJ		Exhaust	IVIO			0.9								
B		5 position	center			20									
			Pressure												
			center												
σ		2 position	Single	_		22									
nte te 1)		2 00511011	Double			25									
Non Non			Closed								a a manif		forton	000 60	for details.
old b	SYJA3⊡30		center	_	МЗ						position.		iei io p	aye og	ior details.
3as anif	as	3 position	Exhaust			28				sub-pla					
L L		o poolaon	center	_		20					ed withou				
For For			Pressure					* These values have been calculated according to ISO6358 and represent the flow rate measured in standard conditions at an upstream							
			center												of 0.1MPa.




#### **Dimensions/Body Ported**


#### 2 position single: SYJA3120-M3(-F)

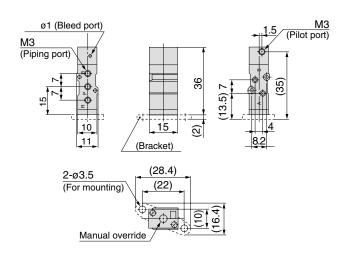

#### 2 position double: SYJA3220-M3(-F)

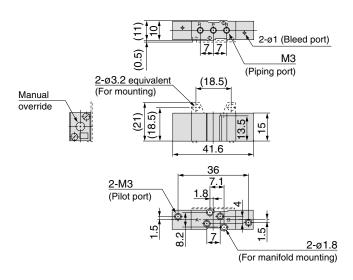


### 3 position closed center/exhaust center/pressure center SYJA3 $_{5}^{3}$ 20-M3(-F)

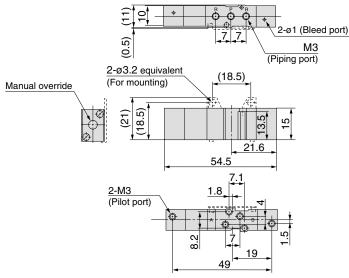


#### **Dimensions/Base Mounted**


#### 2 position single: SYJA3140-M5

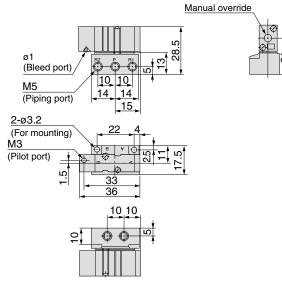

#### 2 position double: SYJA3240-M5 Manual override

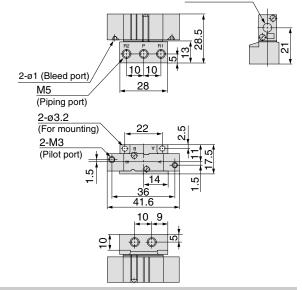


### 3 position closed center/exhaust center/pressure center SYJA3<sup>3</sup>/<sub>4</sub>40-M5 <u>Manual override</u>

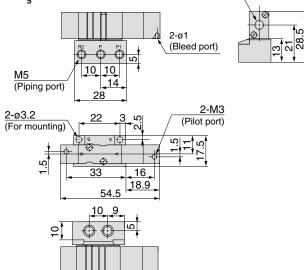

**SMC** 

# 4/5 Port Air Operated Valve Series SYJA5000

#### How to Order

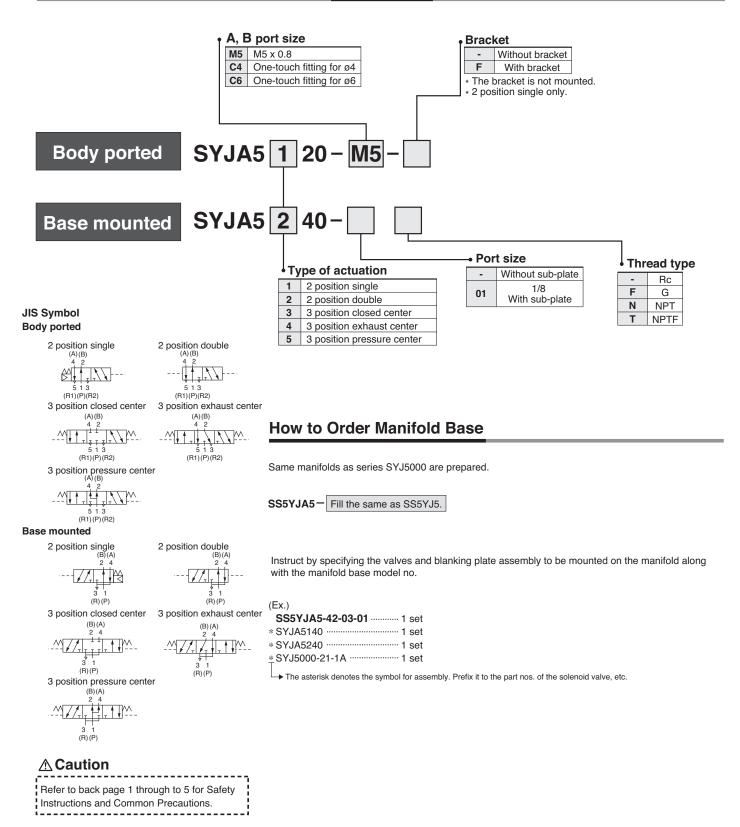

**GSMC** 

71



Base mounted



Body ported


#### Specifications

Fluid		Air			
Tidia		All			
Operating pressure range (MPa)	2 position single	0.15 to 0.7			
	2 position double	-100 kPa to 0.7			
	3 position	-100 kPa to 0.7			
Note 1) Pilot pressure range	2 position single	(0.4 x P+0.1) to 0.7 P: Operating pressure			
	2 position double	0.1 to 0.7			
(MPa)	3 position	0.15 to 0.7			
Ambient and fluid temp	perature (°C)	-10 to 60 (No freezing)			
Lubrication		Not required			
Mounting orientation		Unrestricted			
Impact/Vibration resist	ance (m/s²) Note 2)	300/50			

Note 1) In case of single type, be certain that pressure within operating pressure range be supplied to supply port, because return pressure is introduced from supply port {1(P)} for activation. Note 2) Impact resistance: No malfunction resulted from the impact test using a drop impact tester. The test was performed on the axis and right angle directions of the main valve, when pilot signal is ON and OFF. (Value in the initial state) Vibration resistance: No malfunction occurred in one sweep test between 45 and 2000 Hz.

Test was performed to axis and right angle directions of the main valve when pilot signal is ON and OFF. (Value in the initial state)

#### Pilot Pressure Range (Single pilot)

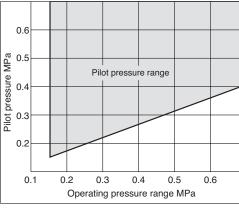

#### With Bracket

Bracket

assembly

Air operated SYJA5120-M5-F valve The mounting bracket is supplied unttached.

SYJA5000-13-13A


Mounting screws included.

#### Flow Characteristics/Weight


								Flow char	acteristic	CS Note	1)			
Valve model	Type o	of actuation	Port size	1→4/2 (P→A/B)					4/2→5/3 (A/B→EA/EB)			Pilot	Weight (g)	
				1 011 3126	C [dm <sup>3</sup> / (s·bar)]	b	Cv	Q[t/min(ANR)]*	C [dm³/ (s·bar)]	b	Cv	Q[t/min(ANR)]*	port size	
		2 position	Single Double		0.47	0.41	0.13	129	0.47	0.41	0.13	129		34 38
			Closed center	M5 x 0.8	0.49	0.44	0.13	137	0.44	0.40	0.12	120		
	SYJA5⊡20-M5	3 position	Exhaust center	WIS X 0.0	0.46	0.37	0.12	123	0.47 [0.39]		0.13 [0.10]	131 [102]		48
			Pressure center		0.49 [0.39]	0.51 [0.38]	0.14 [0.10]	145 [105]	0.45	0.42	0.12	124		
q		2 position	Single Double	A Dimenti C4	0.69	0.39	0.18	186	0.44	0.39	0.12	119		41 45
porte			Closed center	A, B port: C4 (One-touch fitting for ø4) P, R port: M5	0.69	0.40	0.19	188	0.43	0.40	0.12	117		
Body ported	SYJA5⊡20-C4	3 position	Exhaust center		0.56	0.40	0.15	152	0.41 [0.41]	0.37 [0.37]	0.10 [0.11]	109 [109]	M5 x 0.8	55
ш			Pressure center		0.57 [0.41]	0.40 [0.37]	0.15 [0.10]	155 [109]	0.41	0.37	0.10	109		
		2 position	Single Double	A, B port: C6	0.70	0.36	0.19	185	0.47	0.40	0.12	128		41 45
			Closed center	(One-touch	0.72	0.37	0.19	192	0.44	0.34	0.12	115		
	SYJA5⊡20-C6	3 position	Exhaust center	fitting for ø6) P, R port: M5	0.67	0.54	0.19	204	0.41 [0.41]		0.11 [0.11]	110 [110]	-	55
			Pressure center	INIS	0.82 [0.44]	0.41 [0.39]	0.23 [0.12]	225 [119]	0.41	0.36	0.11	108		
ed (te)		2 position	Single Double		0.79	0.21	0.19	190	0.83	0.32	0.21	214		68 (34) 72 (38)
ounte b-pla			Closed center	1/8	0.80	0.28	0.18	201	0.86	0.34	0.20	224	M5 x 0.8	
Base mounted (with sub-plate)	SYJA5⊡40-01	3 position	Exhaust center	1/0	0.71	0.26	0.18	176	1.1 [0.60]		0.26 [0.18]	270 [168]	WIJ X U.O	82(48)
(wii			Pressure center		0.99 [0.47]	0.29 [0.38]	0.24 [0.12]	250 [126]	0.72	0.38	0.18	193		

Note 1) []: denotes normal position. Note 2) (): Without sub-plate. Note 3) Model No. for 5 port base mounted style without sub-plate is SYJA5□40. \* These values have been calculated according to ISO6358 and represent the flow rate measured in standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.


#### **Dimensions/Body Ported**

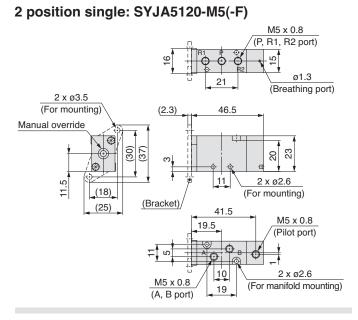

#### 2 position double: SYJA5220-M5

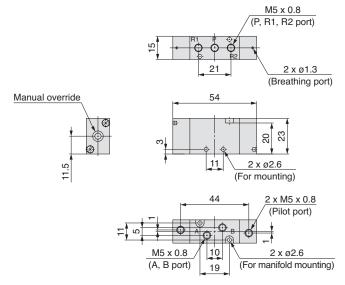



#### 3 position closed center/exhaust center/pressure center SYJA5<sup>3</sup>/<sub>4</sub>20-M5 M5 x 0.8

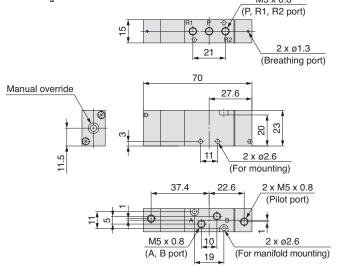


#### **Dimensions/Base Mounted**

#### 2 position single: SYJA5140-01□

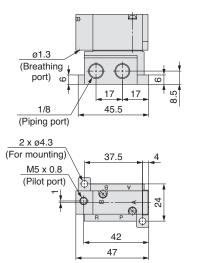

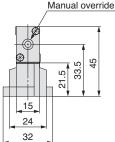

#### 2 position double: SYJA5240-01□

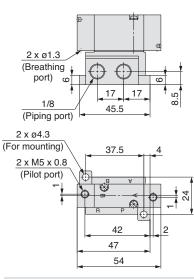





45

33.5


ŝ

5

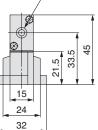

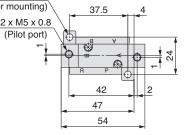


3 position closed center/exhaust center/pressure center SYJA5ᢤ40-01□ Manual override

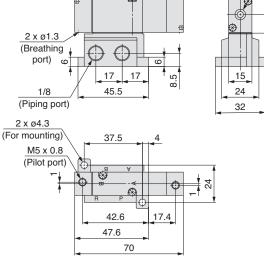

SMC

# 4/5 Port Air Operated Valve Series SYJA7000

#### How to Order

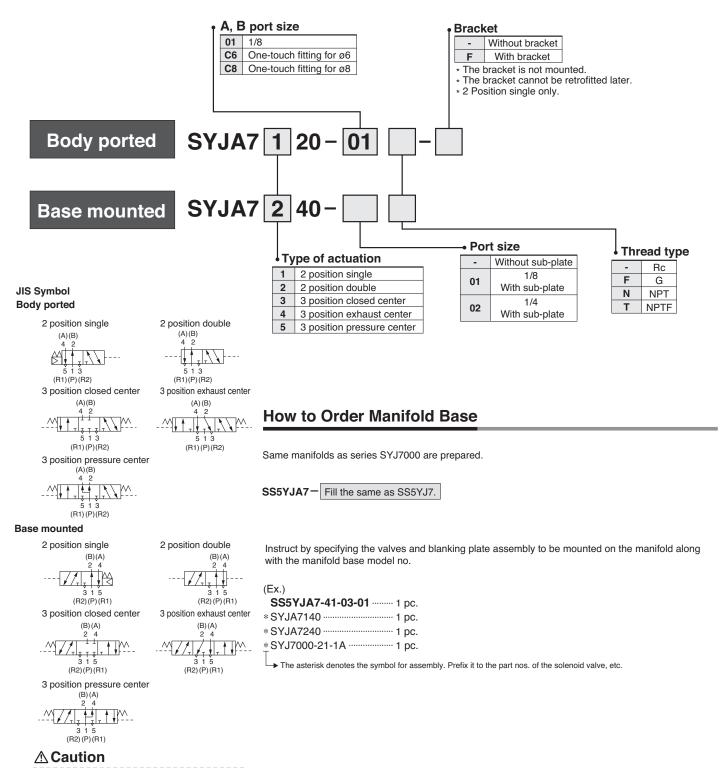

Refer to back page 1 through to 5 for Safety Instructions and Common Precautions.

#### **Specifications**

)



Base mounted



Body ported

Fluid		Air
Operating pressure range	2 position single	0.15 to 0.7
	2 position double	-100 kPa to 0.7
(MPa)	3 position	-100 kPa to 0.7
Note 1)	2 position single	(0.4 x P+0.1) to 0.7 P: Operating pressure
	2 position double	0.1 to 0.7
(MPa)	3 position	0.15 to 0.7
Ambient and fluid temp	perature (°C)	-10 to 60 (No freezing)
Lubrication		Not required
Mounting orientation		Unrestricted
Impact/Vibration resist	ance (m/s <sup>2</sup> ) Note 2)	300/50


 Note 1) In case of single type, be certain that pressure within operating pressure range be supplied to supply port, because return pressure is introduced from supply port {1(P)} for activation.

 Note 2) Impact resistance:
 No malfunction resulted from the impact test using a drop impact tester. The test was performed on the axis and right angle directions of the main valve, when pilot signal is ON and OFF. (Value in the initial state)

 Vibration resistance:
 No malfunction occurred in one sweep test between 45 and 2000 Hz.

 Test was performed to axis and right angle directions of the main valve when pilot signal is ON and OFF. (Value in the initial state)

#### Pilot Pressure Range (Single pilot)

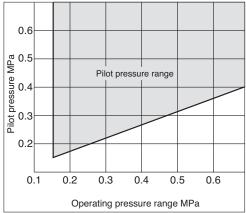

#### With Bracket

Air operated

valve

SYJA7120-01-F

As a bracket is designed for a body, be sure that a bracket is attached when ordering and operating.

#### Flow Characteristics/Weight

								Flow cha	racteris	tics Not	e 2)			Note 3)
Valve model		Type of	actuation	Port size	1→4/2 (P→A/B)			4/2-	→5/3 (/	A/B→E	A/EB)	Pilot		
		Type of actuation		FOILSIZE	C [dm <sup>3</sup> / (s•bar)]	b	Cv	Q[t/min(ANR]*	C [dm <sup>3</sup> / (s•bar)]	b		Q[t/min(ANR]*	port size	(g)
		0	Single		0.0	0.00	0.50	500	0.4	0.04	0.00	000		71
		2 position	n Double		2.2	0.36	0.58	582	2.4	0.34	0.63	626		72
			Closed		10	0.07	0.45	470		0.05	0.40	505		
			center	1/8	1.8	0.37	0.45	479	2.0	0.35	0.49	525		
	SYJA7⊡20-01	3 position	Exhaust	1/0	1.2	0.50	0.34	353	3.0	0.35	0.73	788		00
		5 position	center		1.2	0.50	0.34	353	[1.3]	[0.52]	[0.39]	[389]		02
			Pressure		3.0	0.37	0.78	799	1.8	0.37	0.45	479		
-			center		[0.83]	[0.50]	[0.25]	[244]	1.0	0.37	0.45	479		
		2 position	Single		1.6	0.33	0.4	415	2.2	0.32	0.53	567		82
	peptod SYJA7⊡20-C6	2 00311011	Double		1.0	0.55	0.4	415	2.2	0.52	0.55	507		83
b			Closed	A, B port: C6	1.4	0.27	0.35	349	1.9	0.33	0.49	493		
orte			center	(One-touch	1.4	0.27	0.00	040		0.00		400	M5 x 0.8	
β	STJA/U20-Co	3 position	Exhaust	fitting for ø6) P, R port: 1/8	1.1	0.37	0.27	293	2.5	0.32	0.61 644	644	WO X 0.0	93
Bo			center						, [1.3] [0.54] [0.38]	[395]				
			Pressure		1.8	0.36	0.45	476	1.6	0.30	0.39	407		
			center		[0.78]	[0.40]	[0.22]	[212]		0.00	0.00			
		2 position	Single		2.0	0.39	0.52	540	2.3	0.34	0.61	600		
			Double											83
			Closed	A, B port: C8	1.7	0.35	0.42	447	2.0	0.29	0.49	505		
	SYJA7⊡20-C8		center	(One-touch fitting for ø8)										
	010A/	3 position	Exhaust	P, R port: 1/8	1.2	0.38	0.33	322	2.6	0.35	0.67	683		93
			center			0.57	0.50	504	[1.3]	[0.49]	[0.38]	[379]		
			Pressure		1.9	0.57	0.59	594	1.7	0.39	0.42	459		
			center		[0.86]	[0.46]	[0.25]	[245]						
		2 position	Single		2.3	0.45	0.57	649	2.8	0.37	0.71	746		
			Double Closed											152 (72)
~			center		1.9	0.36	0.48	503	2.1	0.46	0.57	598		
late	SYJA7⊡40-01		Exhaust	1/8 Note 1)					3.4	0.36	0.86	899	M5 x 0.8	
d-d		3 position	center		1.2	0.48	0.35	347	[1.3]	[0.57]		[406]		162 (82)
ns ı			Pressure		3.3	0.43	0.78	918	[1.0]	[0.07]	[0.11]			
with			center		[0.85]		[0.25]	[259]	2.1	0.45	0.56	593		
) pe			Single								151 (71)			
unte		2 position	Double		2.3	0.41	0.61	630	2.9	0.35	0.74	762		rt size       (g)         71       72         72       82         82       83         82       83         82       83         93       82         82       83         93       93         151 (71)       152 (72)         x 0.8       162 (82)         151 (71)       152 (72)         x 0.8       151 (71)
Base mounted (with sub-plate)			Closed		<u> </u>									- ()
ase			center	Balance of the	1.9	0.46	0.50	541	2.2	0.44	0.60	616		
ä	SYJA7⊡40-02		Exhaust	1/4 Note 1)					3.7	0.27	0.87	923	M5 x 0.8	
		3 position	center		1.3	0.45	0.35	367	[1.4]	[0.56]		[434]	1	162 (82)
			Pressure		3.6	0.23	0.84	877						
			center		[0.83]	[0.55]	[0.25]	[255]	2.1	0.47	0.58	602		

Note1) P, A, B port: Rc1/8 is R1, R2 port: Rc (PT) 1/4

Note2) []: for nomal position

Ľ


Note3) (): without sub-plate

Note4) Model No. for base mounted style without sub-plate is SYJA $\square40.$ 


\* These values have been calculated according to ISO6358 and represent the flow rate measured in standard conditions at an upstream of 0.6MPa (relative pressure) and a differential pressure of 0.1MPa.




#### **Dimensions/Body Ported**

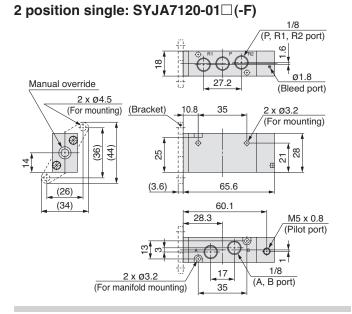


#### 2 position double: SYJA7220-01

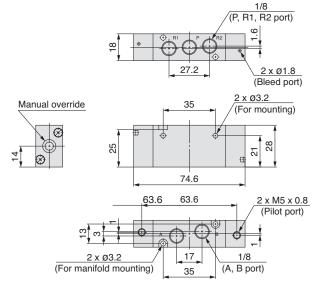


### 3 position closed center/exhaust center/pressure center SYJA7 $_{\frac{4}{5}}^{\frac{3}{4}}$ 20-01 $\Box$ $$_{1/8}$$

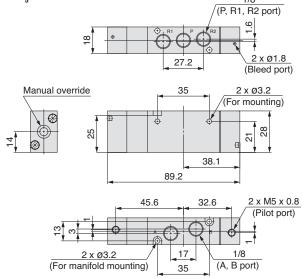


#### **Dimensions/Base Mounted**

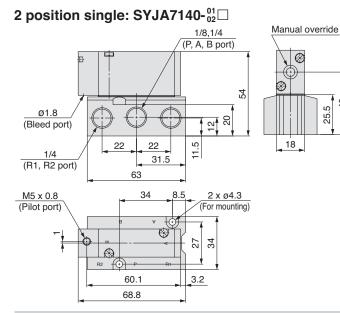

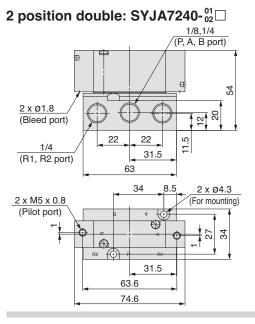


Manual override

6

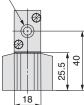

### 3 position closed center/exhaust center/pressure center SYJA7 $\frac{3}{5}$ 40- $\frac{01}{02}$

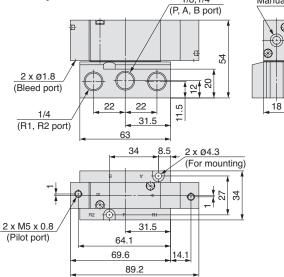




(For detailed specifications, delivery and pricing, please contact SMC.)

#### **Body Ported External Pilot**

#### Applicable solenoid valve series SYJ5 20R, SYJ7 20R

Made to Order

Series SYJ5000/7000

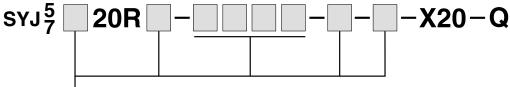

Entry is the same as standard products.


#### **Operating Pressure Range MPa**

#### **External Pilot Port** Operating pressure range -100 kPa to 0.7 Series Port size Pilot pressure range 0.15 to 0.7 SYJ5000, SYJ7000 M5

Dimensions

SYJ5000: 8 mm longer in total length. SYJ7000: 8 mm J


#### **JIS Symbol**

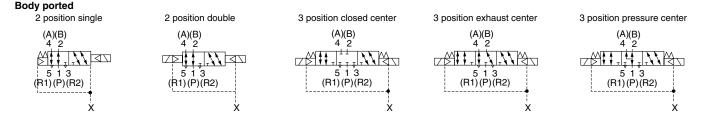


### Series SYJ5000/7000 Made to Order DIN Connector Conforming to EN-175301-803C (former DIN 43650C)

DIN connector type that conforms to the 8 mm pitch standards between DIN terminals.

#### How to Order Valve

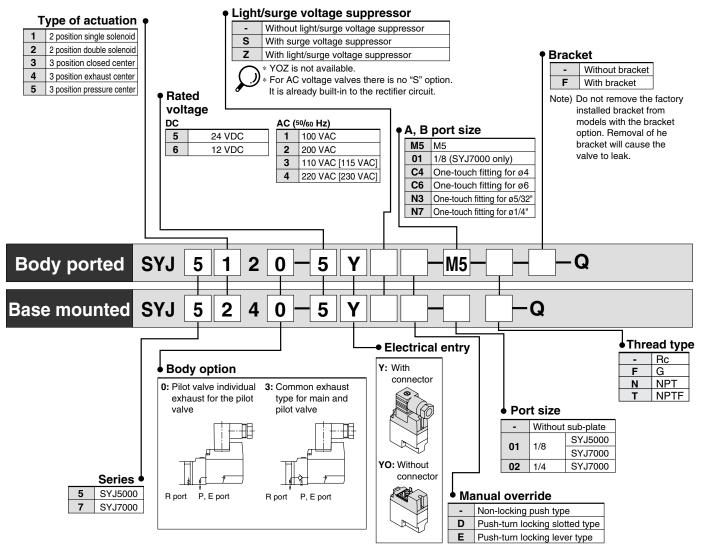

#### How to Order Pilot Valve Assembly

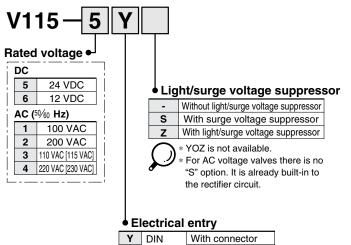

**YO** terminal Without connector

#### **DIN Connector Part No.**

Without light	SY100-82-1	
With light		
Rated voltage	Voltage symbol	No.
24 VDC	24 VN	SY100-82-3-05
12 VDC	12 VN	SY100-82-3-06
100 VAC	100 VN	SY100-82-3-01
200 VAC	200 VN	SY100-82-3-02
110 VAC (115 VAC)	110 VN	SY100-82-3-03
220 VAC (230 VAC)	220 VN	SY100-82-3-04

#### **▲** Caution

- Use caution in wiring because it won't meet the IP65 (enclosure) standard if you
  use the other cord than prescribed heavy-duty cord of size (Ø3.5 to Ø7.5). Also be
  sure to tighten the ground nut and holding screw with the prescribed torque
  range. Tighten the ground nut and set screw within the specified range of torque.
  For how to use DIN terminal (wiring procedures, procedures for changing electrical
  entries, precautions, applicable cable, circuit diagram), refer to back page 8.
- a. D type DIN connector with 9.4 mm pitch between terminals is not interchangeable.
  a. D type DIN connector with 9.4 mm pitch between terminals is not interchangeable.
  b. DIN connector except D type has the "N" indication in the end of voltage symbol. In case of DIN connector without light, "N" is not indicated. Please refer to the name plate to distinguish.

4. Dimensions are completely the same as D type connector.


5. When exchanging the pilot valve assembly only, "V115-□D" is interchangeable with "V115-□Y". Do not replace V114 (G, H, L, M, W) to V115-□D/□Y (DIN terminal), and vice versa.




### Series SYJ3000/5000/7000 Made to Order M8 Connector Conforming to IEC60947-5-2

M8 Connector type conforming to IEC60947-5-2 standard.

#### How to Order Valve

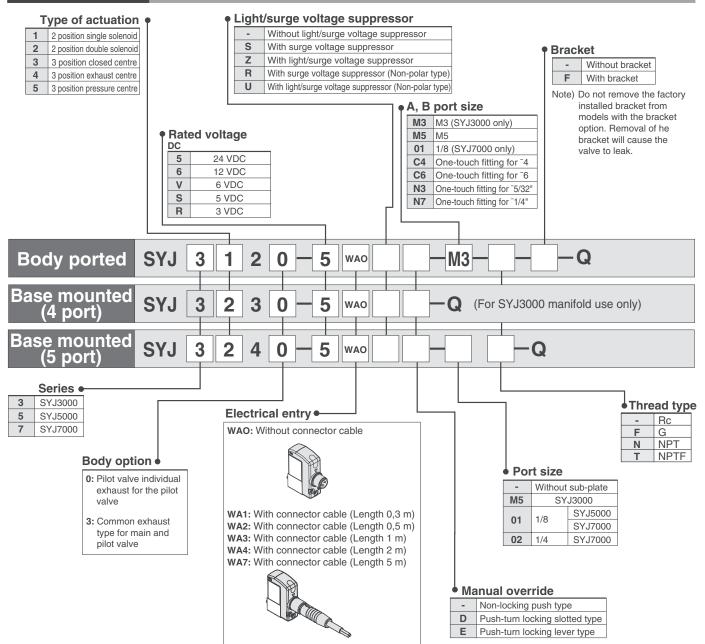


#### How to Order Pilot Valve Assembly

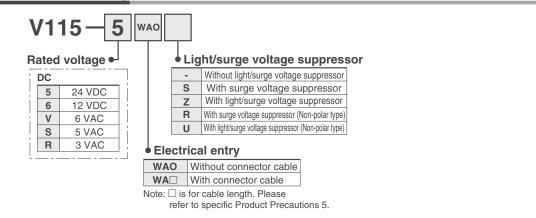



## Series SYJ Safety Instructions

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by labels of **"Caution", "Warning"** or **"Danger"**. To ensure safety, be sure to observe ISO 4414 <sup>Note 1)</sup>, JIS B 8370 <sup>Note 2)</sup> and other safety practices.

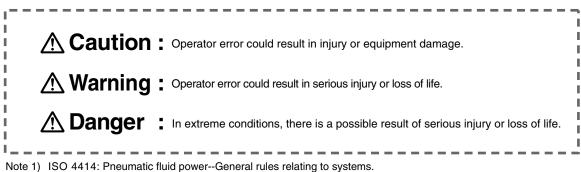

Note 2) JIS B 8370: General Rules for Pneumatic Equipment

### **Warning**

1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or after analysis and/or tests to meet your specific requirements. The expected performance and safety assurance will be the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalogue information with a view to giving due consideration to any possibility of equipment failure when configuring a system.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if an operator is unfamiliar with it. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

- 3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.
  - 1. Inspection and maintenance of machinery/equipment should only be performed once measures to prevent falling or runaway of the driver objects have been confirmed.
  - 2. When equipment is to be removed, confirm the safety process as mentioned above. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
  - 3. Before machinery/equipment is restarted, take measures to prevent shooting-out of cylinder piston rod, etc.
- 4. Contact SMC if the product is to be used in any of the following conditions:
  - 1. Conditions and environments beyond the given specifications, or if product is used outdoors.
  - 2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuits in press applications, or safety equipment.
  - 3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.





Be sure to read before handling.

#### Design

### **A Warning**

#### 1. Actuator drive

When an actuator, such as a cylinder, is to be driven using a valve, take appropriate measures to prevent potential danger caused by actuator operation.

#### 2. Intermediate stopping

When a 3 position closed center valve is used to stop a cylinder at an intermediate position, accurate stopping of the piston in a predetermined position is not possible due to the compressibility of air. Furthermore, since valves and cylinders are not guaranteed for zero air leakage, it may not be possible to hold a stopped position for an extended length of time. Contact SMC if it is necessary to hold a stopped position for an extended time.

### 3. Effect of back pressure when using a manifold

Use caution when valves are used on a manifold, as actuator malfunction due to back-pressure may occur. In case of 3 position closed exhaust center valve or single acting cylinder, take appropriate measures to prevent the malfunction using with individual EXH interface assembly or individual exhaust manifold.

#### 4. Holding of pressure (including vacuum)

Since valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum) in a pressure vessel.

### 5. Cannot be used as an emergency shut off valve, etc.

The valves presented in this catalogue are not designed for safety applications such as an emergency shut off valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

#### 6. Maintenance space

The installation should allow sufficient space for maintenance activities (removal of valve, etc.).

#### 7. Release of residual pressure

Provide a residual pressure release function for maintenance purpose. Especially in case of 3 position closed center valve, ensure the release of residual pressure between valve and cylinder.

#### 8. Vacuum applications

When a valve is used for vacuum switching, etc., take measures against the suction of external dust or other contaminants from vacuum pads and exhaust ports, etc. Moreover, an external pilot type valve should be used in this case. Contact SMC in case of an internal pilot type or air operated valve, etc.

#### 9. About using the double solenoid type

When using the double solenoid type for the first time, actuators may travel in an unexpected direction depending on the switching position of a valve. Implement countermeasures not to occur any danger by the actuator's operation.

#### 10. Ventilation

When a valve is used inside a sealed control panel, etc., provide ventilation to prevent a pressure increase caused by exhausted air inside the control panel or temperature rise caused by the heat generated by the valve.

#### Selection

### \land Warning

#### 1. Confirm the specification

The products presented in this catalogue are designed only for use in compressed air systems (including vacuum). Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to specifications.)

Contact SMC when using a fluid other than compressed air (including vacuum).

#### 2. Extended periods of continuous energisation

- Continuous energisation of the valve for extended periods of time may have an adverse effect on the solenoid valve performance and the peripheral equipment due to temperature rises caused by the heat generation of the coil. Consult with SMC if valves will be continuously energised for extended periods of time or the energised period per day will be longer than the de-energised period. It is also possible to shorten the energisation period by using valves of the N.O. (normally open) type.
- When solenoid valves are mounted in a control panel, employ measures to radiate excess heat, so that temperatures remain within the valve specification range. Use special caution when three or more stations sequentially aligned on the manifold are continuously energised since this will cause a drastic temperature rise.

(As for AC specifications, since the applicable products are ready to provide separately, contact SMC.)


### A Caution

#### 1. Momentary energisation

If a double solenoid valve will be operated with momentary energisation, it should be energised for at least 0.1 second. However, depending on the secondary load conditions, it should be energised until the cylinder reaches the stroke end position, as there is a possibility of malfunction otherwise.

#### 2. Leakage voltage

When using a resistor in parallel with the switching element or using a C-R element (surge voltage suppressor) for protection of the switching element, note that leakage voltage will

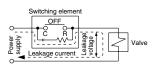

increase due to leakage current flowing through the resistor or C-R element. Limit the amount of residual leakage voltage to the following value:

With DC coil : 3% or less of rated voltage

With AC coil : 8% or less of rated voltage





Be sure to read before handling.

#### Selection

### **A**Caution

### 3. Solenoid valve drive for AC with solid state output (SSR, TRIAC output, etc.)

1) Current leakage

When using a snubber circuit (C-R element) for surge protection of the output element, a very small electric current will still continue to flow in spite of the OFF state. This results in the valve not returning. In the cases when exceeding the tolerance as shown above, take measures to install a bleeder resistor.

2) Minimum load allowable amount (Min. load current) When the consumption current of a valve is less than the output element's minimum load allowable volume or the margin is small, the output element may not be switched normally. Please confirm SMC.

#### 4. Surge voltage suppressor

If a surge protection circuit contains non-ordinary diodes such as Varistor, a residual voltage that is in proportion to the protective elements and the rated voltage will remain. Therefore, give consideration to surge voltage protection of the controller. In the case of diodes, the residual voltage is approximately 1 V.

#### 5. Use in low temperature environments

Unless otherwise indicated in the specifications for each valve, operation is possible to -10 YC, but appropriate measures should be taken to avoid solidification or freezing of drainage and moisture, etc.

#### 6. Operation for air blowing

When using a solenoid valve for air blow, use an external pilot type.

Take note that when internal pilots and external pilots are used on the same manifold, the pressure drop caused by the air blowing can have an effect on the internal pilot type valves.

Moreover, when compressed air within the pressure range of the established specifications is supplied to the external pilot port, and a double solenoid valve is used for air blowing, the solenoids should normally be energised when air is being blown.

#### 7. Mounting orientation

Rubber seal: Refer to the specifications of each series.

#### Mounting

### **M** Warning

### 1. If air leakage increases or equipment does not operate properly, stop operation.

Check mounting conditions when air and power supplies are connected. Initial function and leakage tests should be performed after installation.

#### 2. Instruction manual

Mount and operate the product after reading the manual carefully and understanding its contents.

Also keep the manual where it can be referred to as necessary.

#### 3. Painting and coating

Warnings or specifications printed or pasted on the product should not be erased, removed or covered up. Consult with SMC if paint is to be applied to resinous parts, as this may have an adverse effect due to the paint solvent.

#### **Port Direction**

### **▲**Caution

#### **1. Preparation before piping**

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

#### 2. Wrapping of sealant tape

When connecting pipes and fittings, etc., be sure that chips from the pipe thread and sealing materials do not get inside the valve. Furthermore, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



#### 3. Closed center valves

When using closed center type valves, carefully check to ascertain that there is no air leakage from the piping between the valves and cylinders.

#### 4. Screwing in fittings

When connecting fittings to valves, tighten as indicated below.

1) For M3 and M5 type

- (1) When using SMC fittings, follow the guidelines below. After tightening by hand, tighten an additional M3: 1/4, M5: 1/6 turn with a tightening tool. However, if miniature fittings are used, tighten an additional 1/4 turn with a tightening tool after tightening by hand. For fittings with gaskets in 2 locations, e.g., universal elbow or universal tee, tighten an additional 1/2 turn.
- Note) If fittings are over-tightened, air leakage may result due to breaking of fitting threads or deformation of the gaskets. However, if fittings are not tightened sufficiently, loosening of the threads and air leakage and may occur.
- (2) When fittings other than SMC fittings are used, follow the instructions of the respective fitting manufacturer.

#### 2) For Rc (PT)

When installing fitting, etc., follow the given torque levels below.

#### **Tightening Torque for Piping**

Connection	threads	Applicable tightening torque N·m
1/8		7 to 9
1/4		12 to 14
3/8		22 to 24
1/2		28 to 30
3/4		28 to 30
1		36 to 38
11/4		40 to 42
11/2		48 to 50
2		48 to 50

#### 5. Connection of piping to products

When connecting piping to a product, refer to its instruction manual to avoid mistakes regarding the supply port, etc.





Be sure to read before handling.

#### Wiring

### **Caution**

#### 1. Polarity

When connecting power to a DC specification solenoid valve equipped with (indicator light) surge voltage suppressor, confirm whether or not there is polarity.

If there is polarity, take note of the following points.

Without built-in diode to protect polarity (including any power saving circuit):

If a mistake is made regarding polarity, the diode in the valve, the control device switching element or power supply equipment, etc., may burn out.

With diode to protect polarity:

If a mistake is made regarding polarity, it will not be possible to switch the valve.

#### 2. Applied voltage

When electric power is connected to a solenoid valve, be careful to apply the proper voltage. Improper voltage may cause malfunction or coil damage.

#### 3. Confirm the connections.

After completing the wiring, confirm that the connections are correct.

#### Lubrication

### **A** Caution

#### 1. Lubrication

- [Rubber seal]
- 1) The valve has been lubricated for life at the factory, and does not require any further lubrication.
- 2) In the event that it is lubricated, use class 1 turbine oil (without additives), ISO VG32.

However, once lubrication is applied it must be continued, as loss of the original lubricant may lead to malfunction. Contact SMC regarding class 2 turbine oil (with additives), ISO VG32.

#### Air Supply

### **Warning**

#### 1. Use clean air.

Do not use compressed air which contains chemicals, synthetic oils containing organic solvents, salts or corrosive gases, etc., as this can cause damage or malfunction.

#### **Air Supply**

### 

#### 1. Install air filters.

Install air filters close to valves at their upstream side. A filtration degree of 5  $\,$  m or less should be selected.

2. Install an air dryer, after cooler or Drain Catch (water separator), etc.

Air that includes excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an air dryer, after-cooler or Drain Catch (water separator), etc.

3. If excessive carbon dust is generated, eliminate it by installing mist separators at the upstream side of valves.

If excessive carbon dust is generated by the compressor, it may adhere to the inside of valves and cause malfunction.

Refer to "SMC Best Pneumatics" catalogue for compressed air quality.

#### **Operating Environment**

#### **Warning**

- 1. Do not use valves in atmospheres of corrosive gases, chemicals, salt water, water or steam or where there is direct contact with any of these.
- 2. Products with IP65 enclosures (based on IEC60529) are protected against dust and water, however, these products cannot be used in water.

Take measures to prevent water and dust from coming from the exhaust port.

- 3. Products compliant to IP65 satisfy the specifications by mounting each product properly. Be sure to read the Specific Product Precautions for each product.
- 4. Do not use in an explosive atmosphere.
- 5. Do not use in locations subject to vibration or impact. Confirm the specifications in the main section of the catalogue.
- 6. A protective cover, etc., should be used to shield valves from direct sunlight.
- 7. Shield valves from radiated heat generated by nearby heat sources.
- 8. Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.
- 9. When solenoid valves are mounted in a control panel or are energised for extended periods of time, employ measures to radiate excess heat, so that temperatures remain within the valve specification range.



Be sure to read before handling.

#### Maintenance

### **Warning**

### 1. Perform maintenance procedures as shown in the instruction manual.

If handled improperly, malfunction or damage of machinery or equipment may occur.

#### 2. Equipment removal and supply/exhaust of compressed air

When equipment is removed, first confirm that measures are in place to prevent dropping of work pieces and run-away of equipment, etc. Then cut the supply pressure and power, and exhaust all compressed air from the system using its residual pressure release function.

In the case of 3 position closed center style, exhaust the residual pressure between valve and cylinder.

When the equipment is to be started again after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators, etc., and then confirm that the equipment is operating normally.

#### 3. Low frequency operation

Valves should be switched at least once every 30 days to prevent malfunction. (Use caution regarding the air supply.)

#### 4. Manual override operation

When the manual override is operated, connected equipment will be actuated. Confirm safety before operating.

### **A** Caution

#### 1. Drain flushing

Remove drainage from air filters regularly.



Be sure to read before handling.

Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

#### **Manual Override Operation**

### 

When the manual override is operated, connected equipment will be actuated. Confirm safety before operating.


#### Non-locking push type [Standard]


Press in the direction of the arrow



#### Push-turn locking slotted type [Type D]

While pressing, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the

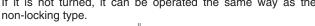

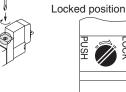


#### **Caution**

When operating the locking type D with a screw driver, turn it gently using a watchmakers screw driver. [Torque: Less than 0.1  $N \cdot m$ ]

#### Push-turn locking lever type [Type E]

While pressing, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the non-locking type.

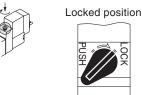

#### **A** Caution

When locking the manual override on the push-turn locking types (D, E), be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and trouble such as air leakage, etc.

#### **Output Port**

### **A** Caution

For the SYJ series, due to the main valve construction, as air is output to the output port on the side opposite of where the energized pilot valve and manual override are located, be careful when using double solenoid or 3-position valves. Check the symbol for details.

#### Solenoid Valve for 200 V, 220 VAC Specifications

### 

Solenoid valves with DIN terminal connector AC specifications have a built-in rectifier circuit in the pilot section to operate the DC coil.

With 200 V, 220 VAC specification pilot valves, this built-in rectifier generates heat when energised. The surface may become hot depending on the energised condition; therefore, do not touch the solenoid valves.

#### Common Exhaust Type for Main and Pilot Valve

### **∧**Caution

Pilot air is exhausted through the main valve body rather than directly to atmosphere.

- Suitable for applications where exhausting the pilot valve to atmosphere would be detrimental to the surrounding working environment.
- For use in extremely dirty environments where there is the possibility that dust could enter the pilot exhaust and damage the valve.

Ensure that the piping of exhaust air is not too restrictive.

#### Series SYJ3000/5000/7000 Mixed Installation of 3 Port and 5 Port Valves on Same Manifold.


### **≜**Caution

Series SYJ3000/5000/7000 and Series SYJ300/500/700 can be mounted on the same manifold. How to mount on the same manifold is shown on the following pages.

SYJ3000, SYJ300	P. 14
SYJ5000, SYJ500	P. 38
SYJ7000, SYJ700	P. 61

If 4 or 5 port valve is used as a 3 port valve

Series SYJ3000, 5000, 7000 may be used as a N.C.or N.O. 3 port valve by plugging one of the A,B ports. Be sure not to plug the exhaust ports (R). Can be used when a double solenoid, 3 port valve is required.

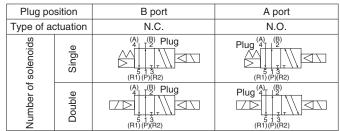

(JIS symbols above: Series SYJ5000)





Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

#### How to Use Plug Connector

### A Caution

#### 1. Attaching and detaching connectors

- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

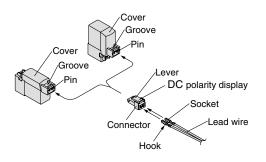


#### 2. Crimping of lead wires and sockets

Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of the core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area.

Use an exclusive crimping tool for crimping. (Contact SMC for special crimping tools.)

Core wire crimping area / Crimping area

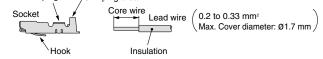


### 3. Attaching and detaching sockets with lead wires

#### Attaching

Insert the sockets into the square holes of the connector (+, - indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then confirm that they are locked by pulling lightly on the lead wires.

#### Detaching


To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.

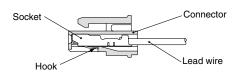

#### Plug Connector Lead Wire Length

### ▲ Caution

Standard length is 300 mm, but the following lengths are also available.

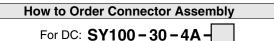

For DC. 31100-30-4A

 Lead wire length

#### How to Order


Include the connector assembly part number together with the part number for the plug connector's solenoid valve without connector.

(with connector and 2 of sockets only)

Without lead wire: SY100-30-A

Ex.) In case of 2000 mm of lead wire  $\ensuremath{\textbf{For DC}}$ 


SYJ3120-5LO-M3 SY100-30-4A-20

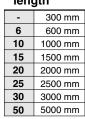



Be sure to read before handling.

Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

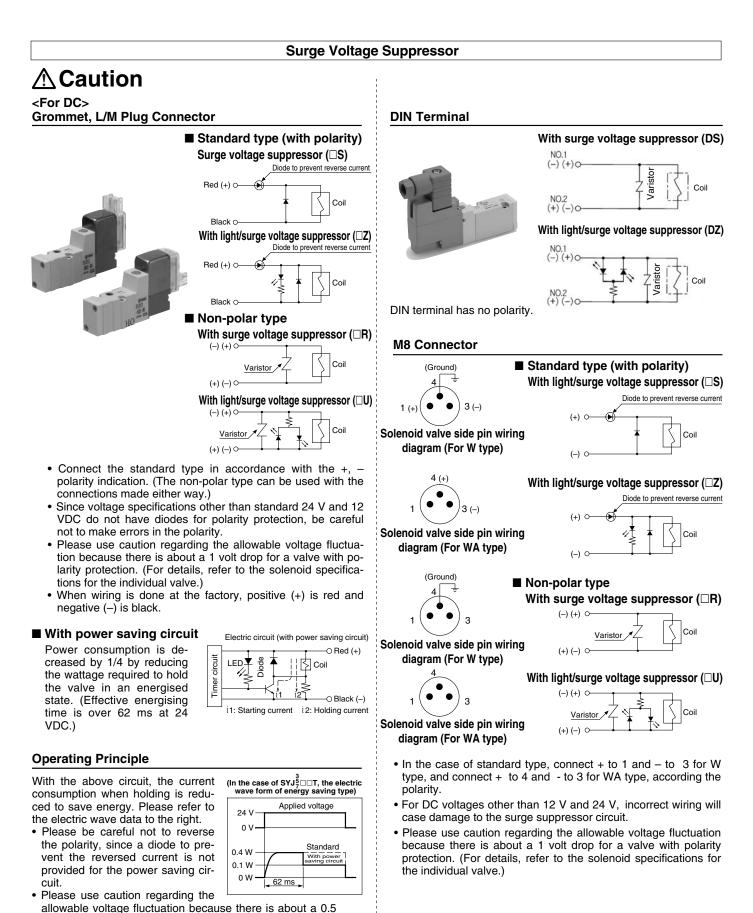

volt drop due to the transistor. (For details, refer to the so-

lenoid specifications for the individual valve.)



Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

#### Surge Voltage Suppressor

#### <For AC>

(There is no "S" type because the generation of surge voltage is prevented by a rectifier.)

#### **DIN Terminal**

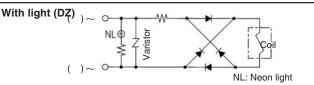

Note) Surge voltage suppressor of varistor has residual voltage corresponding to the protective element and rated voltage; therefore, protect the controller side from the surge. The residual voltage of the diode is approximately 1 V.

How to Use DIN Terminal

### ▲ Caution

#### Connection

- 1. Loosen the holding screw and pull the connector out of the solenoid valve terminal block.
- After removing the holding screw, insert a flat head 2 screwdriver, etc. into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- 3. Loosen the terminal screws (slotted screws) on the terminal block, insert the cores of the lead wires into the terminals according to the connection method, and fasten them securely with the terminal screws.

#### **▲** Caution

When making connections, take note that using other than the supported size (ø3.5 to ø7) heavy duty cord will not satisfy IP65 (enclosure) standards. Also, be sure to tighten the ground nut and holding screw within their specified torque ranges.

### Caution

#### Changing the entry direction

After separating the terminal block and housing, the cord entry can be changed by attaching the housing in the desired direction (4 directions at 90 intervals).

\* When equipped with a light, be careful not to damage the light with the cord's lead wires.


#### Precautions

Plug in and pull out the connector vertically without tilting to one side.

#### **Compatible cable**

#### Cord O.D.: ø3.5 to ø7

(Reference) 0.5 mm<sup>2</sup>, 2-core or 3-core, equivalent to JIS C 3306

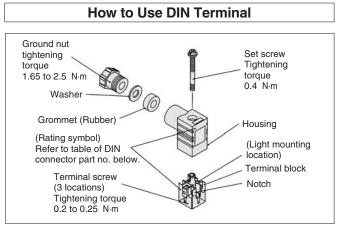

#### Type "Y"

DIN connector type Y is a DIN connector that confirms to the DIN pitch 8-mm standard.

- D type DIN connector with 9.4 mm pitch between terminals is not interchangeable.
  To distinguish from the D type DIN connector, "N" is listed at the end of voltage symbol. (For connector parts without lights, "N" is not indicated. Please refer to the name plate to distinguish.)
- Dimensions are completely the same as D type DIN connector.
  When exchanging the pilot valve assembly only, "V115-DD" is interchangeable with "V115-DY". Do not replace V111 (G, L, M) to V115-DD/DY (DIN terminal), and vice versa.

#### **DIN Connector Part No.**

### A Caution


#### <Type D>

Without light	SY100-61-1				
With light					
Rated voltage	Voltage symbol	Part no.			
24 VDC	24V	SY100-61-3-05			
12 VDC	12V	SY100-61-3-06			
100 VAC	100V	SY100-61-2-01			
200 VAC	200V	SY100-61-2-02			
110 VAC	110V	SY100-61-2-03			
220 VAC	220V	SY100-61-2-04			

#### <Type Y>

SY100-82-1					
Voltage symbol	Part no.				
24VN	SY100-82-3-05				
12VN	SY100-82-3-06				
100VN	SY100-82-2-01				
200VN	SY100-82-2-02				
110VN	SY100-82-2-03				
220VN	SY100-82-2-04				
	Voltage symbol 24VN 12VN 100VN 200VN 110VN				

#### **Circuit Diagram with Light**

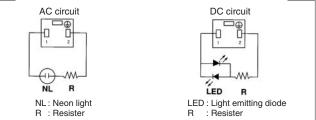

Note) Refer to page 80 for DIN connector (Y) conforming to EN-175301-803C (former DIN 43650C)





Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

#### **Connector Assembly with Cover**


### A Caution

- Connector assembly with dust proof protective cover.
- Effective to prevention of short circuit failure due to the entry of foreign matter into the connector.
- Chloroprene rubber for electrical use, which provides outstanding weather resistance and electrical insulation, is used for the cover material. However, do not allow contact with cutting oil, etc.
- Simple and unencumbered appearance by adopting round-shaped cord.

#### How to Order

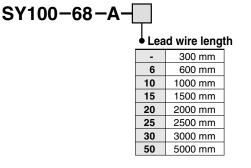

#### **Connector Assembly with Cover: Dimensions**

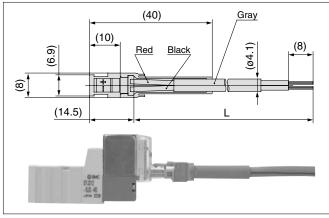

#### How to Order

Enter the part number for a plug connector solenoid valve without connector together with the part number for a connector assembly with cover.

- Ex. 1) Lead wire length of 2000 mm SYJ3120-5LOZ-M3-Q SY100-68-A-20
- Ex. 2) Lead wire length of 300 mm (standard) SYJ3120-5LPZ-M3-Q

Symbol for connector assembly with cover

\* In this case, the part number for the connector assembly with cover is not required.

#### M8 Connector

### **▲** Caution

1. M8 connector types have an IP65 (enclosure) rating, offering protection from dust and water. However please note: these products are not intended for use in water.

Select a SMC connector cable (V100-49-1-□) or a FA sensor type connector, with M8 threaded 3 pin specifications conforming to Nippon Electric Control Equipment Association Standard, NECA4202 (IEC60947-5-2). Make sure the connector O.D. is 10.5 mm or less when used with the Series SYJ3000 manifold. If more than 10.5 mm, it cannot be mounted due to the size.

- 2. Do not use a tool to mount the connector, as this may cause damage. Only tighten by hand. (0.4 to 0.6 Nm)
- 3. The excessive stress on the cable connector will not be able to satisfy the IP65 rating. Please use caution and do not apply a stress of 30 N or greater.

#### **▲** Caution

Failure to meet IP65 performance may result if using alternative connectors than those shown above, or when insufficiently tightened.

Connector cable mounting




Note) Connector cable should be mounted in the correct direction. Make sure that the arrow symbol on the connector is facing the triangle symbol on the valve when using SMC connector cable (V100-49-1-□). Be careful not to squeeze it in the wrong direction, as problems such as pin damage may occur.

#### Connector cable

• M8 connector cable for M8 can be ordered as follows:

#### How to Order


 To order solenoid valve and connector cable at the same time. (Connector cable will be included in the shipment of the solenoid valve.)

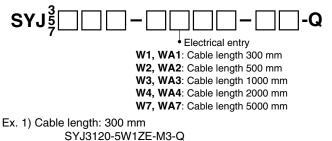



Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

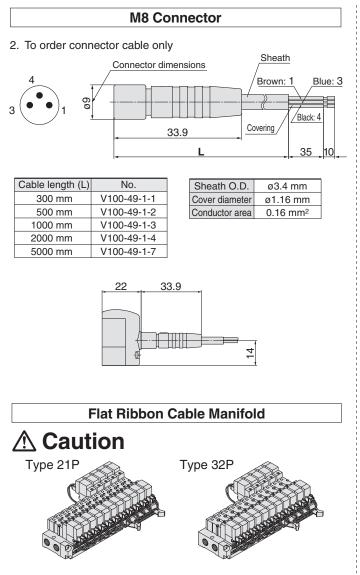

- In the manifold valves, the wiring to the individual valves is provided on a printed circuit board, and the connection to the external wires is consolidated through the use of a flat cable.
- A single MIL flat cable connects the entire manifold to your power source. This greatly reduces installation time.

#### Flat Ribbon Cable Manifold

#### **Manifold Internal Wiring**

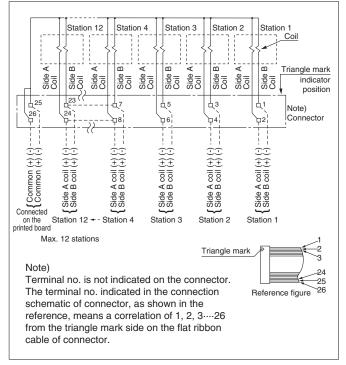

- For more than 10 stations, both poles of the common should be wired.
- For single solenoid, connect to the solenoid B side.
- The maximum number of stations that can be accommodated is 12. For more stations, contact SMC.
- •Only non-polar valves are available for the DC flat cable manifold, therefore negative COM or positive COM wiring of the manifold is possible. The valve does not switch with negative COM if a Z type is used. Be sure to use a positive COM.

#### **Bracket**

### A Caution

For bracket attached styles of SYJ3000 (Single) and SYJ7000, do not use it without bracket.

#### **Replacement of Pilot Valve**

### A Caution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

Model	Thread size	Tightening torque
SYJ3000	M1.7	0.12 N·m
SYJ5000	M2.5	0.45 N·m
SYJ7000	M3	0.8 N·m




Be sure to read before handling.


Refer to back page 1 through to 5 for Safety Instruction and Common Precautions.

#### **Replacement of Pilot Valve**

### **A**Caution

Pilot valves in this series are improved to provide excellent energy saving results. However following this improvement, these new valves are no longer compatible with the conventional pilot valve used at the interface. Consult with SMC when you need to exchange these pilot valves, in the case of manual override (marked in orange) of the adapter plate.

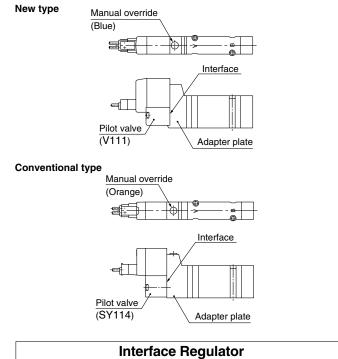

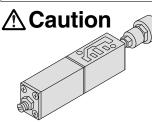

Spacer type regulating valve on manifold block can regulate the pressure to the valve individually.

#### Specifications


Interface regulator	ARBYJ5000	ARBYJ7000		
Applicable solenoid valve mode	SYJ5000	SYJ7000		
Regulating port		P P		
Proof pressure		1.5	MPa	
Maximum operating pressure	1.0 1	1.0 MPa		
Set pressure range	0.05 to 0.7 MPa Note 1)			
Ambient and fluid temperature		-5 to 60YC (No freezing) Note 2)		
Thread size for connection of pressu	ire gauge	M5		
Weight (kg)		0.06	0.09	
Effective area at exhaust Note 3)	P→A	1.9	5.1	
side (mm²) S at P1 = 0.7 MPa, P2 = 0.5 MPa	P→B	2.1	5.8	
Effective area at supply Note 3)	A→EA	4.5	12.6	
side (mm <sup>2</sup> ) S at P <sub>1</sub> = 0.7 MPa, P <sub>2</sub> = 0.5 MPa	B→EB	4.5	12.6	


#### Interface Regulator

- Note 1) Set the pressure within the operating pressure range of the solenoid valve.
- Note 2) The maximum operating temperature for the solenoid valve is 50 °C.
- Note 3) The effective area listed is for a single solenoid 2 position valve mounted on a sub-plate.
- Note 4) Apply pressure from P port in the base for interface regulator.

#### **Flow Characteristics**

 $(P \rightarrow A)$  Condition: Inlet pressure 0.7 MPa

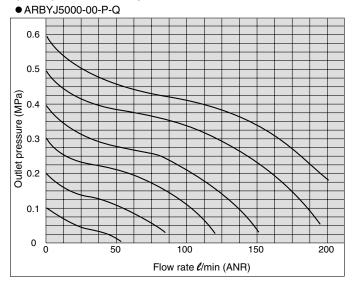

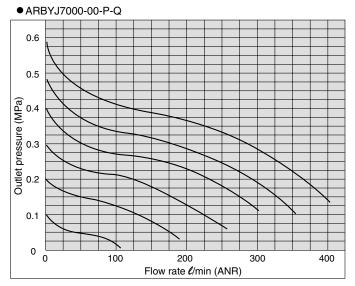

#### ▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of **"Caution," "Warning"** or **"Danger."** They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) <sup>1</sup>), and other safety regulations.

<u>∧</u> Caution:	<b>Caution</b> indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.	1)
<u>∧</u> Warning:	<b>Warning</b> indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.	
<u>∧</u> Danger:	<b>Danger</b> indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.	

### ▲ Warning

- 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.
- 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

### ▲ Caution

**1. The product is provided for use in manufacturing industries.** The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

1) ISO 4414: Pneumatic fluid power – General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety. etc.

#### Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".Read and accept them before using the product.

#### Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. <sup>2</sup>) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

#### ▲ Caution

### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

▲ Safety Instructions

#### **SMC Corporation (Europe)**

Austria Belgium +32 (0)33551464 Bulgaria +359 (0)2807670 Croatia +385 (0)13707288 Czech Republic +420 541424611 Denmark +45 70252900 Estonia +372 651 0370 Finland +358 207513513 France Germany +49 (0)61034020 +30 210 2717265 Greece Hungary +36 23513000 Ireland +353 (0)14039000 Italv +39 03990691 Latvia +371 67817700

+43 (0)2262622800 www.smc.at www.smc.be www.smc.bg www.smc.hr www.smc.cz www.smcdk.com www.smcee.ee www.smc.fi +33 (0)164761000 www.smc-france.fr www.smc.de www.smchellas.gr www.smc.hu www.smcautomation.ie www.smcitalia.it www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com info@smcee.ee smcfi@smc.fi supportclient@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu sales@smcautomation.ie mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 Netherlands +31 (0)205318888 Norway +47 67129020 +48 222119600 Poland +351 214724500 Portugal Romania +40 213205111 Russia +7 (812)3036600 Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 Spain +34 945184100 Sweden +46 (0)86031240 Switzerland +41 (0)523963131 Turkey +90 212 489 0 440 UK +44 (0)845 121 5122 www.smc.uk

www.smclt.lt www.smc.nl www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc.eu www.smc.si www.smc.eu www.smc.nu www.smc.ch www.smcturkey.com.tr

info@smclt.lt info@smc.nl post@smc-norge.no office@smc.pl apoioclientept@smc.smces.es smcromania@smcromania.ro sales@smcru.com office@smc.sk office@smc.si post@smc.smces.es smc@smc nu info@smc.ch info@smcturkey.com.tr sales@smc.uk

South Africa +27 10 900 1233 www.smcza.co.za zasales@smcza.co.za